


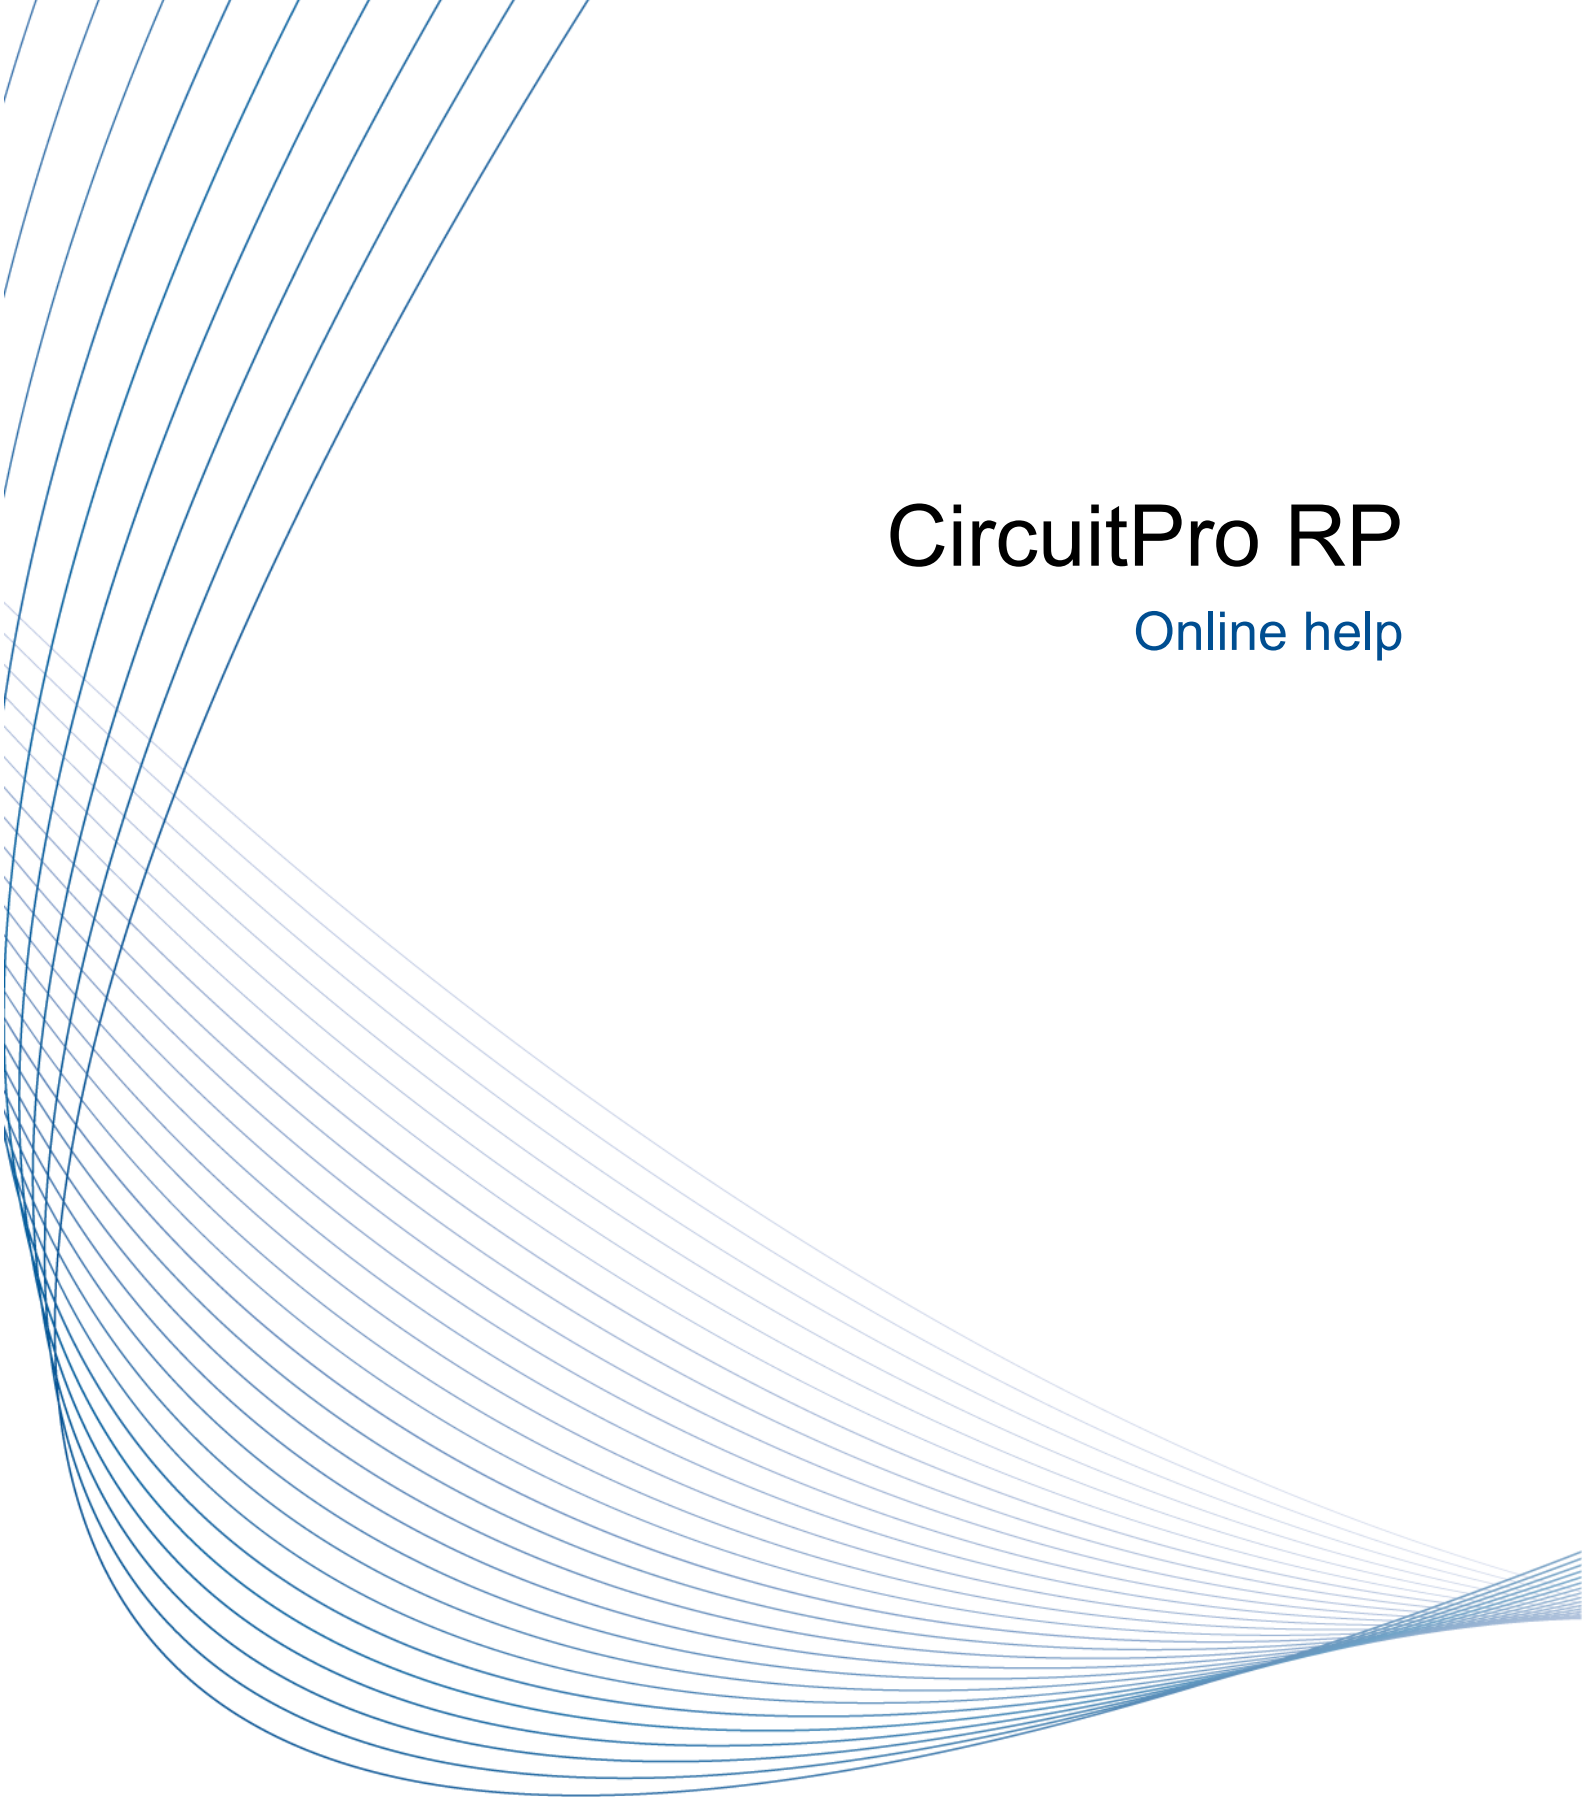

CircuitPro RP

[Online help](#)

Version: 1.0

Publisher LPKF Laser & Electronics SE
Osteriede 7
30827 Garbsen
Germany

Phone: +49 5131-7095-0

Fax: +49 5131-7095-90

Email: info@lpkf.com

Date of issue 03.03.2023

Copyright © 2023 LPKF Laser & Electronics SE

This document and its contents in whole and in parts are subject to copyright. The reproduction, translation or duplication of the contents as photocopy or any digital form requires written permission of LPKF Laser & Electronics SE.

Translation of the German original document

Contents

1	User interface.....	10
1.1	Menu bar and toolbar	11
1.2	Pane <i>Workflow setup</i>	12
1.2.1	Material composition	13
1.2.2	Layout.....	14
1.2.3	Scan fields.....	17
1.2.4	Tools.....	18
1.2.5	Workflow	19
1.2.6	Toolpaths	20
1.2.7	Processing	20
1.3	Toolbar <i>View</i>	21
1.3.1	Selection	22
1.3.2	Pan	23
1.3.3	Zoom area	23
1.3.4	Fit all.....	24
1.3.5	Polygonal selection	24
1.3.6	Show grid	25
1.3.7	Snap to grid	25
1.3.8	Snap to object	26
1.3.9	Snap to angle	26
1.4	Pane <i>Navigation</i>	26
1.5	Pane Properties	26
1.6	Pane <i>Fault monitor</i>	27
1.7	Pane <i>Messages</i>	28
2	User guidance steps.....	29
2.1	New	30
2.2	Material	31
2.3	Import	32
2.4	Layout	40
2.4.1	Flash.....	42
2.4.2	Path	43
2.4.3	Polygon	43
2.4.4	Rectangle	44
2.4.5	Rectangle path	44
2.4.6	Circle by diameter	45
2.4.7	Circle by points.....	45
2.4.8	Circle path by diameter	46
2.4.9	Circle path by points.....	46
2.4.10	Create Data Matrix code	47
2.4.11	Create text object	49
2.4.12	Fiducial.....	51
2.4.13	Automatic fiducial creation	52
2.4.14	Create fiducial with defaults	53
2.4.15	Create instance type	53
2.4.16	Rotate.....	54
2.4.17	Move object.....	55
2.4.18	Mirror horizontal	55
2.4.19	Mirror vertical	56
2.4.20	Scale	56
2.4.21	Expand	57
2.4.22	Round.....	57
2.4.23	Chamfer	58
2.4.24	Merge	59

2.4.25	Difference	59
2.4.26	Split	60
2.4.27	Add point	60
2.4.28	Add mirror point.....	61
2.4.29	Move point.....	61
2.4.30	Split path	62
2.4.31	Convert to polygon	63
2.4.32	Convert to closed path	63
2.4.33	Group	63
2.4.34	Ungroup	64
2.4.35	Show/Hide processing area	64
2.4.36	Step and Repeat	65
2.4.37	Invert selection	66
2.4.38	Close open path	67
2.4.39	Convert to flash	67
2.4.40	Explode flash.....	67
2.4.41	Compare to flash.....	67
2.4.42	Create aperture	68
2.4.43	Measure	68
2.5	Scan fields	69
2.5.1	Move object.....	70
2.5.2	Compute all... ..	71
2.5.3	Show/Hide processing area	71
2.5.4	Step and repeat.....	72
2.6	Workflow	73
2.6.1	Computing toolpaths	80
2.6.2	Move object.....	81
2.6.3	Compute all... ..	81
2.6.4	Show/Hide processing area	81
2.6.5	Step and repeat.....	82
2.7	Tools	83
2.8	Laser tools	87
2.8.1	Jump speed.....	90
2.8.2	Jump delay.....	90
2.8.3	Laser on delay.....	90
2.8.4	Laser off delay.....	91
2.8.5	Mark delay.....	92
2.8.6	Polygon delay.....	93
2.9	Mechanical tools	94
2.10	Toolpaths	97
2.10.1	Compute all... ..	98
2.10.2	Show jump lines	99
2.10.3	Create toolpath.....	99
2.10.4	Move object.....	100
2.10.5	Rotate.....	100
2.10.6	Mirror horizontal	101
2.10.7	Mirror vertical	101
2.10.8	Add point	102
2.10.9	Add mirror point.....	102
2.10.10	Move point.....	103
2.10.11	Split path	103
2.11	Processing	104
2.11.1	Process all.....	105
2.11.2	Stop processing	105
2.11.3	Placement... ..	106

2.11.4	Automatic fiducial creation	108
2.11.5	Power measurement	109
2.11.6	Tool magazine.....	110
2.12	Camera	111
3	Menus.....	114
3.1	Menu <i>File</i>	115
3.1.1	New	116
3.1.2	Open.....	116
3.1.3	Recent files	116
3.1.4	Save	116
3.1.5	Save as	116
3.1.6	Save as template	116
3.1.7	Export.....	116
3.1.8	Print.....	118
3.1.9	Print preview	122
3.1.10	Info	123
3.1.11	Help.....	123
3.1.12	Options.....	124
3.1.13	Exit	124
3.2	Menu <i>Edit</i>	125
3.2.1	Undo.....	125
3.2.2	Repeat.....	125
3.2.3	Redo.....	126
3.2.4	Cut.....	126
3.2.5	Copy	126
3.2.6	Paste	126
3.2.7	Delete	126
3.3	Menu <i>Insert</i>	127
3.3.1	Flash.....	128
3.3.2	Path	128
3.3.3	Polygon	129
3.3.4	Rectangle	129
3.3.5	Rectangle path	130
3.3.6	Circle by diameter	130
3.3.7	Circle by points.....	131
3.3.8	Circle path by diameter	131
3.3.9	Circle path by points.....	132
3.3.10	Create text object	133
3.3.11	Create Data Matrix code	135
3.3.12	Fiducial.....	137
3.3.13	Automatic fiducial creation	138
3.3.14	Create fiducial with defaults	138
3.3.15	Create instance type.....	139
3.4	Menu <i>Layout</i>	140
3.4.1	Move object.....	142
3.4.2	Rotate.....	142
3.4.3	Mirror horizontal	143
3.4.4	Mirror vertical	143
3.4.5	Scale	144
3.4.6	Expand	144
3.4.7	Difference	145
3.4.8	Merge	145
3.4.9	Split	146
3.4.10	Round.....	146
3.4.11	Chamfer	147

3.4.12	Set zero point	147
3.4.13	Convert to polygon	148
3.4.14	Convert to closed path	148
3.4.15	Add point	149
3.4.16	Add mirror point.....	149
3.4.17	Close open path	150
3.4.18	Move point.....	150
3.4.19	Split path	151
3.4.20	Reduce number of elements	151
3.4.21	Change line width.....	152
3.4.22	Change arc radius	152
3.4.23	Convert to flash	153
3.4.24	Combine to flash	153
3.4.25	Compare to flash.....	153
3.4.26	Explode flash.....	153
3.4.27	Group	154
3.4.28	Ungroup	154
3.4.29	Measure	154
3.4.30	Design rule check.....	155
3.4.31	Aperture list library	155
3.5	Menu <i>Toolpaths</i>	156
3.5.1	Compute all... ..	156
3.5.2	Edit breakout tabs	156
3.6	Menu <i>Processing</i>	158
3.6.1	Placement... ..	159
3.6.2	Check copper thickness	161
3.6.3	Alignment settings	162
3.6.4	Material thickness measurement setting.....	164
3.6.5	Process all.....	165
3.6.6	Stop processing	165
3.6.7	Power measurement.....	166
3.6.8	Laser beam diagnostics	167
3.6.9	Import/Export calibration settings.....	168
3.6.10	Connect to machine.....	168
3.7	Menu <i>Service</i>	169
3.7.1	Calibration	169
3.7.2	Import settings from a previous version	169
3.7.3	Maintenance schedule	171
3.7.4	Send support information	171
3.7.5	Equipment configuration	172
4	How to work with the software	173
4.1	Typical production process	173
5	Appendix	200
5.1	List of figures.....	200
5.2	List of tables	205

License level Basic

The license level Basic of the software provides the basic functions for using the system. If a function is not available, the following message is displayed:

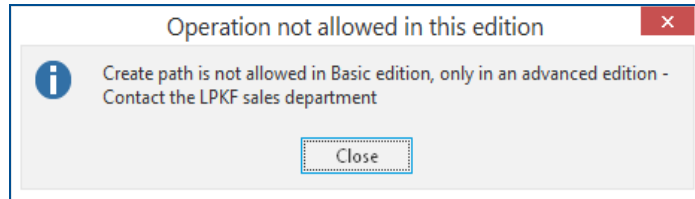


Fig. 1: Message *Operation not allowed in this license level*

License level Advanced

In the license level Advanced, the following functions are available in addition to the basic functions:

- Templates for non-laminated materials as well as multi-layers and ProMask templates
- Importing DXF files
- Multiply the layout with Step and repeat and create instance types
- Functions in the user guidance step *Layout* for creating and editing objects.
- Automatic fiducial creation

1 User interface

The user interface of your system software is divided in individual panes that can be shown or hidden as required. Additionally, you can move, minimize, and arrange the panes according to your needs. Thus, the user interface is variable and possibly structured differently.

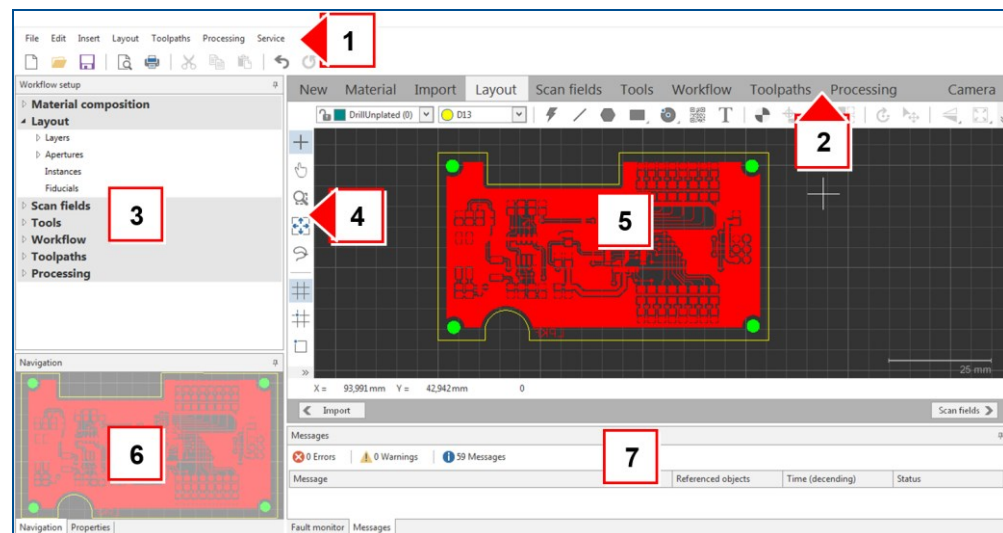


Fig. 2: User interface

The following table describes the individual areas of the user interface:

No.	Name	Description
1	Menu bar and toolbar	Contains menu items and provides fast access to frequently used functions.
2	User guidance steps	Contains several user guidance steps (New, Import, Layout, etc.), that guide you through the process.
3	Pane <i>Workflow setup</i>	Contains information on the tools, the scan fields, and other structures of the work file.
4	Toolbar View	Contains functions for displaying the objects.
5	Views	Contains a two-dimensional view of the workpiece that can be zoomed. Contains several switchable views with different functions.
6	Pane <i>Navigation</i>	Contains information on the objects or the current position.
	Pane <i>Properties</i>	Contains several panes with information on objects or the current position.
7	Pane <i>Fault monitor</i>	Contains a list of all errors.
	Pane <i>Messages</i>	Contains a list of messages.

Table 1: User interface

1.1 Menu bar and toolbar

The pane *Menu bar and toolbar* contains important main functions of the software.



Fig. 3: Menu bar and toolbar

The functions of the menu bar and toolbar are described in the following table:

Icon	Name	Description
	Create new project file based on a template	Navigates to the user guidance step <i>New</i> . You can start a new project there.
	Open existing project file	Displays the file system where you can open an existing project file.
	Save current project file	Saves the current project file in the file system.
	Print preview	Displays a print preview of the current layout.
	Print layout	Opens a dialog to configure the print settings.
	Cut selected objects	Cuts all selected objects and places them into the clipboard.
	Copy selected objects	Copies all selected objects into the clipboard.
	Paste objects from clipboard	Pastes all objects from the clipboard into the project.
	Undo last action	Undoes the last action performed.
	Redo last action	Redoes the last action undone.
	Delete selected objects	Deletes all selected objects.

Table 2: Menu bar and toolbar

1.2 Pane *Workflow setup*

The pane *Workflow setup* contains information on the currently loaded processing data such as layer, scan fields, used tools, etc.

Most of the entries contain functions that can be activated via the context menu.

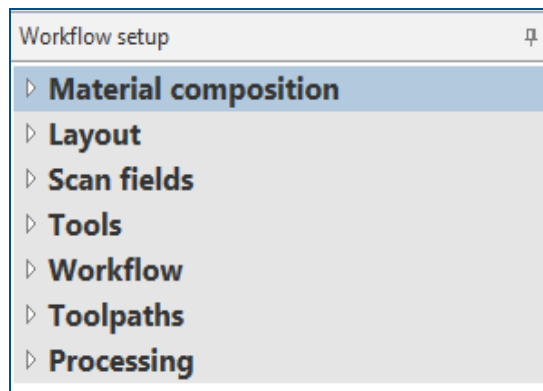


Fig. 4: Pane *Workflow setup*

The entries of the pane *Workflow setup* are described in the following table:

Name	Description
Material composition	Displays several information on the material set.
Layout	Displays the existing objects, fiducials, and apertures.
Scan fields	Displays the existing scan field sets and the computed scan fields.
Tools	Displays the existing tools and the tools that are assigned to the project.
Workflow	Displays the active and inactive work packages and the order of processing.
Toolpaths	Displays the computed toolpaths of the individual tools.
Processing	Displays the order how the active work packages are processed.

Table 3: Pane *Workflow setup*

1.2.1 Material composition

This section of the *Workflow setup* displays the existing layers according to the material surface.

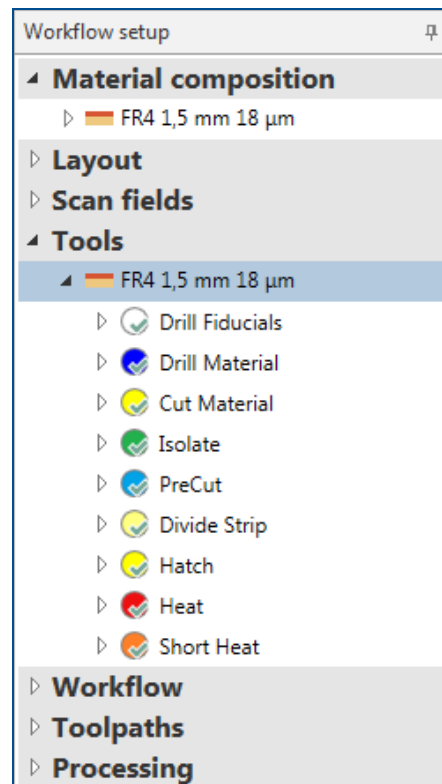


Fig. 5: Pane *Workflow setup* | *Material composition*

1.2.2 Layout

This section of the *Workflow setup* contains information on the different layers of the processing data and the contained objects.

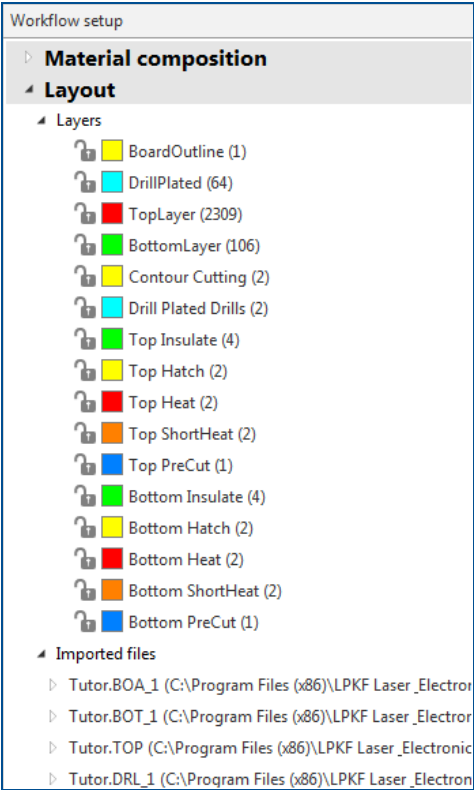


Fig. 6: Pane *Workflow setup* | *Layout*

The entries of the section *Layout* are described in the following table:

Name	Description
Layers	Contains all existing layers.
Apertures	Contains all existing apertures.
Instances	Contains all existing instances.
Fiducials	Contains all existing fiducials.

Table 4: Pane *Workflow setup* | *Layout*

In the context menu, specific functions of the individual items are available. Right-click to open the context menu.

The entries of the context menu are described in the following table:


Section/Item	Name	Description
Layers	Add layer	Adds a new layer.
Selected layer	Color...	Changes the color of the objects within a layer in the view <i>CAM</i> .
	Visible	Shows/Hides the layer in the view <i>CAM</i> .
	Selectable	Disables/Enables editing objects within the selected layer.
	PCB layer	Assigns the layer to a PCB layer.
	Display mode	Sets how the objects are displayed in the view. - Thin line: Displays the objects as thin line. - Contour: Displays the objects as contour. - True width: Displays the objects in their true width.
	Technology	Assigns a technology to the layer. The selected technology determines which tools can be used.
	Inverse	Structures the source layer from the inside. Example: In a letter or a number the inner area is structured.
	Rename	Renames the selected layer.
	Delete	Deletes the selected layer.
Selected instance	Edit instance type	Opens the dialog <i>Edit instance type</i> .
	Dissolve instance type	Dissolves the selected instance type.
Selected fiducial	Edit fiducial	The selected group is reimported.
	Configure search strategy...	Opens the dialog <i>Configuration of search strategies</i> .
	Copy search strategy to	Assigns the search strategy of the selected fiducial to another fiducial.
	Assign to layer	Allows you to assign the fiducial to the layer <i>Fiducial</i> .

Table 5: Context menu *Layout*

Configuring search strategy

Opens a dialog to configure a search strategy.

Summary

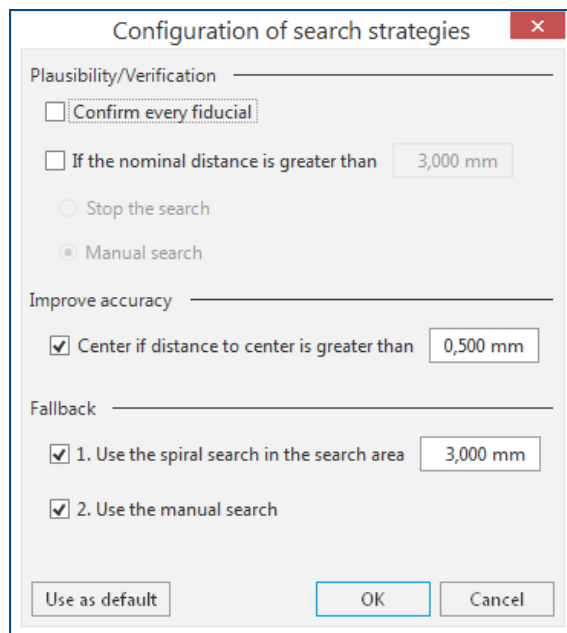

Use the *Configuration of search strategies* dialog to define the further procedure when the fiducial search finds no valid hits.

You can set several parameters that determine which hits are valid.

Plausibility/Verification

Enable this function to determine the behavior if the hit shall lie outside the set distance. In this case, the search can either be performed manually or canceled.

Improve accuracy

If this function is enabled, and the distance is greater than the set distance, the processing head moves over the target and the camera is focused again. This results in a better recognition of the fiducial but requires more time.

Fallback

If a fiducial is not located at the expected position, a spiral search can be performed in the defined area. This runs within a square spiral from the inside out while the search area is checked for valid hits. If no fiducial has been, a manual search can be executed as a last possibility.

1.2.3 Scan fields

This section of the *Workflow setup* displays the existing scan fields.

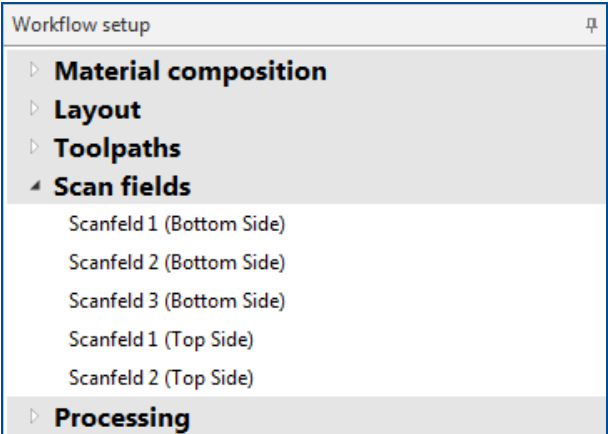


Fig. 7: Pane *Workflow setup* | *Scan fields*

The entries of the section *Scan fields* are described in the following table:

Name	Description
Scan field	Scan field name with consecutive numbering.

Table 6: Pane *Workflow setup* | *Scan fields*

In the context menu, specific functions of the individual items are available. Right-click to open the context menu.

The entries of the context menu are described in the following table:

Section/Item	Name	Description
Scan fields	Compute	Computes all scan fields.
	Create scan fields	Opens a dialog for creating a new scan field set.
Scan field	Compute	Computes the scan fields based on the selected scan field set.

Table 7: Context menu *Scan fields*

1.2.4 Tools

This section of the *Workflow setup* contains information on the different tools and their tasks.

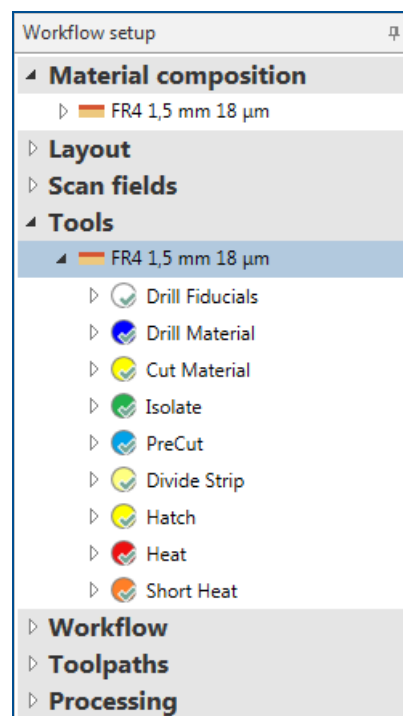


Fig. 8: Pane *Workflow setup* | *Tools*

1.2.5 Workflow

This section of the *Workflow setup* contains information on the work packages of the project. The work packages combine various information such as layers, tools, scan fields and technology and enable computing the toolpaths.

There are predefined work packages that already use the existing layers, tools and scan fields. If you are using customized data for your own layout, you should edit the work packages or create new ones.

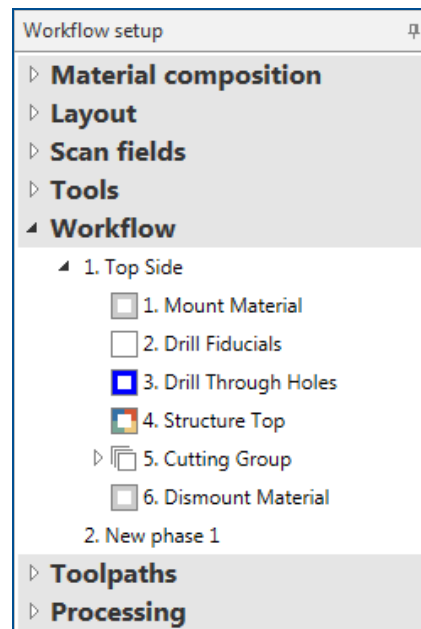


Fig. 9: Pane *Workflow setup* | *Workflow*

In the context menu, specific functions of the individual items are available. Right-click to open the context menu.

The entries of the context menu are described in the following table:

Section/Item	Name	Description
Workflow	Add production phase	Creates a new production phase.
Phase	Computing toolpaths	Computes the toolpaths for the assigned layers and scan fields.
Work package	Cut	The selected work package is removed and copied into the clipboard.
	Copy	Copies the currently selected work package into the clipboard.
	Activated	Activates/Deactivates the work package during production.
	Process	Starts processing the selected work package.
	Process all	Starts processing the selected phase.
	Rename	Renames the work package.
	Delete	Deletes the work package.

Table 8: Context menu *Workflow*

1.2.6 Toolpaths

This section contains the computed toolpaths and their assigned work packages and tools. The toolpaths are used to show the movements of the processing head and to implement them during processing of the material.

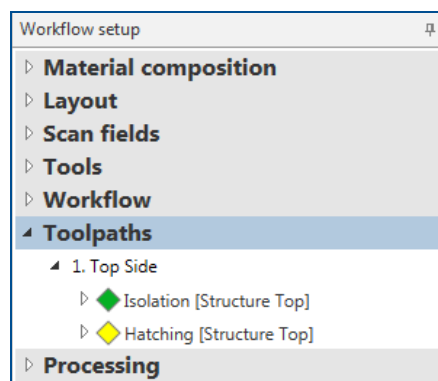


Fig. 10: Pane *Workflow setup* | *Toolpaths*

1.2.7 Processing

This section contains the work steps that are executed during production. These work steps comprise the loading and unloading process and the active work packages. The work packages can be processed as sorted either by tool or by scan field.

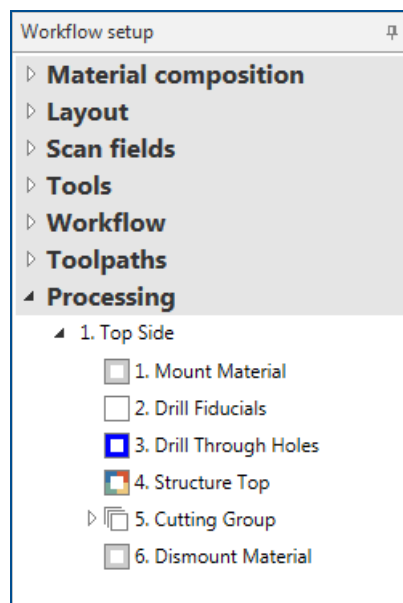


Fig. 11: Pane *Workflow setup* | *Processing*

In the context menu, specific functions of the individual items are available. Right-click to open the context menu.

The entries of the context menu are described in the following table:

Section/Item	Name
Selected processing side	
Check tool settings	Opens a dialog for checking the current tool settings.

Table 9: Context menu *Processing*

1.3 Toolbar View

The toolbar *View* is a vertical bar that is available for all views. Depending on the view, the available functions can vary.

The toolbar *View* contains the following icons/functions:

Icon	Name	Description
	Selection	Selects a rectangular area by drawing with the mouse. All objects inside are marked.
	Pan	Moves the visible area of the processing data within the view by dragging with the mouse. This can also be activated by pressing the mouse wheel (if present).
	Zoom area	Zooms into the selected area.
	Fit all	Displays the whole layout. The view <i>Processing</i> displays the whole processing area.
	Polygonal selection	Marks objects by drawing a polygon.
	Show grid	Shows/Hides the grid.
	Snap to grid	Defines whether operations can only be used on grid points. This works also when the grid is hidden.
	Snap to object	Defines whether the mouse cursor can only be snapped to certain points on an object.
	Snap to angle	Defines that the mouse pointer is snapped to a specific angle when selecting a second point. Additional angles can be configured under <i>Snap to</i> in the options.

Table 10: Toolbar *View*

In the view *Camera* the following functions are available:

Icon	Name	Description
	Crosshair overlay	Shows the crosshair in the camera view.
	Crosshair overlay with circle	Shows the crosshair with circle in the camera view.
	Crosshair overlay with rectangle	Shows the crosshair with rectangle in the camera view.

Table 11: View *Camera*

1.3.1 Selection

Selects objects and elements within the view.

Summary

The selection allows to select individual objects and several objects at the same time.

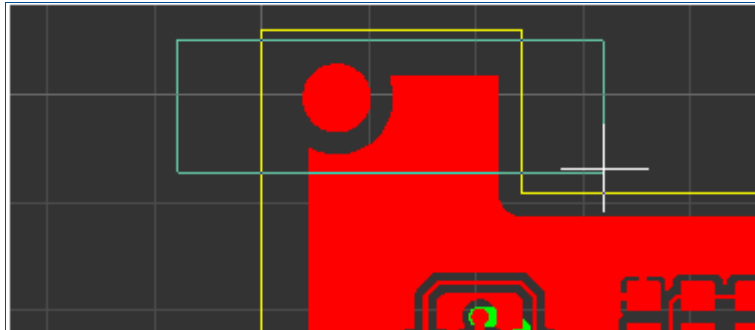


Fig. 12: Select objects

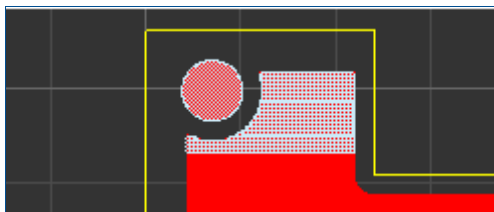


Fig. 13: Objects selected (hatched white)



It is important for selection whether the selection rectangle is opened from top to bottom or from bottom to top.

Selection from top to bottom: Only those objects are selected that are completely within the selection rectangle.

Selection from bottom to top: All objects are selected that are (partly) within the selection rectangle.

1.3.2 Pan

Moves the entire displayed area by clicking and dragging the mouse.

You can also move the displayed area by clicking and dragging the mouse in the pane *Navigation*.

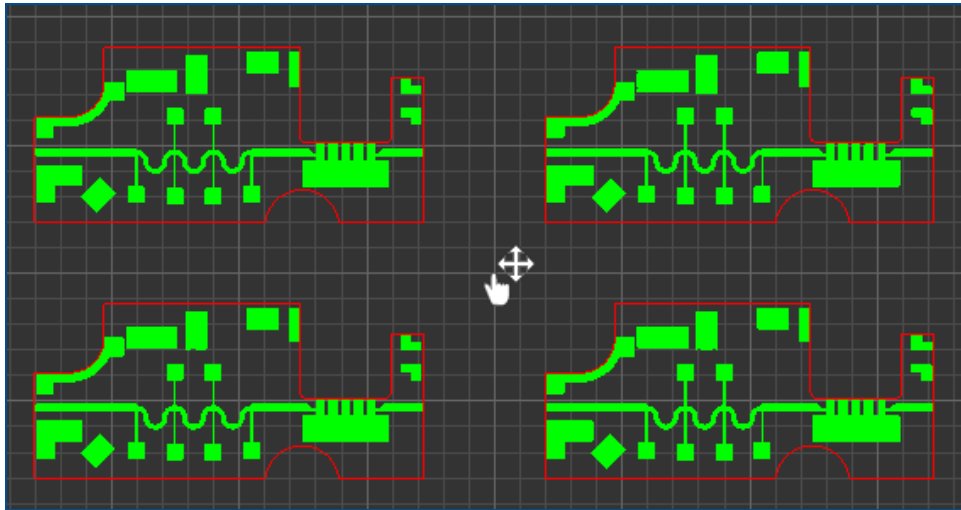


Fig. 14: Pan

1.3.3 Zoom area

Selects a rectangular area by drawing with the mouse. The selected area is zoomed in.

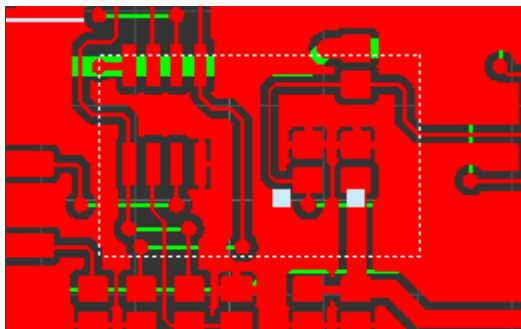


Fig. 15: Zoom area

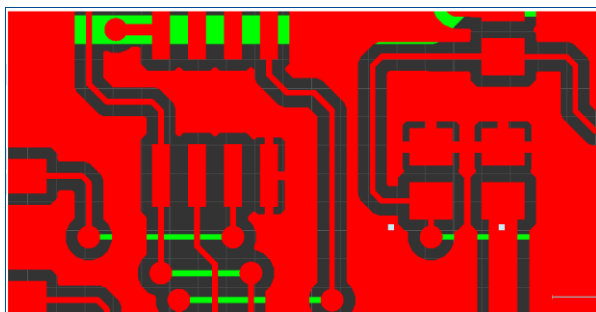


Fig. 16: Area zoomed in

1.3.4 Fit all

Changes the displayed area so that all existing objects in the layer are completely displayed.

The function [Fit all] shows in the user guidance step *Processing* the entire processing area.

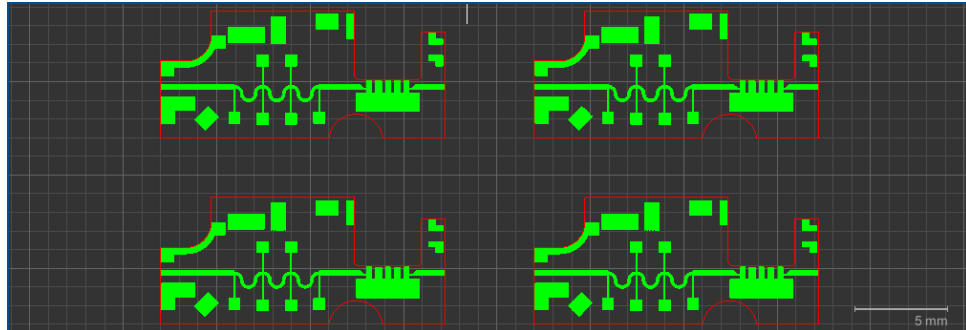


Fig. 17: Fit all

1.3.5 Polygonal selection

Selects an area by clicking and drawing a polygon with the mouse. The marked objects within the polygon are selected.

Marks objects by drawing a polygon.

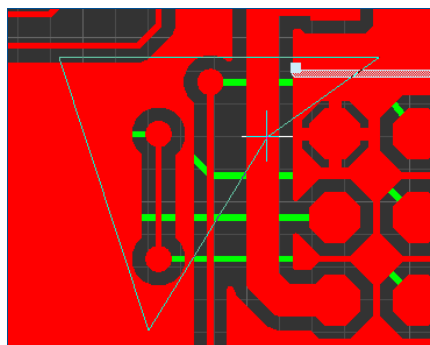


Fig. 18: Polygonal selection

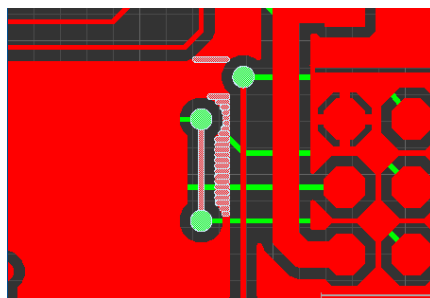


Fig. 19: Polygons selected

1.3.6 Show grid

Shows/Hides the grid in the workpiece view.

The function [Snap to grid] can also be used when the grid is hidden.

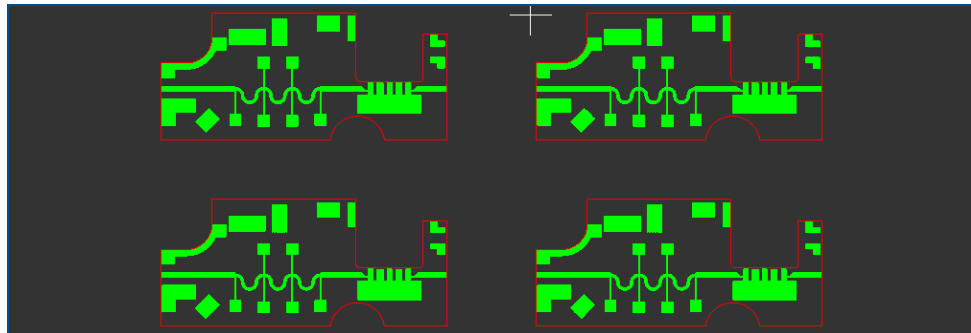


Fig. 20: Hide grid

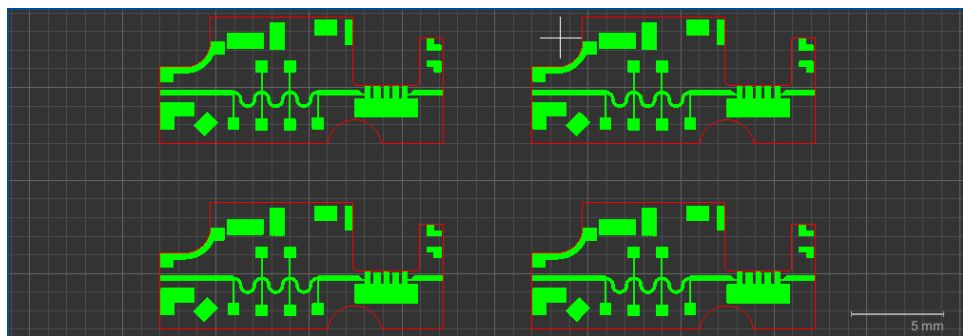


Fig. 21: Show grid

1.3.7 Snap to grid

Defines whether objects can only be created/moved on grid points.

[Snap to grid] is not working when the grid is hidden.

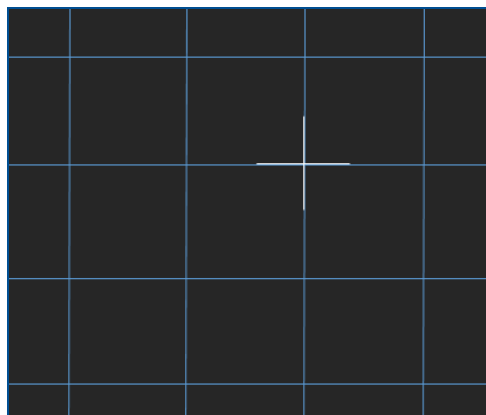


Fig. 22: Cursor (white crosshairs) on grid point

1.3.8 Snap to object

Defines whether the mouse cursor can only be snapped to certain points on an object.

In *File > Options > General > Snap* you can make further settings for the function [Snap to object] in the tab *Snap to object*.

1.3.9 Snap to angle

Defines that the mouse cursor is only snapped onto angles.

In *File > Options > General > Snap* you can make further settings for the function [Snap to angle] in the tab *Snap to angle*.

1.4 Pane Navigation

The pane *Navigation* displays the object to be processed in small format. The zoomed area in the view *CAM* is marked in the pane *Navigation* (1). By keeping the left mouse key pressed, the marked area can be moved.

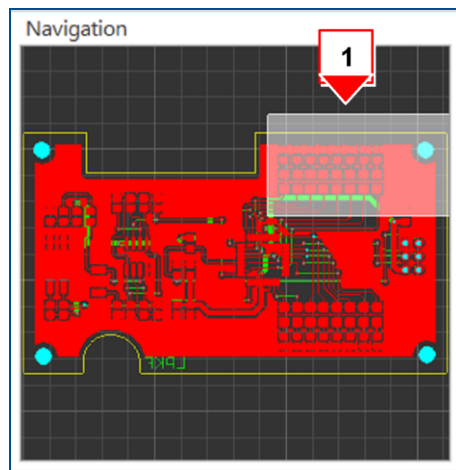


Fig. 23: Pane Navigation

1.5 Pane Properties

The pane *Properties* contains information on the loaded processing data. Depending on the selected entry in the pane *Workflow setup*, different information is displayed.

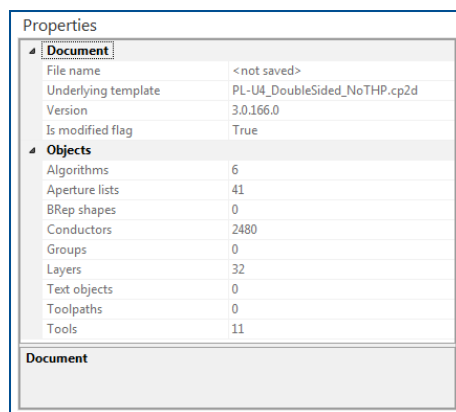


Fig. 24: Pane Properties

1.6 Pane *Fault monitor*

The pane *Fault monitor* contains a list of all active faults. These can refer for example to error messages during workpiece production or to a problem while starting the system.

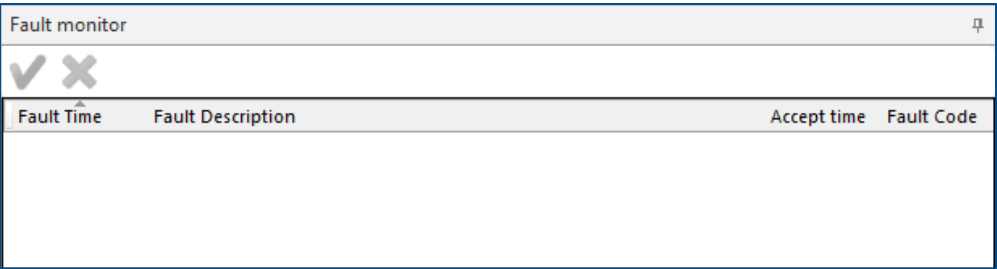


Fig. 25: Pane *Fault monitor*

The icons/functions are described in the following table:

Icon	Name	Description
	Accept all	Starts the troubleshooting procedure. All errors not yet acknowledged are acknowledged automatically.
	Clear all	Deletes all errors from the list that have already been acknowledged.

Table 12: Pane *Fault monitor*

The items of the pane *Fault monitor* are described in the following table:

Name	Description
Fault time	Displays the time and date when the error occurred.
Fault description	Displays a detailed description of the error that occurred.
Accept time	Displays the time when the error was acknowledged.
Fault code	Displays the corresponding fault code.

Table 13: Items of pane *Fault monitor*

1.7 Pane Messages

The pane *Messages* contains a list of all system messages. These are divided into the areas *Errors*, *Warnings*, and *Messages*.

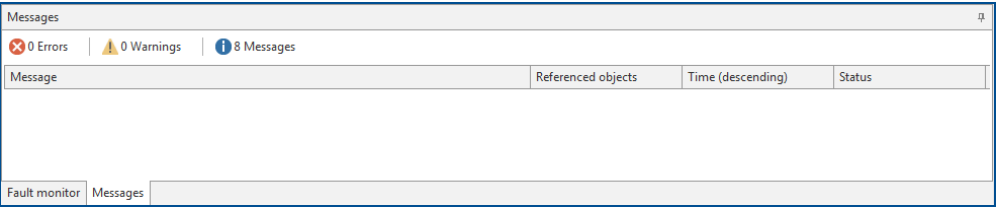


Fig. 26: Pane Messages

The areas of the pane *Messages* are described in the following table:

Name	Description
Fault	Errors are critical system software errors. The errors can be shown or hidden by clicking on <i>Errors</i> .
Warnings	Warnings are input errors caused by the user. For example, this may be information on canceled or not properly executed actions that can cause an impaired program execution. Furthermore, hardware-specific warnings are displayed here. The warnings can be shown or hidden by clicking on <i>Warnings</i> .
Messages	Messages are statistical information of the system software. These can be feedback of the system software on certain executed actions. For example: <i>New empty document created</i> . The messages can be shown or hidden by clicking on <i>Messages</i> .

Table 14: Pane Messages

2 User guidance steps

The user guidance steps guide you through the process within the application. In order to ensure a safe process, you will be guided from the data preparation to the layout adjustment and to the production, if necessary. You have always the possibility to switch between the user guidance steps.

 


Fig. 27: User guidance steps and Camera view

The user guidance steps are described in the following table:

Name	Description
New	Creates a new project or opens an existing project.
Material	User guidance step for selecting and defining the processing material.
Import	Imports selected files. These are displayed in the view of the user guidance steps <i>Layout</i> , <i>Scan fields</i> , and <i>Toolpaths</i> .
Layout	User guidance step for editing the processing data. You can create or edit objects here.
Scan fields	User guidance step for computing and arranging the scan fields.
Laser tools	Is only displayed for systems with mechanical tools and laser tools. User guidance step for creating new laser tools and editing the tool parameters.
Mechanical tools	Is only displayed for systems with mechanical tools and laser tools. User guidance step for creating new mechanical tools and editing the tool parameters.
Tools	User guidance step for creating new tools and editing the tool parameters.
Workflow	User guidance step for activating/deactivating and adapting the work packages. Here, you can also assign the work packages to process groups and instance types.
Toolpaths	User guidance step for computing the toolpaths.
Processing	User guidance step for processing the material based on the computed toolpaths and scan fields.
Camera	This view can show the images of both cameras. Furthermore, the processing head can be moved manually.

Table 15: User guidance steps

2.1 New

In the user guidance step *New*, already existing projects or a template can be opened. In addition, the recent projects are displayed.

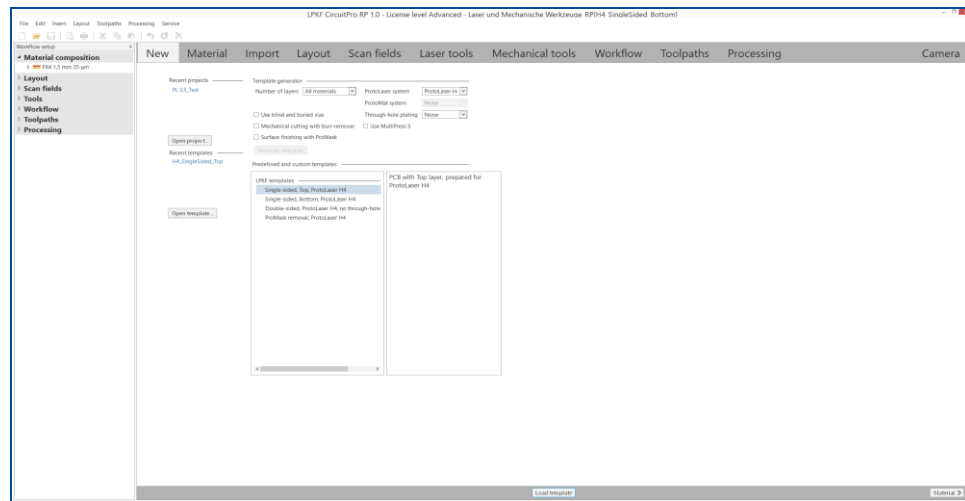


Fig. 28: User guidance step *New*

The buttons are described in the following table:


Button	Description
Recent projects	Shows the projects that have been used most recently.
Recent templates	Shows the templates that have been used most recently.
Template generator	
Number of layers	Filters the drop-down list of the templates by the number of layers.
Single layer	Selects between top and bottom for single-sided materials. Is only displayed in the group <i>Number of layers</i> , if <i>Single-sided</i> is selected.
Use blind and buried vias	Displays all templates that are suitable for processing blind and buried vias.
Mechanical cutting with burr-removal	Displays all templates that are suitable for mechanical cutting with burr-removal.
Surface finishing with ProMask	Displays all templates that are suitable for surface finishing with ProMask.
ProtoLaser system	Selects a ProtoLaser system from the drop-down list. Only the templates corresponding to the respective ProtoLaser system are displayed.
ProtoMat system	Selects a ProtoMat system from the drop-down list. Only the templates corresponding to the respective ProtoMat system are displayed.
Through-hole plating	Displays all templates that are suitable for through-hole plating.
Use MultiPress S	Displays all templates that are suitable for using MultiPress S.
Generate template	Creates a new template on basis of all selected options.
Open project	Opens a selection window to search for a project in the folder system.
Open template	Opens a selection to search for a template in the folder system.

Button	Description
Load template	Loads the currently selected template from the list and switches to the user guidance step <i>Material</i> .
Material	Closes the currently opened dialog and switches to the user guidance step <i>Material</i> .

Table 16: User guidance step *New*

2.2 Material

In the user guidance step *Material* you can define the processing material with its properties and select existing material profiles.

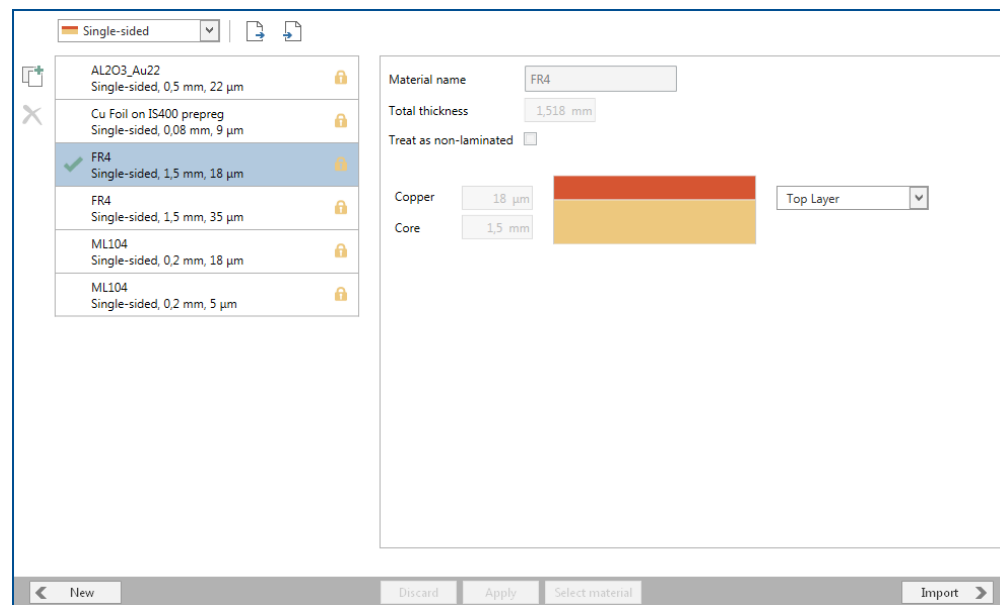Fig. 29: User guidance step *Material*

The icons/functions of the dialog *Material* are described in the following tables:

Icon	Name	Description
	Material type	Selects the material list and only displays materials of a certain type.
	Duplicate material	Duplicates the selected material.
	Remove material	Deletes the selected material from the list.
	Export material	Exports the selected material with its properties into the file system.
	Import material	Imports a material from the file system.
Button	Discard	Removes all unspecified materials from the list.
Button	Save	Saves a new created material in the drop-down list.
Button	Select material	Selects the material that has been marked with a left-click.

Icon	Name	Description
Button	Import	Continues with the current settings and navigates to the user guidance step <i>Import</i> .

Table 17: User guidance step *Material*

2.3 Import

In the user guidance step *Import* you can import various file formats.

The following formats are supported:

Format	Description	Extension
BOA BOT DRL TOP	Native file formats	*.boa *.bot *.drl *.top
CAM	Native file format	*.cam
CP2D	Native file format for CircuitPro projects	*.cp2d
DXF	File format for drawings from the AutoCAD	*.dxf
Eagle	Design file format for wiring diagrams and PCB layouts	*.brd
Excellon	File format for drilling and milling PCBs.	*.drl; *.drd
Gerber	File format for PCB image files	*.gbr
Gerber X, Gerber X2	Enhanced file format for PCB image files.	*.gbx
GDSII	Data format for layout data of integrated circuits.	*.gds; *.gds2
HPGL	File format for drawings, formerly used for operating pen plotters.	*.plt
Job	Job file of Windows Task Scheduler	*.job
LMD	File format of the software ABBY FineReader Sprint File	*.lmd
ODB++	CAD to CAM Data interchange format.	*.zip
IPC	File format of the software IncrediFlash.	*.cvlg; *.xml
Sieb & Meyer	File format for drilling and milling PCBs.	*.drl *.sm1; *.sm3

Table 18: Import formats

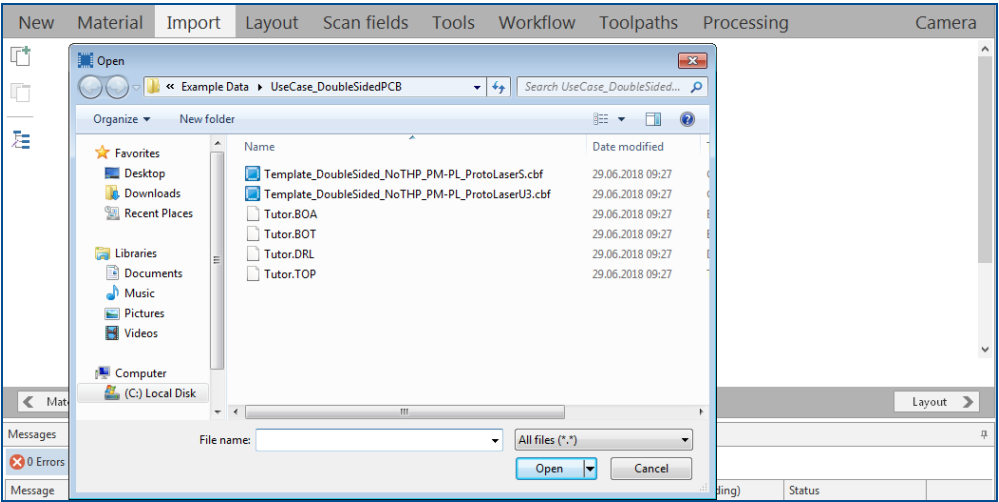


Fig. 30: User guidance step *Import*

The icons and buttons are described in the following table:

Icon	Name	Description
	Add	Opens a selection for importing files from the folder system.
	Discard	Removes the selected file.
	Run ATE	Starts the aperture template editor.
Button	Discard	Removes the selected file.
Button	Import	Imports the selected file and displays it in the user guidance step <i>Layout</i> .

After importing the desired files, the view is changed as follows:

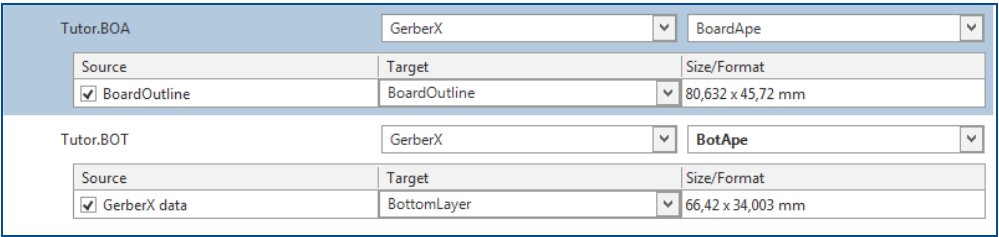


Fig. 31: Import file

The following information of the imported files is displayed:

Column	Description
File name	Displays the name of the file to be imported.
Format	Displays the format of the imported file. If the format is not recognized correctly, you can correct the format in the drop-down list.
Source	Indicates the names of the paths/3D elements within the imported file.
Target	Displays the layer that is assigned.
Size/Format	Displays the size/format of the layer.

Table 19: Import file

The user guidance step *Import* contains the following tabs:

2D

Shows the design and the dimensions of the imported file:

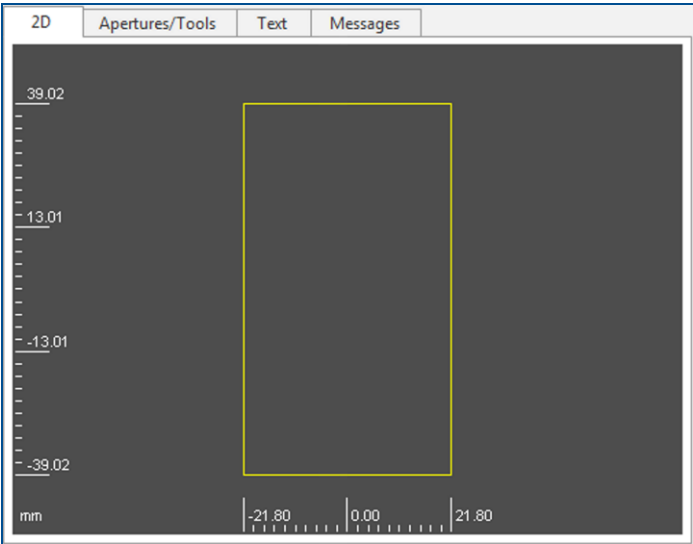


Fig. 32: Tab 2D

Apertures/Tools

Displays a list of apertures and tools that you need for your imported project:

2D	Apertures/Tools	Text	Messages				
Image	Name	Mode	Rotation	a	b	c	d
	D10		0 °	0,1			

Fig. 33: Tab Apertures/Tools

The columns have the following meaning:

Column	Description
Image	Displays the shape of the aperture.
Name	Displays the name of the aperture.
Mode	Displays whether the aperture has been imported as a drawn object  or as a flash  .
Rotation	Displays whether the aperture is rotated (circular apertures have 0° as default).
a-d	Show parameters that describe the size of the aperture. Depending on the aperture shape, not all parameters are necessary.

Table 20: Tab Apertures/Tools

Text

Displays the ACSII text of the imported file:

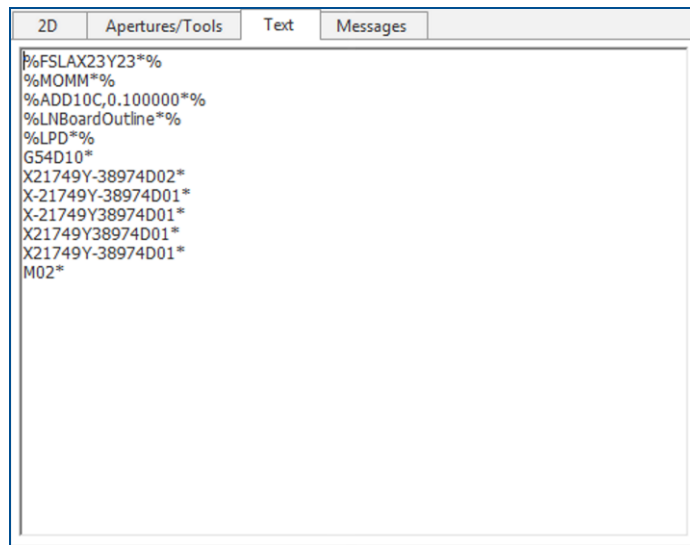


Fig. 34: Tab *Text*

The dialog *Import* contains the following sub tabs, depending on which tab (*2D*, *Apertures/Tools*, *Text*) is active:

File

Displays the measurements of the imported file:

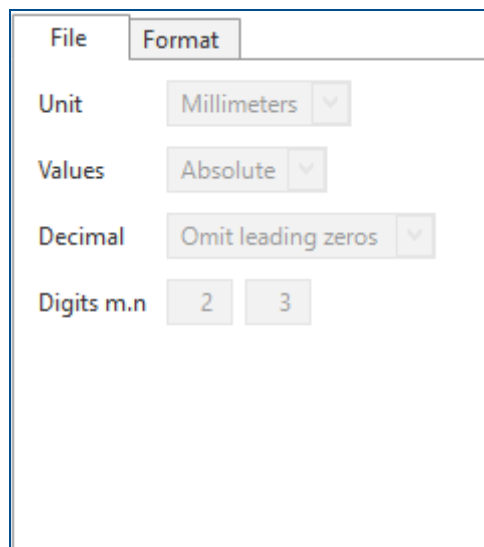


Fig. 35: Sub tab *File*

The following settings are possible:

Setting	Description
Unit	Specifies the measurement unit (millimeters or inches).
Values	Specifies whether absolute or relative values are used.
Decimal	Specifies whether leading or trailing zeroes are to be suppressed.
Digits m.n	Specifies the number of decimal places of the coordinates: m = places before the decimal point n = decimal places

Table 21: Sub tab *File*

Format

Provides various options:

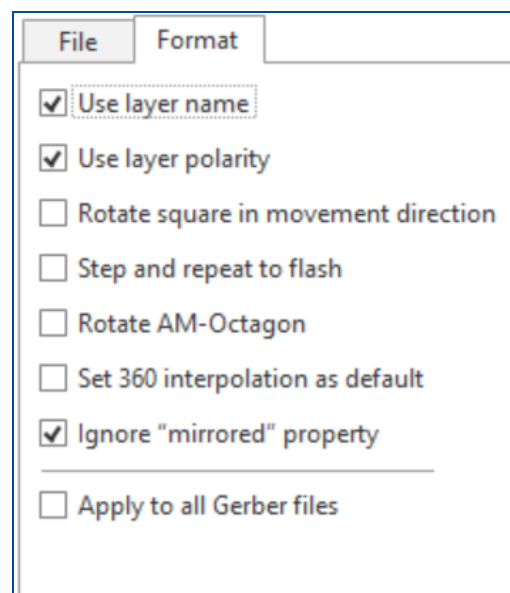


Fig. 36: Sub tab *Format*

The following settings are possible:

Setting	Description
Use layer name	Activates/Deactivates using the layer names defined in the Gerber file.
Use layer polarity	Activates/Deactivates the analysis of the layer polarity during Gerber import.
Rotate square in movement direction	Activates/Deactivates the automatic rotation of square objects during Gerber import.
Step and repeat to flash	Combines object collections to flash objects for <i>step-and-repeat</i> commands in the file.
Rotate AM-Octagon	Always aligns octagon edges to axes.
Set 360° interpolation as default	Activates the 360-degree interpolation for circles as default, regardless of corresponding commands in the file.
Ignore "mirrored" property	Ignores the property "mirrored" during import.
Apply to all Gerber files	Applies the settings to all imported Gerber files.

Table 22: Sub tab *Format*

Attributes

Is only displayed when the tab *Apertures/Tools* is active and shows the properties of the apertures and tools:

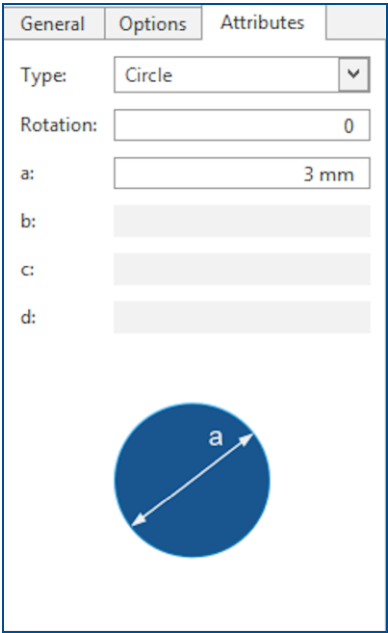


Fig. 37: Sub tab *Attributes*

The following settings are possible:

Attribute	Description
Type	Specifies the type of the aperture. The type can be changed via the drop-down list.
Rotation	Displays/Specifies the rotation of the aperture. Manual changes are possible.
a-d	Show parameters that describe the size of the aperture. Depending on the aperture shape, not all parameters are necessary.

Table 23: Sub tab *Attributes*

■ Importing CAD data

1. Click on .
2. In the dialog that is displayed, select the data for import.

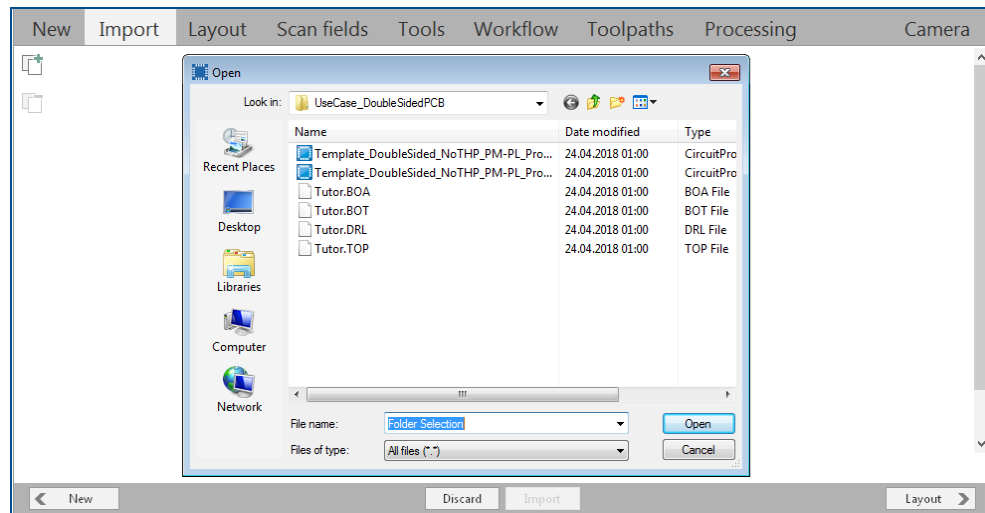


Fig. 38: User guidance step *Import*

3. Click on [Open].
- ☐ The following contents are displayed in accordance with your imported file (in this case a Gerber file):

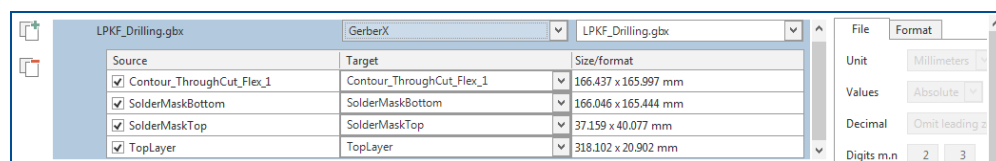


Fig. 39: File import

4. Check the imported data. If necessary, assign the associated layers.
5. In the navigation bar click on [Import].
- ☐ The CAD data are imported and displayed in the view of the user guidance step *Layout*.
- ☒ The CAD data have been imported.

2.4 Layout

In the user guidance step *Layout*, you can edit existing or imported data and generate new objects.

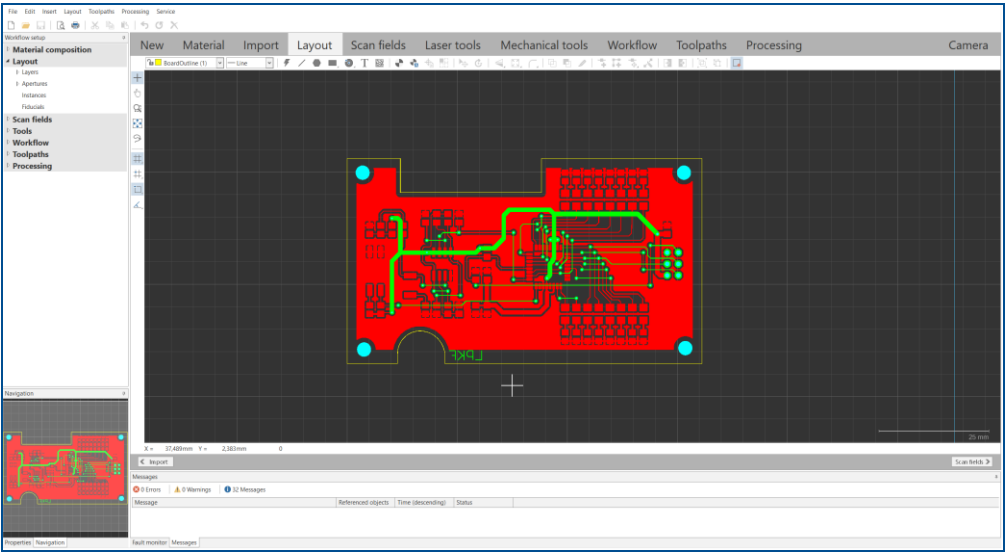


Fig. 40: User guidance step *Layout*

Icons with a small triangle (see following figure) can open a context menu with a right-click. It contains additional related functions.



The icons/functions of the toolbar are described in the following tables.

Icon	Name	Description
	Selected layer	Displays the currently selected layer. You can change this by opening a drop-down list with a left-click and selecting a different layer from the list.
	Aperture selection	Displays the currently selected aperture. Left-click to open the drop-down list and change the aperture by selecting another one.
	Flash	Creates a flash based on the aperture currently selected.
	Path	Creates a path in the current layer.
	Polygon	Creates a polygon in the current layer.
	Rectangle	Creates a filled rectangle in the current layer.
	Rectangle path	Creates a rectangle path in the current layer.
	Circle by diameter	Creates a filled circle by defining a diameter.
	Circle by points	Creates a filled circle by setting three points.
	Circle line by diameter	Creates a circle line by defining a diameter.

Icon	Name	Description
	Circle line by points	Creates a circle line by setting three points.
	Create Data Matrix code	Creates a Data Matrix code
	Create text object	Creates a text object. Subsequently, new functions for modifying text are available.
	Fiducial	Creates a new fiducial.
	Automatic fiducial creation	Opens a dialog for automatic fiducial creation.
	Create fiducial with default values	Creates a fiducial with the default camera settings.
	Create instance type	Creates an instance type from the selected objects where the objects are used as the primary instance.
	Rotate	Rotates one or multiple objects around a definable pivot point.
	Move object	Moves the selected object by a defined distance and direction.
	Mirror horizontal	Mirrors one or multiple objects around the horizontal axis of reflection (x axis).
	Mirror vertical	Mirrors one or multiple objects around the vertical axis of reflection (y axis).
	Scale	Scales up or scales down the marked object by the scale factor.
	Expand	Increases or decreases the marked object by a definable length.
	Round	Rounds the corners of the marked object.
	Chamfer	Chamfers the corners of the marked object.
	Merge	Merges adjoining or overlapping objects to a single geometrical object.
	Difference	Removes the area of a geometrical object that is overlapped by a second selected object.
	Split	Splits a marked object by using a predefined path.
	Add point	Adds a point on a selected line.
	Add mirror point	Adds two points with the same distance from the reference point.
	Move point	Moves a selected point.
	Split path	Splits the selected line segment of a path.
	Convert to polygon	Fills a selected closed path.

Icon	Name	Description
	Convert to closed path	Removes the filling of filled objects.
	Group	Groups marked objects.
	Ungroup	Ungroups grouped objects.
	Show/Hide processing area	Shows/Hides the processing area.
Context menu	Step and repeat	Opens a dialog for multiplying the selected objects. Can be accessed via right-click in the user guidance step.
Context menu	Invert selection	Inverts the selection of objects in the 2D view.
Context menu	Close open path	Closes marked, open paths.
Context menu	Convert to flash	Converts drawn objects to flash objects and creates new apertures
Context menu	Explode flash	Converts the flash into an object.
Context menu	Compare to flash	Compares the marked flash with objects on the same layer. Objects of the same shape are converted into a flash.
Context menu	Assign to layer	Opens a view of the existing layers. Thus, the selected object can be assigned to a specified layer.
Context menu	Copy to layer	Opens a view of the existing layers. Thus, the selected object can be copied to a specified layer.
Context menu	Create aperture	Creates an aperture. In the user guidance step <i>Layout</i> the new tab <i>Aperture</i> is displayed.
Context menu	Select by aperture	Marks all objects that refer to the selected aperture.
Context menu	Select by geometry	Marks all objects with similar properties.
Context menu	Select by layer	Selects all objects of the same layer.
Context menu	Measure	Measures the distance between two points.
Context menu	Cancel	Closes the current function.
Button	Import	Opens the user guidance step <i>Import</i> .
Button	Scan fields	Opens the user guidance step <i>Scan fields</i> .

Table 24: User guidance step *Layout*

2.4.1 Flash

Creates a flash based on the aperture or block currently selected.

Summary

Use the function [Flash] to create a flash or block flash based on the apertures or blocks in the library. If no aperture is selected, the first aperture in the library is used.

The flash is assigned to the currently selected layer.

2.4.2 Path

Creates a path in the current layer.

Summary

Apply the [Path] function to create open and closed paths in the user guidance step *Layout*. These paths are automatically assigned to the currently selected layer and use the selected aperture or path. Only circular apertures can be used for paths.

To close a path, you must create the last point, then select [Close open path] in the context menu. The paths are automatically connected to close the shape.

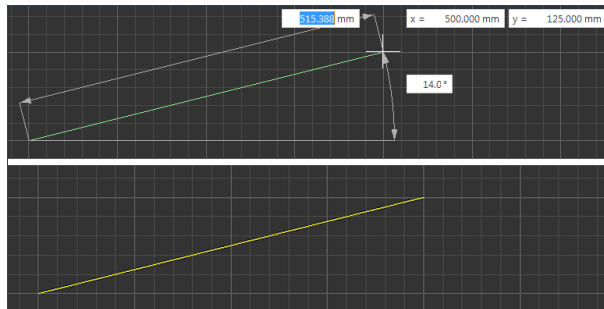


Fig. 41: Creating a path

2.4.3 Polygon

Creates a polygon in the current layer.

Summary

Use the function [Polygon] to create polygons in the user guidance step *Layout*. These polygons are automatically assigned to the currently selected layer. The individual lines can be created as straight lines or as arcs. Once the element is finished, it is filled automatically.

Open the context menu and click on [Finish] or press to close the polygon.

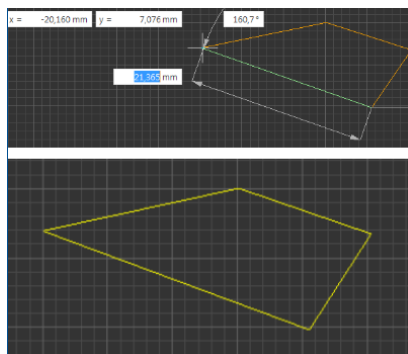


Fig. 42: Create polygon

2.4.4 Rectangle

Creates a filled rectangle in the current layer.

Summary

Use the function [Rectangle] to create filled rectangles in the user guidance step *Layout*. The objects are automatically assigned to the currently selected layer.

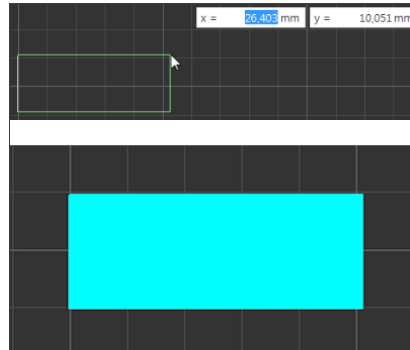


Fig. 43: Create rectangle

2.4.5 Rectangle path

Creates a rectangle path in the current layer.

Summary

Use the function [Rectangle path] to create rectangle paths in the user guidance step *Layout*. The objects are automatically assigned to the currently selected layer.

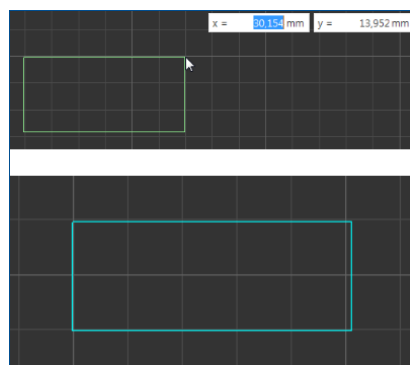


Fig. 44: Create rectangle path

2.4.6 Circle by diameter

Creates a filled circle of a defined diameter.

Summary

Use [Circle by diameter] to create circles in the user guidance step *Layout*. In the context menu, you can also use *Specify radius* to create a circle by radius. After the circles have been created they are automatically filled and assigned to the currently selected layer.

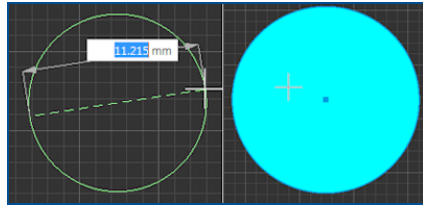


Fig. 45: Create circle by diameter

2.4.7 Circle by points

Creates a filled circle by setting three points.

Summary

Use the function [Circle by points] to create circles in the user guidance step *Layout*. After the circles have been created they are automatically filled and assigned to the currently selected layer.

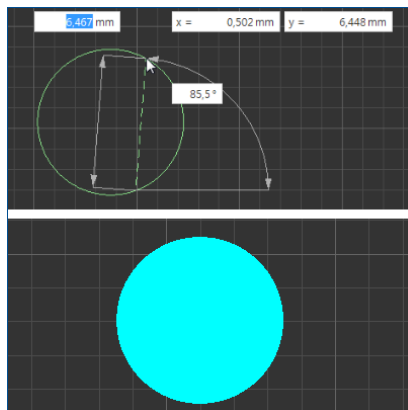


Fig. 46: Create circle by points

2.4.8 Circle path by diameter

Creates a circle path by the defined diameter.

Summary

Use [Circle line by diameter] to create circle lines in the user guidance step *Layout*. In the context menu, you can also use *Specify radius* to create a circle line by radius. After the circle lines have been created they are automatically assigned to the active layer.

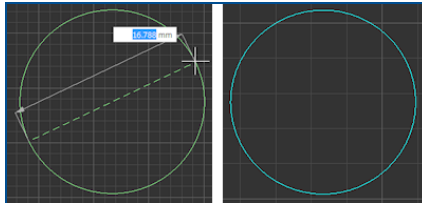


Fig. 47: Create circle line by diameter

2.4.9 Circle path by points

Creates a circle path by setting three points.

Summary

Use the function [Circle path by points] to create circle paths in the user guidance step *Layout*. After the circle paths have been created, they are automatically assigned to the active layer.

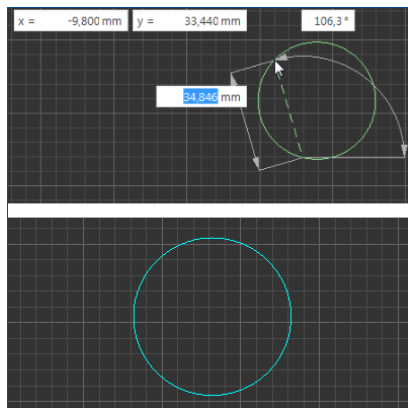


Fig. 48: Create circle path by points

2.4.10 Create Data Matrix code

Creates a Data Matrix code in the current layer

Summary

Use the function [Create Data Matrix code] to create a 2D code in a rectangular matrix in the user guidance step *Layout*. This code can be read using a camera.

The Data Matrix codes are automatically assigned to the currently selected layer.

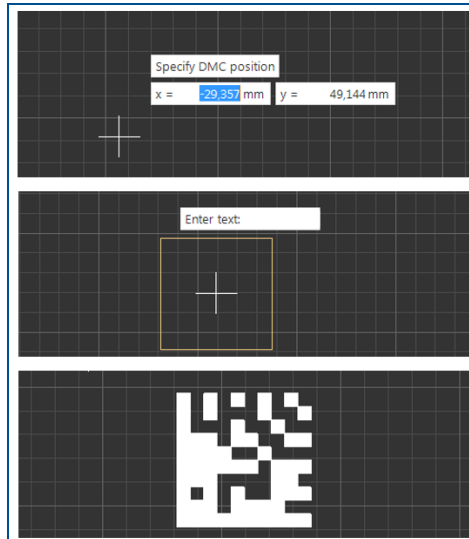


Fig. 49: Create Data Matrix code

With the functions in the right toolbar, variable contents can be displayed as Data Matrix code. These values are not static but are adjusted at a certain point in time. Click on  to add a variable of a specific data format (*Number*, *Text*, or *Date*). Variables of the format *Number* can be additionally assigned a type (*Serial number*, *Batch*, or *Lot*). Click on  to insert the variable into the text field.

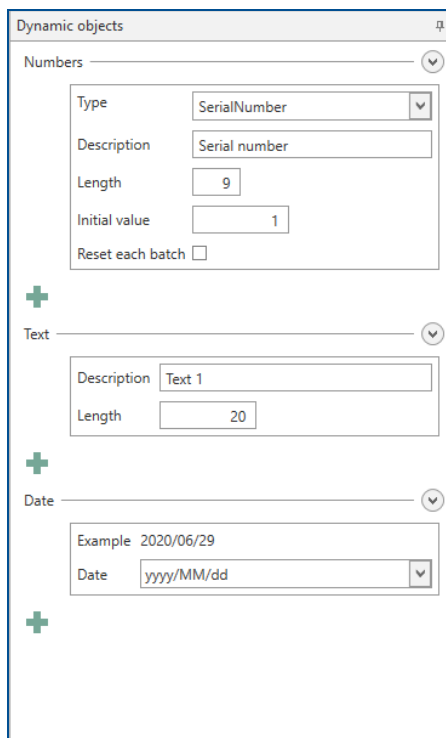


Fig. 50: Settings for Data Matrix code with dynamic contents

Name	Description
Number	
Type	Defines the type of the variable. You can select one of the following types: - Serial number At the start of each production, the serial number is incremented by one value. If there are several serial numbers and the length is changed, this value changes for all serial numbers. - Batch The value is incremented by 1 when the maximum number of serial numbers (length) has been reached. - Lot Indicates the number of fully produced batches. The value is incremented by 1 when the maximum number of batches has been reached.
Description	Defines the description of the variable.
Length	Defines the maximum number of digits for this variable. Example: At a length of 3 the maximum value is 999.
Initial value	Defines the initial (starting) value of the variable.
Reset each batch	Activates/Deactivates resetting the count after each batch.
Batch size	Defines the maximum batch size. A batch has been produced, when the maximum serial number has been reached.
Reset each lot	Activates/Deactivates resetting the count after each batch.
Lot size	Defines the maximum lot size. A lot has been produced, when the maximum batch size has been reached.
Text	
Description	Defines the description of the variable.
Length	Defines the maximum character length of the variable.
Date	
Example	Displays an example of the date according to the selected format.
Date	Defines the format used for displaying the date.

Table 25: Functions for dynamic Data Matrix codes

2.4.11 Create text object

Creates a text object in the current layer.

Summary

Use the function [Create text object] to create text objects in the user guidance step *Layout*. In addition to conventional texts and numbers, the text objects can also contain the serial number, the current date, and variables.

The texts are automatically assigned to the currently selected layer.

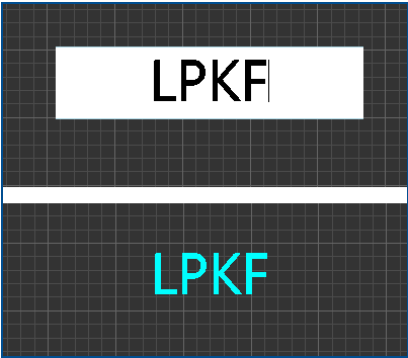


Fig. 51: Create text



Fig. 52: Toolbar *Create text object*

Icon	Name	Description
	Selected layer	Displays the currently selected layer. You can change this by opening a drop-down list with a left-click and selecting a different layer from the list.
	Font	Displays the currently selected font. You can change this by opening a drop-down list with a left-click and selecting a different font from the list.
	Font size	Displays the currently selected font size. Enter the desired value for the font size into the input field.
	Bold	Displays the currently selected text in bold letters.
	Italic	Displays the currently selected text in italics.
	Outline	Displays the currently selected text as an outline.
	Left	Aligns text objects to the left of the input field.
	Center	Aligns text objects to the center of the input field.
	Right	Aligns text objects to the right of the input field.

Table 26: Functions *Create text object*

With the functions in the right toolbar you can insert variable contents into the text object. Their values are not static but are adjusted at a certain point in time. Click on  to add a variable. Variables of the format *Number* can be additionally assigned a type (*Serial number*, *Batch*, or *Lot*). Click on  to add the variable into the text field.

Dynamic objects

Numbers

Type

SerialNumber

Description

Serial number

Length

9

Initial value

1

Reset each batch

☐

+

Text

Description

Text 1

Length

20

+

Date

Example

2020/06/29

Date

yyyy/MM/dd

+

Fig. 53: Settings for text objects with dynamic contents

Name	Description
Number	
Type	Defines the type of the variable. You can select between the following types: - Serial number At the start of each production, the serial number is incremented by one value. If there are several serial numbers and the length is changed, this value changes for all serial numbers. - Batch The value is incremented by 1 when the maximum number of serial numbers (length) has been reached. - Lot Indicates the number of fully produced batches. The value is incremented by 1 when the maximum number of batches has been reached.
Description	Indicates the description of the variable.
Length	Defines the maximum number of digits for this variable. Example: At a length of 3, the maximum value is 999.

Name	Description
Initial value	Defines the initial (starting) value of the variable.
Reset each batch	Activates/Deactivates resetting the serial number after each batch.
Batch size	Defines the maximum batch size. A batch has been produced, when the maximum serial number has been reached.
Reset each lot	Activates/Deactivates resetting the count after each lot.
Lot size	Defines the maximum lot size. A lot has been produced, when the maximum batch size has been reached.
Text	
Description	Specifies the description of the variable.
Length	Indicates the maximum character length of the variable.
Date	
Example	Displays an example of the date according to the selected format.
Date	Defines the format used for displaying the date.

Table 27: Functions for dynamic text objects



When adding dynamic objects, the user guidance step *Layout* only displays example values.

2.4.12 Fiducial

Displays a fiducial at the cursor position. Left-click to determine the center of the fiducial and to create the fiducial.

Summary

The total size of the fiducial can be defined by the diameter in *Options > Miscellaneous > Fiducial > Diameter*.

2.4.13 Automatic fiducial creation

Opens a dialog for automatic fiducial creation.

Summary

The dialog *Automatic fiducial creation* allows you to change the settings for the automatic fiducial creation.

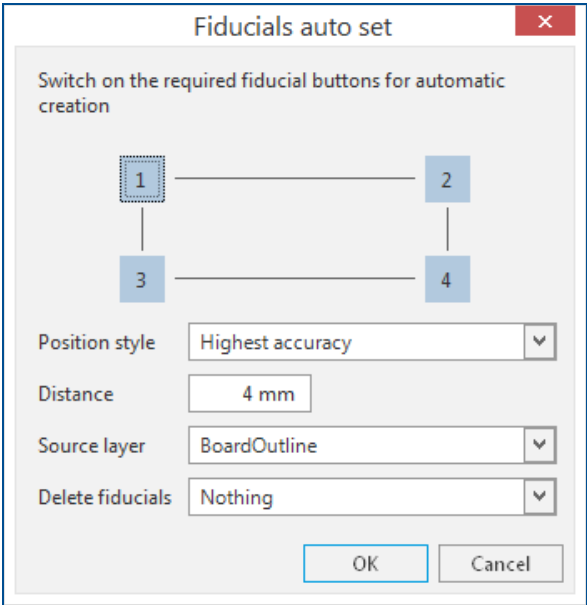


Fig. 54: Dialog *Automatic fiducial creation*

The following settings are available:

Name	Description
1, 2, 3, 4	Selects the fiducials that are to be created automatically.
Position style	Selects the criterion according to which the fiducials are to be placed. Highest accuracy: The fiducials are placed in a way that they can be captured with high accuracy in the camera image. Material efficient: The fiducials are placed so that the material is optimally used.
Distance	Indicates the (outer) distance between source layer and fiducials in x and y.
Source layer	Indicates the layer where fiducials are to be created.
Delete fiducials	Selects how to handle existing fiducials. None: The existing fiducials remain. All: All existing fiducials are deleted. Overlapping: Remaining fiducials that are automatically overlapping due to automatic creation are deleted.

Table 28: Dialog *Automatic fiducial creation*

2.4.14 Create fiducial with defaults

Creates a fiducial with standard camera settings.

Summary

To change standard values, open the user guidance step *Camera* and click [Library]. Select the entry marked as *Standard* and adopt the current camera settings by using [Apply] or [OK].

2.4.15 Create instance type...

Creates an instance type with the selected objects as a primary instance.

Summary

An instance type consists of a primary instance and at least one instance. Instances are references to the primary instance. The primary instance is produced at the position of the individual instance during processing.

Subsequent changes to the primary instance are applied only partially. Once you remove an object, this is applied immediately to the instance. If you want to add new objects, you have to dissolve the instance type and create it anew with the added objects

The fiducials contained in the primary instance are created as local fiducials and are also multiplied during processing.

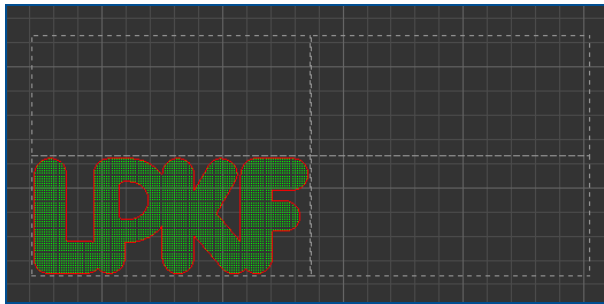


Fig. 55: Instance type (with primary instance and three instances)

You have to assign an instance type to an instance group in the user guidance step *Workflow* to be able to create toolpaths for it.

Instances provide several advantages over multiplied data (step and repeat):

- They require less memory. Thus, the data are loaded faster and their computation is accelerated.
- Toolpaths are computed only for the primary instance and are reused for the further instances. This accelerates the computation of the toolpaths significantly.

The created instances are displayed in the pane *Workflow setup*:

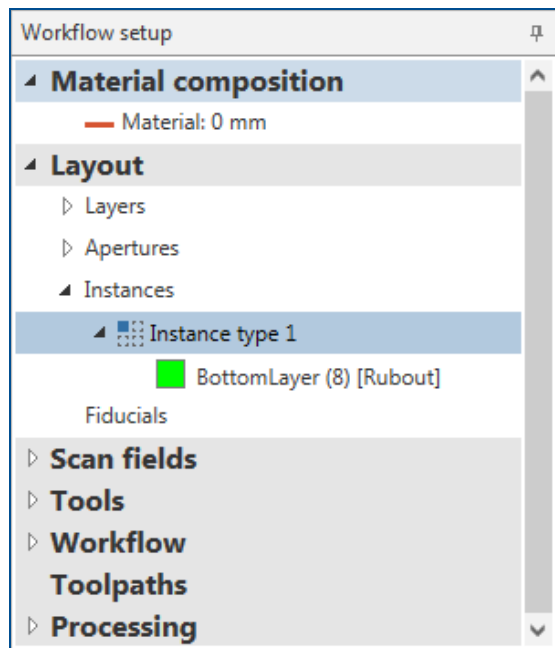


Fig. 56: Workflow setup | Create instance type

2.4.16 Rotate

Rotates one or multiple objects around a definable pivot point.

Summary

The marked objects/contours are rotated around one point. Thereby, you choose the position of the angle point and the rotation angle.

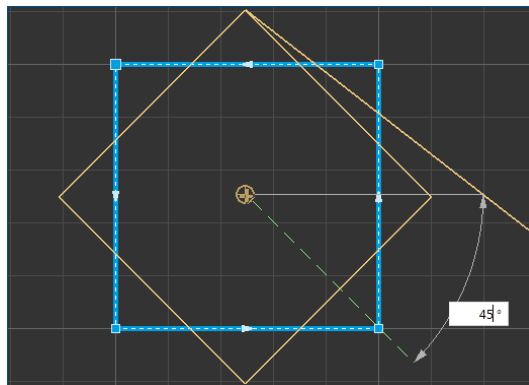


Fig. 57: Rotating an object/a contour

2.4.17 Move object

Moves the marked object/the marked contour by a defined distance and direction.

Summary

Before moving, a reference point has to be determined. This point can also be located outside of the marked object/contour and even be created on other objects/contours. After the reference point is determined, distance and direction can be specified. In the context menu, the object displacement can be set to the absolute coordinates with *Switch to absolute coordinates*.

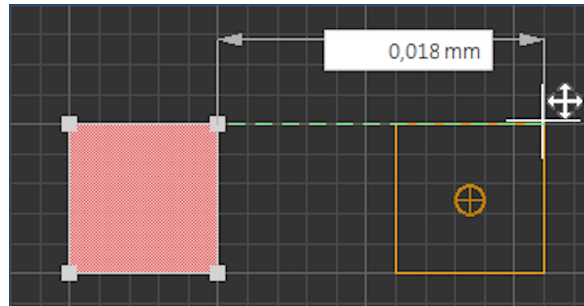


Fig. 58: Move object/contour

2.4.18 Mirror horizontal

Mirrors one or multiple objects around the horizontal axis of reflection (x axis).

Summary

The axis of reflection is located at the centroid of area of the selected object. If multiple objects are selected, a common centroid of area is calculated that is used for the reflection. The centroid of area can even be located outside of the objects.

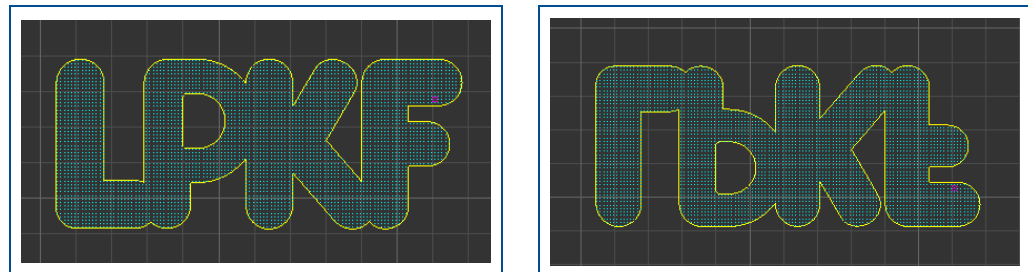


Fig. 59: Mirror object horizontally

2.4.19 Mirror vertical

Mirrors one or multiple objects around the vertical axis of reflection (y axis).

Summary

The axis of reflection is located at the centroid of area of the selected object. If multiple objects are selected, a common centroid of area is calculated that is used for the reflection. The centroid of area can even be located outside of the objects.

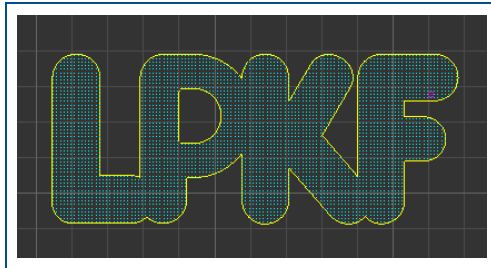


Fig. 60: Mirror object vertically

2.4.20 Scale

Scales up or scales down the marked object by the scale factor.

Summary

All lines of the object are scaled uniformly so they keep their original shape even after increasing/reducing the size.

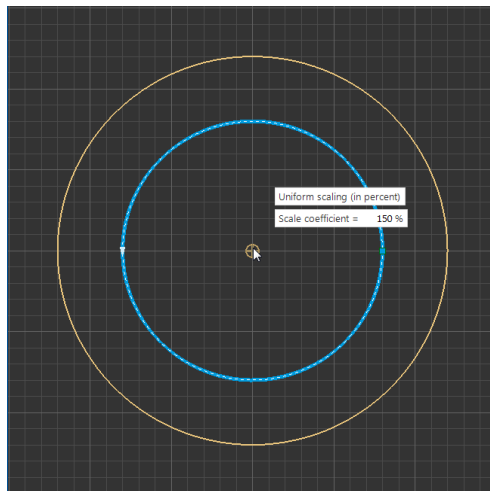


Fig. 61: Scaling object

2.4.21 Expand

Increases or decreases the marked object by a definable offset to the contour.

Summary

The marked object is increased or decreased uniformly around all sides. Increasing the object can cause a significant change of the shape.

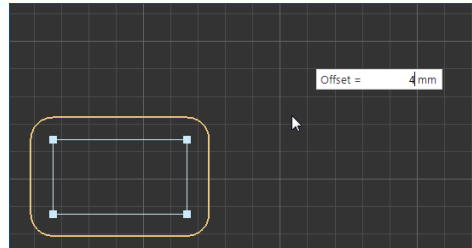


Fig. 62: Expanding an object

The function is only available if a single object is marked. Multiple objects cannot be expanded at the same time.

2.4.22 Round

Rounds the corners of the marked object.

Summary

You can specify the roundings and select the angles to be rounded.

A distinction is made between the outer and inner angles.

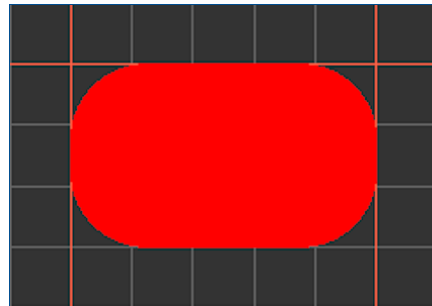


Fig. 63: Round angle

Outer angles have an angle smaller than 180° within the geometric object.

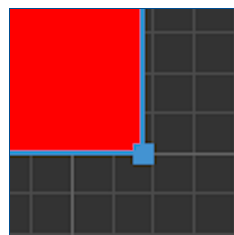


Fig. 64: Outer angle

Inner angle have an angle greater than 180° within the geometric object.

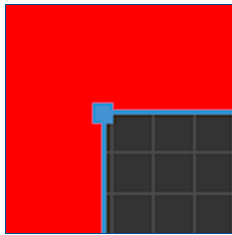


Fig. 65: Inner angle

2.4.23 Chamfer

Chamfers the corners of the marked object.

Summary

You can specify the length of the chamfered sides and the angle to be chamfered.

A distinction is made between the outer and inner angles.

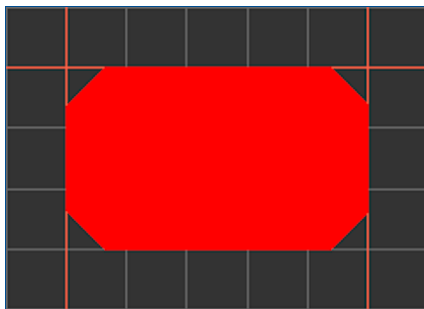


Fig. 66: Chamfer angle

Outer angles have an angle smaller than 180° within the geometric object.

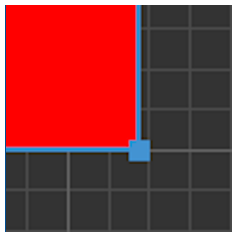


Fig. 67: Outer angle

Inner angle have an angle greater than 180° within the geometric object.

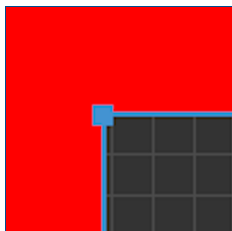


Fig. 68: Inner angle

2.4.24 Merge

Merges adjoining or overlapping objects to a single geometrical object.

Summary

[Merge] is only available if at least two geometrical objects are marked.

Merged objects can only be restored to the previous state with [Undo].

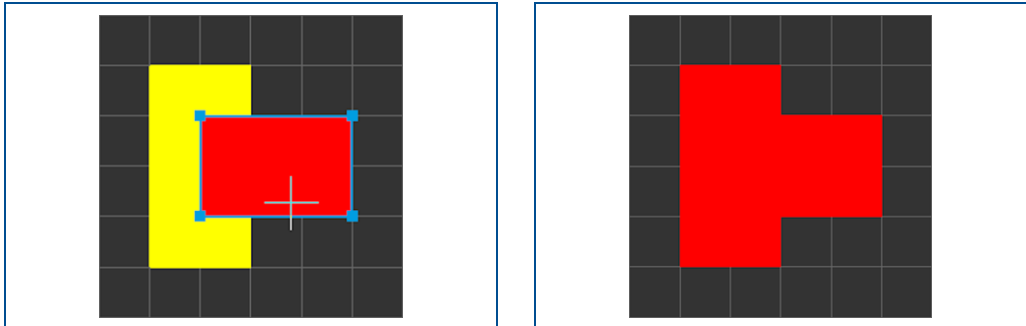


Fig. 69: Merge objects

The created object is assigned to the layer of the objects used. If the objects are located on different layers, the newly created object is assigned to the upmost layer used.

2.4.25 Difference

Removes the area of a geometrical object that is overlapped by a second selected object.

Summary

[Difference] is only available if a filled object is selected. If the function is activated, a second object has to be selected. The area where the objects are overlapping is deleted.

After using this function, the second object is deleted by default. This setting can be changed in the options.

Objects that have been edited with [Difference] can only be restored to the previous state with [Undo].

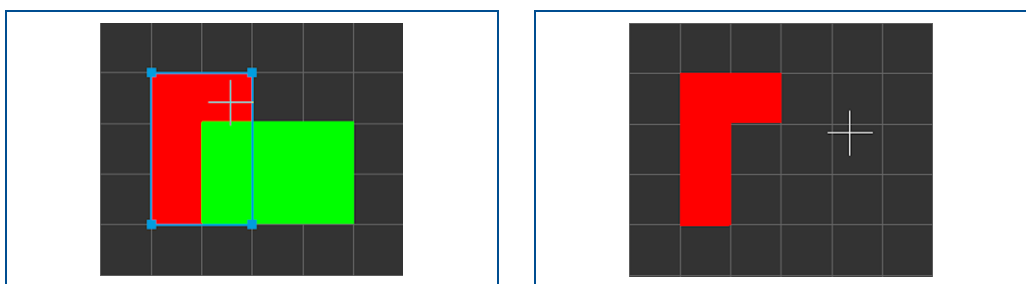


Fig. 70: Difference

2.4.26 Split

Splits a marked object by using a predefined path.

Summary

When splitting, the line located on the object to be split is drawn first. Later, this line shall be used as a dividing line. Then select the object and enable the [Split] function. Click the line to split the object at the position of the line.

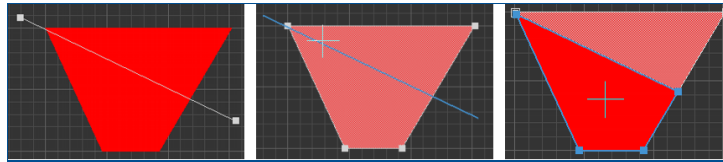


Fig. 71: Splitting an object

2.4.27 Add point

Adds a point on a marked line segment.

Summary

[Add point] is only available if a line or a point of a segment is marked.

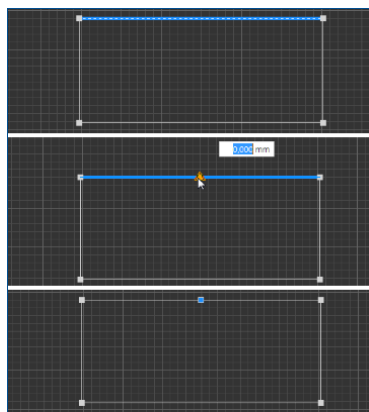


Fig. 72: Add point

2.4.28 Add mirror point

Adds two points with the same distance from the reference point.

Summary

[Add mirror point] is only available if a line or a point of a segment is marked.

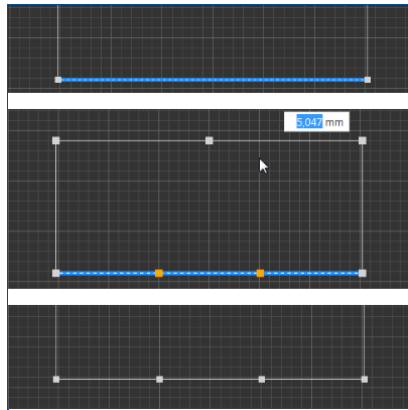


Fig. 73: Add mirror point

2.4.29 Move point

Moves a marked point.

Summary

The marked point can be moved by using the mouse or by entering the relative coordinates (default setting). In the context menu, you can use *Switch to absolute coordinates* to convert the point displacement to absolute coordinates. Several points can be selected, as long as they are located in the same object.

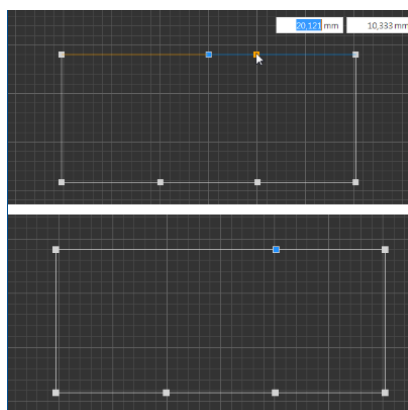


Fig. 74: Move point

2.4.30 Split path

Splits the marked line segment of a path.

Summary

The line segment can be split at the mouse position or by entering relative coordinates referring to the center of the path or the selected point.

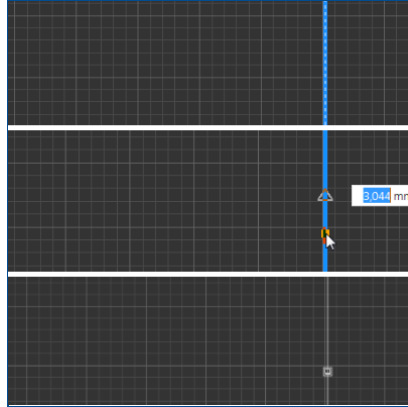


Fig. 75: Split path

[Split path] cannot be used for filled objects.

2.4.31 Convert to polygon

Fills a marked closed path.

Summary

[Convert to polygon] is only available if a closed path is marked.

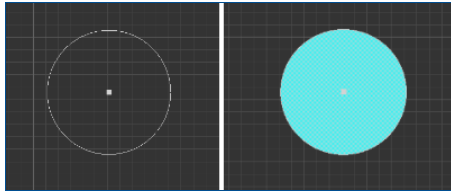


Fig. 76: Converting object to polygon

2.4.32 Convert to closed path

Removes the filling of filled objects.

Summary

[Convert to closed path] is only available for marked and filled objects.

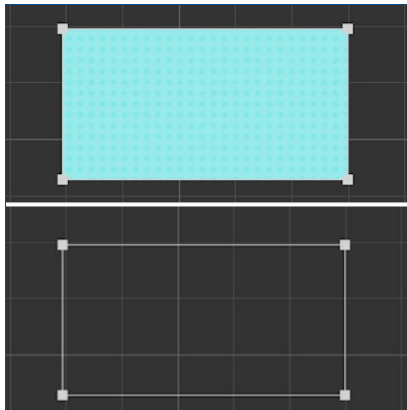


Fig. 77: Converting object to closed path

2.4.33 Group

Groups marked objects.

Summary

[Group] is only available if at least two objects are marked.

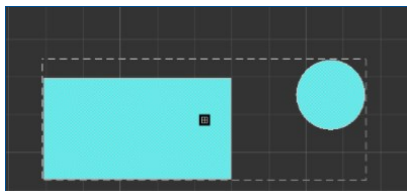


Fig. 78: Group objects

2.4.34 Ungroup

Ungroups objects.

Summary

[Ungroup] is only available if grouped objects are marked exclusively.

2.4.35 Show/Hide processing area

Shows/Hides the processing area.

Summary

The processing area is shown as blue square.

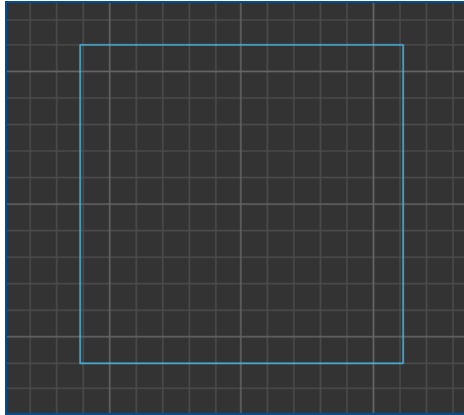


Fig. 79: Processing area

2.4.36 Step and Repeat

Multiplies selected objects. The spacing and the number of instances can be set.

Summary

In the dialog *Step and repeat*, the fields *Count* and *Distance* can be used to define how often and with what distance the copies are to be created. Different values for the copies in the x- and y-direction can be entered.

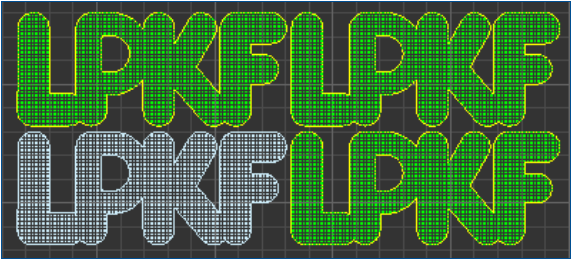


Fig. 80: Step and repeat

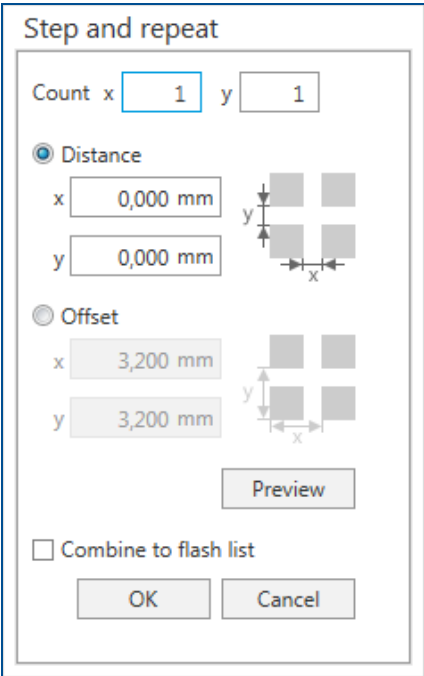


Fig. 81: Dialog Step and Repeat

Name	Description
Count	Shows the overall count of the objects in x and y direction including the original data.
Distance	Defines the distance between two created objects. The length and width of the original data are used as the initial values. If you do not change these values, the copies are right next to each other. Higher values create a space between the copies, lower values cause the copies to overlap.
Offset	Defines the offset between two created objects.
Preview	Displays a preview of the objects to be created.
Combine to flash list	Combines the original data to a flash list.

Table 29: Settings Step and Repeat

2.4.37 Invert selection

Inverts the selection and selects all objects outside the selection area.

Summary

The selection is inverted and all objects outside the selection area are selected.

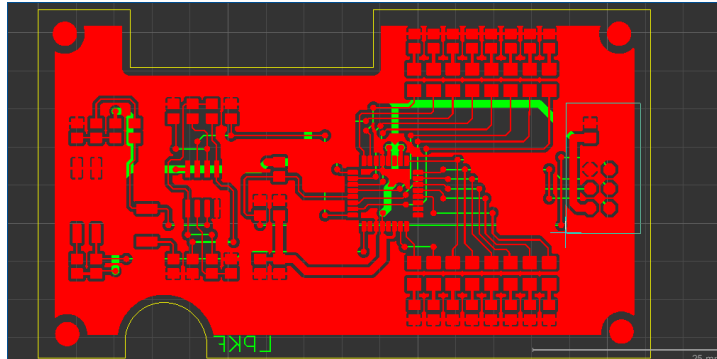


Fig. 82: Selection area

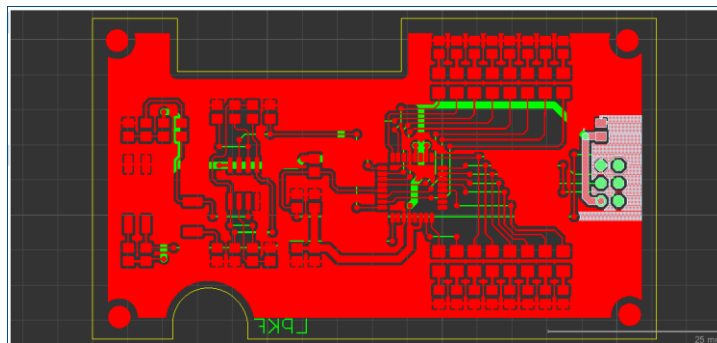


Fig. 83: Selection area highlighted

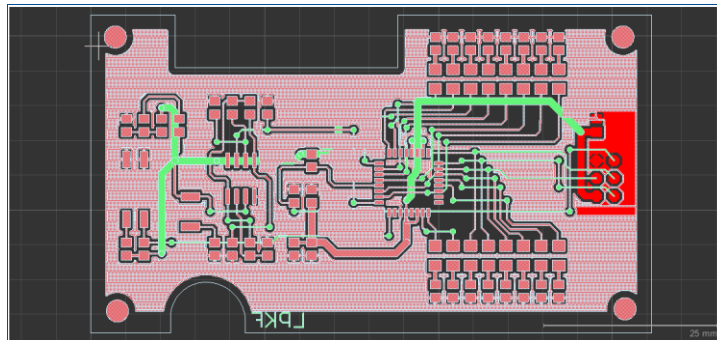


Fig. 84: Invert selection

2.4.38 Close open path

Connects both end points of an open path with a line.

Summary

[Close open path] is only available if an open path is marked. The marked object is converted to a closed path.

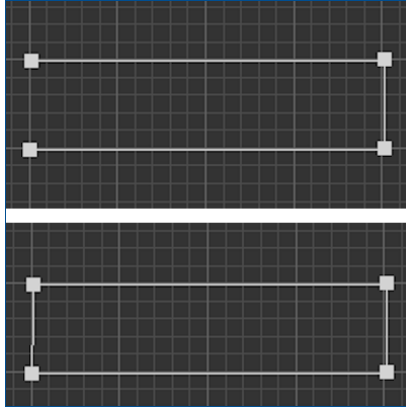


Fig. 85: Close open path

2.4.39 Convert to flash

Converts a marked object into a flash.

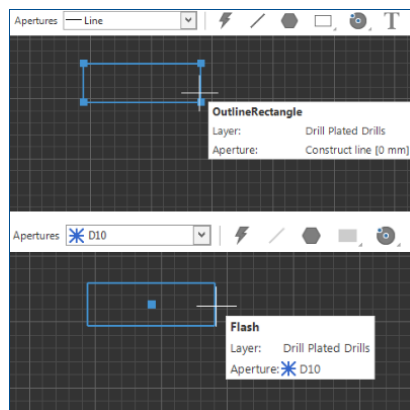


Fig. 86: Converting an object into a flash

2.4.40 Explode flash

Converts the flash into an object.

2.4.41 Compare to flash

Compares the marked flash with objects on the same layer. Objects of the same shape are converted into a flash.

Summary

Smaller deviations of the object's size and angles can be adapted by entering tolerance values in the dialog.

2.4.42 Create aperture

Opens the view *Aperture* to create a new aperture.

Summary

The marked objects are displayed in the view *Aperture* and can be edited before the aperture is saved.

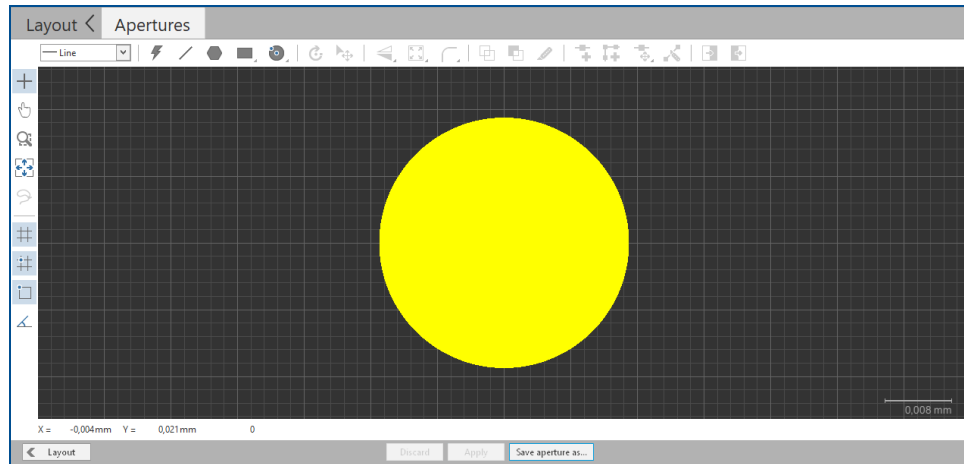


Fig. 87: View Aperture

2.4.43 Measure

Measures the distance, starting from the selected position.

Summary

The selected position is used as the initial point for measurement. As soon as you select another position, it is used as initial point for measurement.

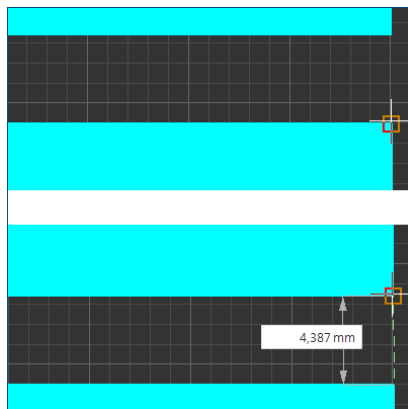


Fig. 88: Measure from point to point

2.5 Scan fields

In the user guidance step *Scan fields* you can compute scan fields for existing scan field sets and arrange them automatically or manually.

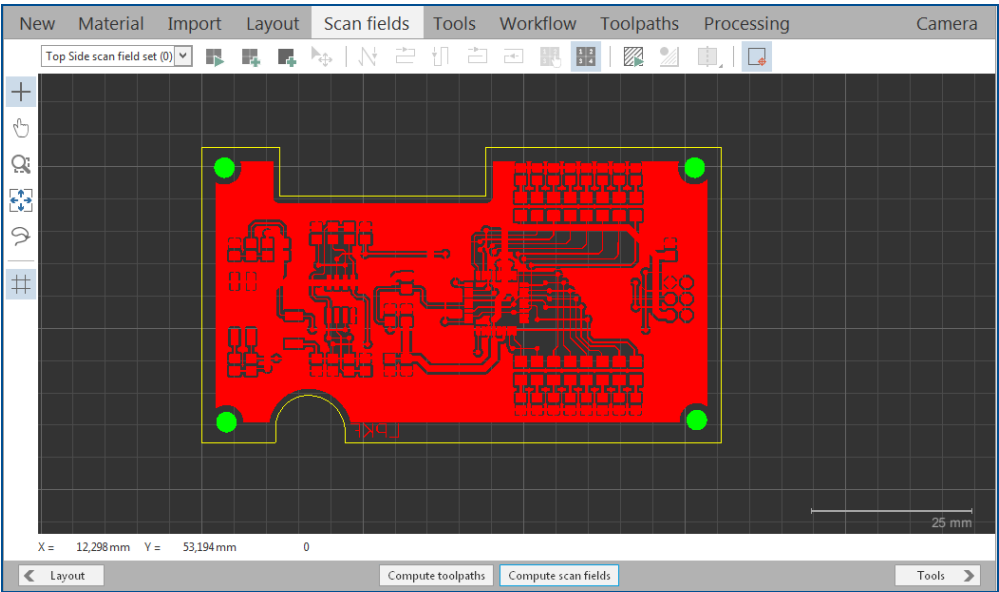


Fig. 89: User guidance step *Scan fields*

Icons with a small triangle (see following figure) can open a context menu with a right-click. It contains additional related functions.



The icons/functions of the toolbar are described in the following tables.

Icon	Name	Description
	Selected scan field	Selects the scan field to be computed.
	Compute scan fields	Computes the scan fields for the layers defined in the scan field set.
	Creating a scan field set	Creates a new scan field set. At least one layer must be assigned to the set.
	Create scan field manually	Allows you to create scan fields at the cursor position.
	Move object	Moves the marked object by a defined distance and direction.
	Special ProtoLaser sorting	Arranges the order of the scan fields automatically from the right upper side to the lower left side.
	Meander sorting in x	Arranges the order of the scan fields from top to bottom alternatingly in both x directions.
	Meander sorting in y	Arranges the order of the scan fields from left to right alternatingly in both y directions.
	Spiral sorting inwards	Arranges the order of the scan fields in an inward spiral.
	Spiral sorting outwards	Arranges the order of the scan fields in an outward spiral.

Icon	Name	Description
	Manual sorting of scan fields	Defines the processing order of the existing scan fields by clicking on them.
	Display scan fields	Displays the numbering of the scan fields.
	Compute all...	Computes the toolpaths based on the existing scan fields.
	Show/Hide the toolpaths	Shows/Hides the computed toolpaths.
	Display mode <i>True width</i>	Shows the objects in their real dimensions. Filled objects are displayed as filled.
	Display mode <i>Outline</i>	Shows the objects in their real dimensions. Filled objects are displayed only as paths.
	Display mode <i>Thin line</i>	Shows filled objects only as paths. Lines are displayed only as thin lines regardless of their actual line width.
	Show/Hide processing area	Shows/Hides the processing area.
Context menu	Step and repeat...	Multiplies selected scan fields.
Button	Computing toolpaths	Computes the toolpaths based on the existing scan fields.
Button	Computing scan fields	Computes the scan fields for the layers defined in the scan field set.

Table 30: User guidance step *Scan fields*

2.5.1 Move object

Moves the marked object/the marked contour by a defined distance and direction.

Summary

Before moving, a reference point has to be determined. This point can also be located outside of the marked object/contour and even be created on other objects/contours. After the reference point is determined, distance and direction can be specified. In the context menu, the object displacement can be set to the absolute coordinates with *Switch to absolute coordinates*.

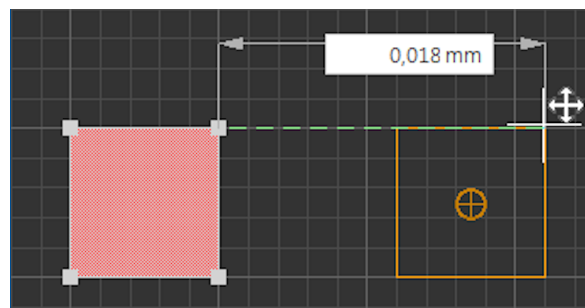


Fig. 90: Move object/contour

2.5.2 Compute all...

Computes the toolpaths based on the computed scan fields and work packages.

2.5.3 Show/Hide processing area

Shows/Hides the processing area.

Summary

The processing area is shown as blue square.

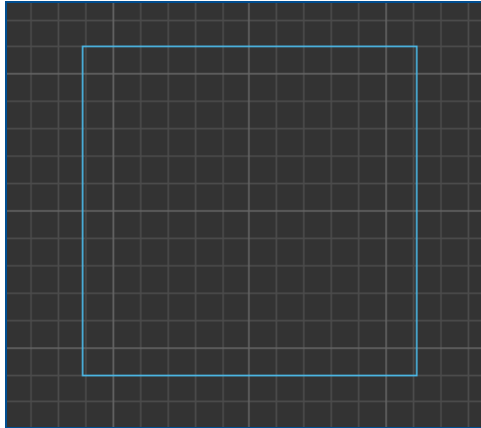


Fig. 91: Processing area

2.5.4 Step and repeat...

Multiplies selected scan fields. The spacing and the number of the multiplied scan fields can be set.

Summary

In the dialog *Step and Repeat*, you can define in the fields *Count* and *Distance* how many copies of the scan fields are created and the distance between them.

The values for the copies in x direction and y direction can be different. The objects within the scan fields are not multiplied.

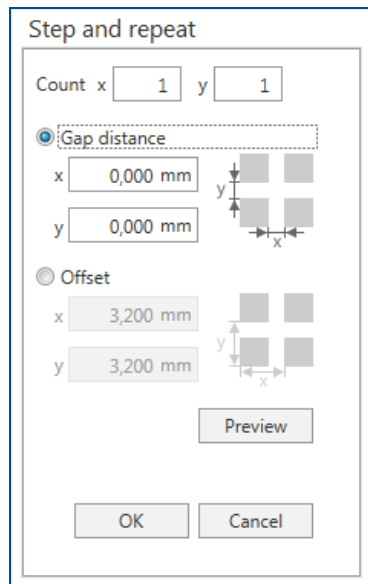


Fig. 92: Dialog *Step and Repeat*

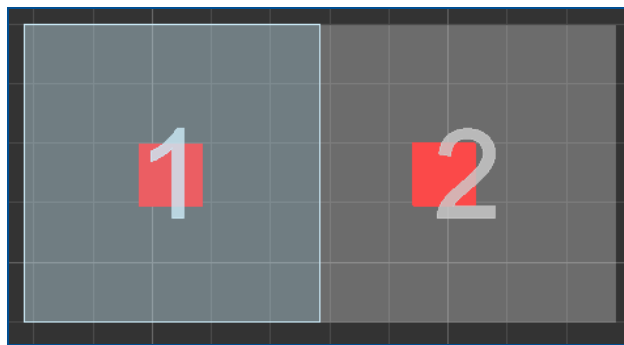


Fig. 93: Scan field multiplied with *Step and Repeat*

2.6 Workflow

In the user guidance step *Workflow* you can create and activate the work packages. Furthermore, you can arrange them in production groups and instance groups. These allow a more precise configuration of the processing order.

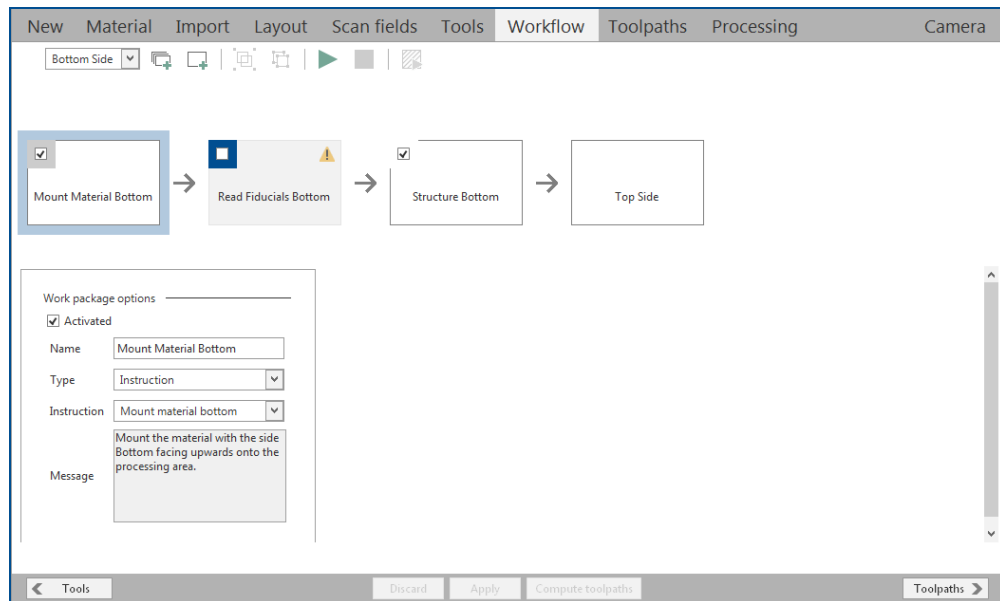


Fig. 94: User guidance step *Workflow*

The icons/functions of the user guidance step *Workflow* are described in the following tables.

Icon	Name	Description
	Add phase	Adds a new workflow phase.
	Add work package	Adds a new work package behind the current selection. In the work package, the tool or the action for the task can be selected. The following actions and tools are available: – Instruction – Drilling – Read fiducials – Expose fiducial – Cutting – Hatching
	Group work packages	Groups the selected work packages to a production group.
	Ungroup work packages	Ungroups the selected production group.
	Process selected objects	Processes the selected objects.
	Stop processing	Stops the current processing.
	Compute toolpaths	Computes the toolpaths of the production group /of the work package.
Button	Tools	Navigates to the user guidance step <i>Tools</i> .

Icon	Name	Description
Button	Discard	Restores the state that was saved last. Any changes that have not been saved are lost.
Button	Speichern	Saves the current settings.
Button	Compute toolpaths	Computes the toolpaths based on the existing scan fields.
Button	Toolpaths	Navigates to the user guidance step <i>Toolpaths</i> .

Table 31: User guidance step *Workflow*

The different types of work packages are explained in the following.

The following table describes the settings of the work package *Instruction*:

Name	Description
Activated	Activates/Deactivates the work package. Deactivated work packages are not executed during production.
Name	Specifies the name of the work package.
Type	Specifies the type of the work package. The type of the work package determines which tools and functions are available.
Instruction	Assigns a suitable instruction from a predefined list to the work package.
Message	Displays an additional explanation for the instruction.

Table 32: Work package type *Instruction*

The following table describes the settings of the work package *Laser drilling*:

Name	Description
Activated	Activates/Deactivates the work package. Deactivated work packages are not executed during production.
Test tool settings	Enables/Disables checking the tool settings.
Name	Specifies the name of the work package.
Type	Specifies the type of the work package. The type of the work package determines which tools are available.
Tool	Defines the tool that will be used for processing the active input layers.
Input layers	Displays the layers that can be processed with the selected tool. These must be set to the appropriate technology. Only active layers are processed.
Scan field set	Displays the scan field set that is used.

Table 33: Work package type *Laser drilling*

The following table describes the settings of the work package *Read fiducials*:

Name	Description
Name	Specifies the name of the work package.
Type	Specifies the type of the work package. The type of the work package determines which tools are available.
Scan field set	Displays the scan field set that is used.
Dynamic alignment	
Fiducial	Selects up to four fiducials from the drop-down list. Depending on the number of fiducials, different transformations (e.g. move, rotate and scale) can be applied.
Scale	Scales the layout data for processing based on the fiducials or based on a fixed factor (in x and y direction). The original data are not modified, only processing is modified based on these values.

Table 34: Work package of the type *Read fiducials*

The following table describes the settings of the work package *Expose fiducial*:

Name	Description
Activated	Activates/Deactivates the work package. Deactivated work packages are not executed during production.
Test tool settings	Enables/Disables checking the tool settings.
Name	Specifies the name of the work package.
Type	Specifies the type of the work package. The type of the work package determines which tools are available.
Tool	Defines the tool that will be used for processing the active input layers.
Input layers	Displays the layers that can be processed with the selected tool. These must be set to the appropriate technology. Only active layers are processed.
Scan field set	Displays the scan field set that is used.

Table 35: Work package of the type *Expose fiducials*

The following table describes the settings of the work package *Laser cutting*:

Name	Description
Activated	Activates/Deactivates the work package. Deactivated work packages are not executed during production.
Test tool settings	Enables/Disables checking the tool settings.
Name	Specifies the name of the work package.
Type	Specifies the type of the work package. The type of the work package determines which tools are available.
Tool	Defines the tool that will be used for processing the active input layers.
Input layers	Displays the layers that can be processed with the selected tool. These must be set to the appropriate technology. Only active layers are processed.
Scan field set	Displays the scan field set that is used.
Parameters	
Position	Specifies whether processing has to be performed <i>inwards</i> , <i>outwards</i> , or <i>in the center</i> .
Channel width	Specifies the channel width in [µm].
Target beam overlap	Specifies the target value of the beam overlap in [%].
Actual beam overlap	Indicates the actual value of the beam overlap in [%].
Sorting	Selects between the sorting methods <i>Inside out</i> and <i>Outside in</i> .
Unidirectional	If this check box is checked, sorting can only be performed in one direction.
Tabs position	Selects between the following tab positions: – NoGaps – Equal Distance – Indefinite – Corners – AllSides – VerticalSides – HorizontalSides
Tab width	Indicates the tab width in [mm].
Distance	Indicates the distance in [mm].

Table 36: Work package of the type *Laser cutting*

The following table describes the settings of the work package *Laser structuring*:

Icon/Name	Description
Isolate	
Input layers	Selects from a list the layers to be processed with the tool <i>Isolate</i> .
Isolation width	Indicates the isolation width in [µm].
Pad isolation	Indicates the pad isolation in [µm].
Target beam overlap	Specifies the target value of the beam overlap in [%]. 0% means no beam overlap.
Actual beam overlap	Indicates the actual value of the beam overlap in [%].
Isolation distance scan field to scan field	Specifies the isolation distance between the scan fields.
Remove small omissions	Activates/Deactivates removing small omissions during laser structuring.
Printed circuit board	
Restrict by PCB boundaries	Activates/Deactivates a boundary for structuring.
Outline layer	Specifies the layer that contains the outline of the printed circuit board.
Hatching	
Generate	Activates hatching.
Hatching layer	Specifies the layer where the hatching is to be generated.
Hatching grid (default: ½ beam Ø)	Specifies the hatching grid in [µm].
Minimum strip width	Indicates the minimum strip width during laser structuring.
Maximum strip length	Indicates the maximum strip length during laser structuring.
Maximum strip length in special areas	Indicates the maximum strip length in special areas.
Angle with y axis	Indicates the angle to the y axis.
Short/Normal heat threshold	Indicates the threshold where the system switches between normal and short heating.
Use wobble in narrow channels	Activates/Deactivates the wobble technology for narrow channels.
Maximum channel width	Indicates the maximum value up to which channels are defined as narrow channels.
Extension for open channels	Indicates the extension for open channels in [%].
Extension for closed channels	Indicates the extension for closed channels in [%].

Icon/Name	Description
Tools	
	Adds a new tool.
	Inserts a production splitter between the tools.
	Deletes the selected tool.
Drop-down list	Selects between the following tools: – Isolate – Narrow Channel – Hatch – Divide – Heat – ShortHeat – PreCut

Table 37: Work package of the type *Laser structuring*

The following table describes the settings of the work package *Mechanical fiducial drilling*:

Icon/Name	Description
Activated	Activates/Deactivates the work package. Deactivated work packages are not executed during production.
Name	Specifies the name of the work package.
Type	Specifies the type of the work package. The type of the work package determines which tools are available.
Tool	Defines the tool that will be used for processing the active input layers.
Input layers	Displays the layers that can be processed with the selected tool. These must be set to the appropriate technology. Only active layers are processed.

Table 38: Work package of the type *Mechanical fiducial drilling*

The following table describes the settings of the work package *Mechanical drilling*:

Icon/Name	Description
Activated	Activates/Deactivates the work package. Deactivated work packages are not executed during production.
Name	Specifies the name of the work package.
Type	Specifies the type of the work package. The type of the work package determines which tools are available.
Tool	Defines the tool that will be used for processing the active input layers.
Input layers	Displays the layers that can be processed with the selected tool. These must be set to the appropriate technology. Only active layers are processed.
Parameters	
Generate marking drills	Creates a marking drill in the center of the hole. The marking drill prevents the mechanical head from slipping.
Marking tool	Specifies the tool that is used for generating marking drills.
Laser beam overlap	Specifies the laser overlap when using laser tools for generating marking drills.

Table 39: Work package of the type *Mechanical Drilling*

The following table describes the settings of the work package *Mechanical cutting*:

Icon/Name	Description
Activated	Activates/Deactivates the work package. Deactivated work packages are not executed during production.
Name	Specifies the name of the work package.
Type	Specifies the type of the work package. The type of the work package determines which tools are available.
Tool	Defines the tool that will be used for processing the active input layers.
Input layers	Displays the layers that can be processed with the selected tool. These must be set to the appropriate technology. Only active layers are processed.
Parameters	
Position	Indicates if processing has to be performed <i>outside in</i> or <i>inside out</i> .
Tabs position	Selects between the following tab positions: – NoGaps – Equal Distance – Corners – AllSides – VerticalSides – HorizontalSides
Tab width	Indicates the tab width in [mm].
Distance	Indicates the distance in [mm].
Generate start drills	Activates/Deactivates the start drills (marking drills) during production.

Table 40: Work package of the type *Mechanical cutting*

The following table describes the settings of the work package *Deburr*:

Icon/Name	Description
Activated	Activates/Deactivates the work package. Deactivated work packages are not executed during production.
Test tool settings	Enables/Disables checking the tool settings.
Name	Specifies the name of the work package.
Type	Specifies the type of the work package. The type of the work package determines which tools are available.
Tool	Defines the tool that will be used for processing the active input layers.
Input layers	Displays the layers that can be processed with the selected tool. These must be set to the appropriate technology. Only active layers are processed.
Scan field set	Displays the scan field set that is used.
Parameters	
Isolation width	Indicates the isolation width in [µm].
Contour Router overlap	Indicates the overlap of the Contour Router during deburring.

Table 41: Work package of the type *Deburr*

A processing group is created with the function [Group] when at least two work packages are selected. The following table describes the settings for processing groups:

Name	Description
Group options	
Activated	Activates/Deactivates the work packages within a processing group. Deactivated processing groups are not executed during processing.
Name	Defines the name of the processing group.
Scan field set	Displays the scan field set that is used.
Sorting policy	Specifies the sorting method for the processing group. A scan field oriented processing causes the scan field to be completely processed with all tools. A tool oriented processing causes all scan fields to be processed with the current tool. Only when all scan fields have been processed with this tool, processing continues with the next tool.

Table 42: Work package of the type *Processing group*

2.6.1 Computing toolpaths

Computes the toolpaths of the production group/of the work packages.

2.6.2 Move object

Moves the marked object/the marked contour by a defined distance and direction.

Summary

Before moving, a reference point has to be determined. This point can also be located outside of the marked object/contour and even be created on other objects/contours. After the reference point is determined, distance and direction can be specified. In the context menu, the object displacement can be set to the absolute coordinates with *Switch to absolute coordinates*.

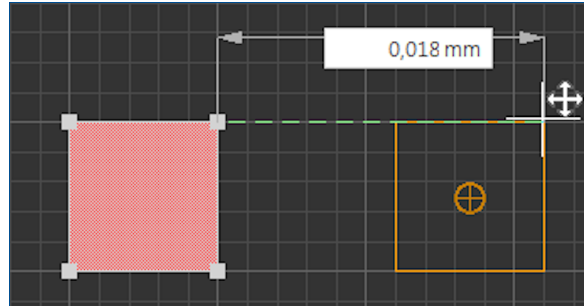


Fig. 95: Move object/contour

2.6.3 Compute all...

Computes the toolpaths based on the computed scan fields and work packages.

2.6.4 Show/Hide processing area

Shows/Hides the processing area.

Summary

The processing area is shown as blue square.

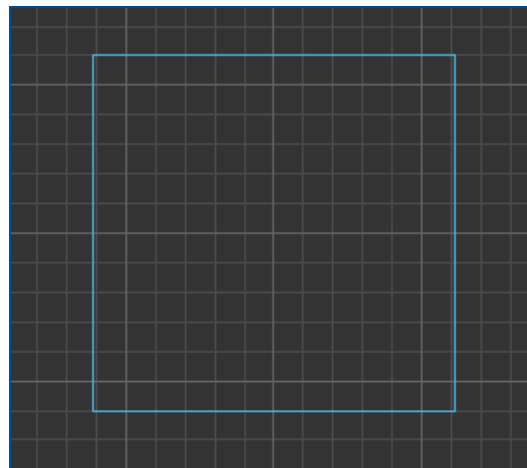


Fig. 96: Processing area

2.6.5 Step and repeat...

Multiplies selected scan fields. The spacing and the number of the multiplied scan fields can be set.

Summary

In the dialog *Step and Repeat*, you can define in the fields *Count* and *Distance* how many copies of the scan fields are created and the distance between them.

The values for the copies in x direction and y direction can be different. The objects within the scan fields are not multiplied.

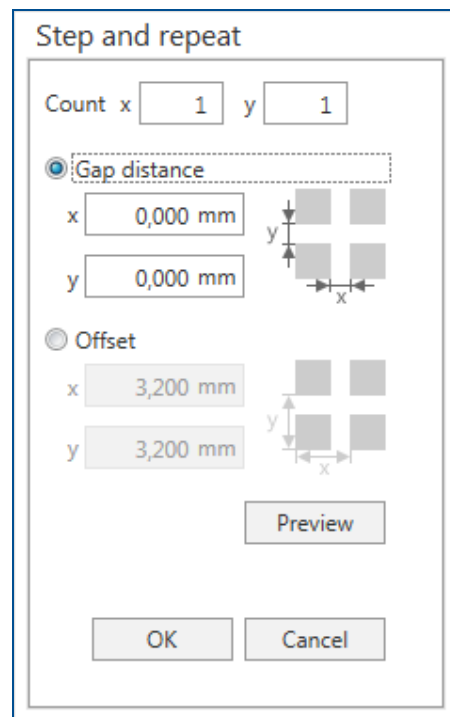


Fig. 97: Dialog *Step and Repeat*

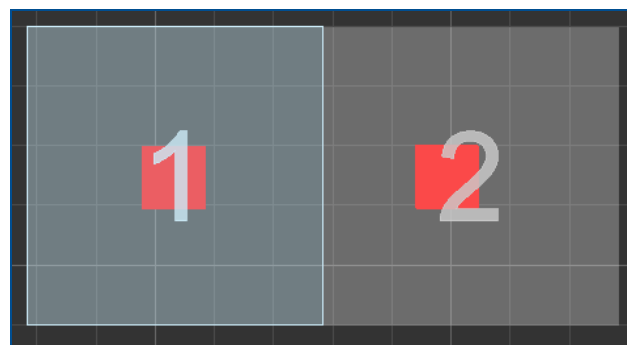


Fig. 98: Scan field multiplied with *Step and Repeat*

2.7 Tools

In the user guidance step *Tools*, you can create and edit cutting, structuring, and isolation tools. You have to define tasks for the individual tools. Assign different parameter values to the tasks. These include:

- Laser parameters
- Process parameters
- Scanner parameters
- Wobble technology parameters
- Common parameters

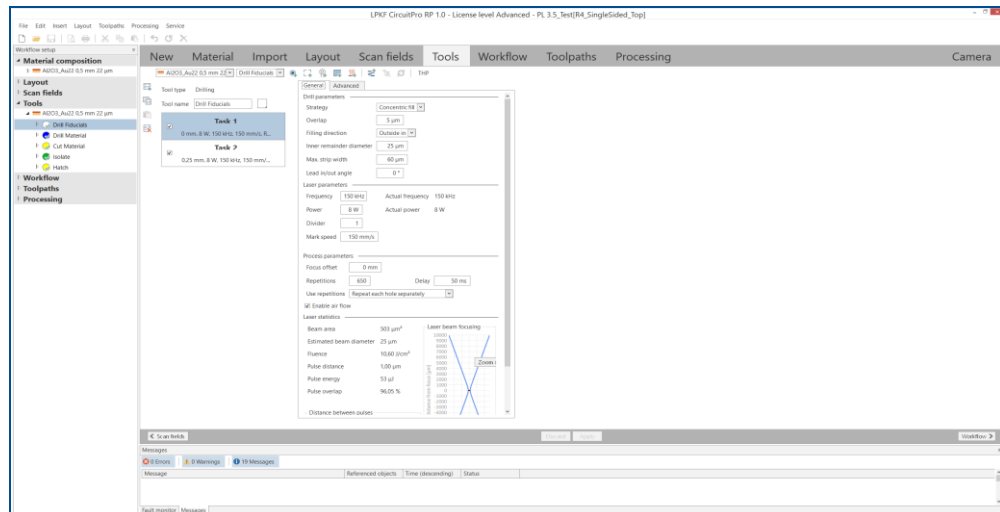


Fig. 99: User guidance step *Tools*

Changes have to be saved with [Apply] before switching to another user guidance step.

The icons/functions of the toolbar are described in the following table.

Icon	Name	Description
	Drilling tool	Creates a new drilling tool.
	Cutting tool	Creates a new cutting tool.
	Isolation tool	Creates a new isolation tool.
	Hatching tool	Creates a new hatching tool.
	Heating tool	Creates a new heating tool.
	Duplicate tool	Creates a copy of the selected tool.
	Remove tool	Removes a tool copy.
	Copy tool to the global catalog	Copies the local tool to the global catalog.
	Through-hole plating	Opens the tab <i>THP Settings</i> .
	Create new task	Creates a new task with the currently selected tool.

Icon	Name	Description
	Duplicate existing task	Copies the currently selected task to the clipboard.
	Paste task	Pastes a task from the clipboard.
	Remove existing task	Deletes the currently selected task.
Button	Scan fields	Navigates to the previous user guidance step <i>Scan fields</i> .
Button	Discard	Restores the state that was saved last. Any changes that have not been saved are lost.
Button	Apply	Saves the current settings.
Button	Workflow	Navigates to the following user guidance step <i>Workflow</i> .

Table 43: User guidance step *Tools*

General

The following table describes the tool and process parameters of the tab *General*:

Name	Description
Drill parameters	
Strategy	Defines how the holes are processed. The following strategies can be applied: <i>Outline</i>: The outline of the hole is processed. <i>Concentric fill</i>: Several circle paths with the same center but different radii are executed to fill the drill hole. <i>Spiral</i>: The drill hole is filled with a spiraling movement.
Overlap	Defines how far the laser beam overlaps the previous pass when filling the drill holes.
Filling direction	Defines the processing direction of filling. You can define whether the drill holes are filled <i>Outside in</i> or <i>Inside out</i> .
Inner remainder diameter	Defines the inner remainder diameter of the circle in [μm]. If the value is 0, the circle area is processed completely. Any higher value produces an area in the center of the circle that is not processed.
Max. strip width	Shows the maximum strip width in [μm].
Lead in/out angle	Indicates the lead in angle and lead out angle in [°].
Laser parameters	
Frequency	Sets the pulse frequency of the laser in [kHz].
Power	Sets the power of the laser in [W].
Divider	Specifies a divider for the power and frequency of the laser. A divider of 2 divides the power and frequency by 2.
Mark speed	Sets the mark speed of the laser in [mm/s].
Process parameters	
Focus offset	Changes the height of the laser focus in addition to the material height and table height. Changing this value may cause the focus point to be no longer exactly on the material.

Name	Description
Repetition	Determines the number of repetitions of the task.
Delay	Determines the length of the pause between two repetitions of a task in [ms].
Use repetitions	Defines how processing is repeated. - Repeat each hole separately - Repeat each hole in each repetition
Enable air flow	Enables the air flow for the tool.
Laser statistics	
Beam area	Indicates the beam area of the laser in [μm^2].
Estimated beam diameter	Indicates the estimated beam diameter of the laser in [μm].
Fluence	Indicates the fluence of the laser in [J/cm^2].
Pulse distance	Indicates the pulse distance of the laser in [μm].
Pulse energy	Indicates the pulse energy of the laser in [μJ].
Pulse overlap	Indicates the pulse overlap of the laser in [%].
Distance between pulses	Displays a graph that shows the size and the distance between the laser pulses.
Laser beam focusing	Displays a graph that shows the beam diameter of the laser in [μm] at different distances to the focus in [μm].

Table 44: Tool parameters | General

Advanced

The following table describes the parameters of the tab *Advanced*:

Name	Description
Common parameters	
Beam diameter	Determines the beam diameter in [µm].
Skywriting	Activates the skywriting function. This computes the toolpaths in such a way that the start moves (blue) and end moves (green) are outside the paths to be processed. This causes a slight increase in processing time.
Polygon mode	Activates the skywriting function not only for starting and leaving the toolpath but also for structuring corners.
Wobble technology parameters	
Wobble	Activates the wobble function.
Channel width	Defines the channel width during wobbling.
Frequency	Sets the frequency of the laser during wobbling.
Extended parameters	Activates the use of extended parameters during wobbling.
Width	Defines the width during wobbling.
Harmonic	Determines the harmonic during wobbling.
Repetition alternate	Activates the change of direction after each repetition during wobbling.
Repetition offset	Indicates the offset for repetitions during wobbling.
Scanner parameters	
Jump speed	Determines the maximum speed of the jump movements in [mm/s].
Jump delay	Determines the delay to be compensated for a jump in [µs].
Laser on delay	Determines the delay of the laser source that is to be compensated at the start of a structuring in [µs].
Laser off delay	Determines the delay of the laser source that is to be compensated at the end of a structuring in [µs].
Mark delay	Determines the delay to be compensated for the drag error in [µs].
Polygon delay	Determines the delay of the laser source that is to be compensated for polygons in [µs].

Table 45: Tool parameters | Advanced

2.8 Laser tools

In the user guidance step *Laser tools* the laser tools can be created and edited. You have to define tasks for the individual tools.

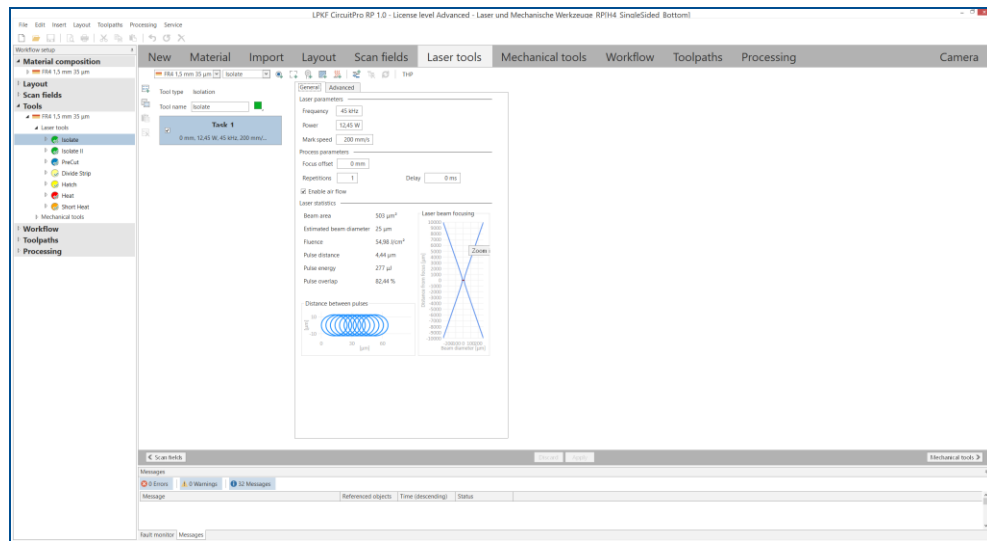


Fig. 100: User guidance step *Laser tools*

Changes have to be saved with [Save] before switching to another user guidance step.

The icons/functions of the toolbar are described in the following table.

Icon	Name	Description
	Drilling tool	Creates a new drilling tool.
	Cutting tool	Creates a new cutting tool.
	Isolation tool	Creates a new isolation tool.
	Hatching tool	Creates a new hatching tool.
	Heating tool	Creates a new heating tool.
	Duplicate tool	Creates a copy of the selected tool.
	Remove tool	Removes a tool copy.
	Copy tool to the global catalog	Copies the local tool to the global catalog.
	Through-hole plating	Opens the tab <i>THP Settings</i> .
	Create new task	Creates a new task with the currently selected tool.
	Duplicate existing task	Copies the currently selected task to the clipboard.
	Paste task	Pastes a task from the clipboard.

Icon	Name	Description
	Remove existing task	Deletes the currently selected task.
Button	Scan fields	Navigates to the previous user guidance step <i>Scan fields</i> .
Button	Discard	Restores the state that was saved last. Any changes that have not been saved are lost.
Button	Apply	Saves the current settings.
Button	Workflow	Navigates to the following user guidance step <i>Workflow</i> .

Table 46: Symbols/Functions in the user guidance step *Laser tools*

General

The following table describes the tool and process parameters of the tab *General*:

Name	Description
Laser parameters	
Frequency	Sets the pulse frequency of the laser in [kHz].
Power	Sets the power of the laser in [W].
Mark speed	Sets the mark speed of the laser in [mm/s].
Process parameters	
Focus offset	Changes the height of the laser focus in addition to the material height and table height. Changing this value may cause the focus point to be no longer exactly on the material.
Repetition	Determines the number of repetitions of the task.
Delay	Determines the length of the pause between two repetitions of a task in [ms].
Enable air flow	Enables the air flow for the tool.
Laser statistics	
Beam area	Indicates the beam area of the laser in [μm^2].
Estimated beam diameter	Indicates the estimated beam diameter of the laser in [μm].
Fluence	Indicates the fluence of the laser in [J/cm^2].
Pulse distance	Indicates the pulse distance of the laser in [μm].
Pulse energy	Indicates the pulse energy of the laser in [μJ].
Pulse overlap	Indicates the pulse overlap of the laser in [%].
Distance between pulses	Displays a graph that shows the size and the distance between the laser pulses.
Laser beam focusing	Displays a graph that shows the beam diameter of the laser in [μm] at different distances to the focus in [μm].

Table 47: Tool parameters | *General*

Advanced

The following table describes the parameters of the tab *Advanced*:

Name	Description
Common parameters	
Beam diameter	Determines the beam diameter in [μm].
Skywriting	Activates the skywriting function. This computes the toolpaths in such a way that the start moves (blue) and end moves (green) are outside the paths to be processed. This causes a slight increase in processing time.
Polygon mode	Activates the skywriting function not only for starting and leaving the toolpath but also for structuring corners.
Wobble technology parameters	
Wobble	Activates the wobble function.
Channel width	Defines the channel width during wobbling.
Frequency	Sets the frequency of the laser during wobbling.
Extended parameters	Activates the use of extended parameters during wobbling.
Width	Defines the width during wobbling.
Harmonic	Determines the harmonic during wobbling.
Repetition alternate	Activates the change of direction after each repetition during wobbling.
Repetition offset	Indicates the offset for repetitions during wobbling.
Scanner parameters	
Jump speed	Sets the maximum speed of the jump movements in [mm/s].
Jump delay	Defines the delay to be compensated for a jump in [μs].
Laser on delay	Determines the delay of the laser source that is to be compensated at the start of a structuring in [μs].
Laser off delay	Determines the delay of the laser source that is to be compensated at the end of a structuring in [μs].
Mark delay	Determines the delay to be compensated for the tracking error in [μs].
Polygon delay	Determines the delay of the laser source that is to be compensated for polygons in [μs].

Table 48: Tool parameters | *Advanced*

2.8.1 Jump speed

This value determines the speed of the mirrors inside the scanner when jumping between two vectors.



The valid value range is between 1 mm/s and 6 000 mm/s.

2.8.2 Jump delay

This value determines the waiting time at the end of a jump between two vectors. The jump delay is necessary to provide the mirrors inside the scanner with a settle time in order to prevent oscillations in the next vector.

A jump delay that is too low causes oscillations in the next vector:

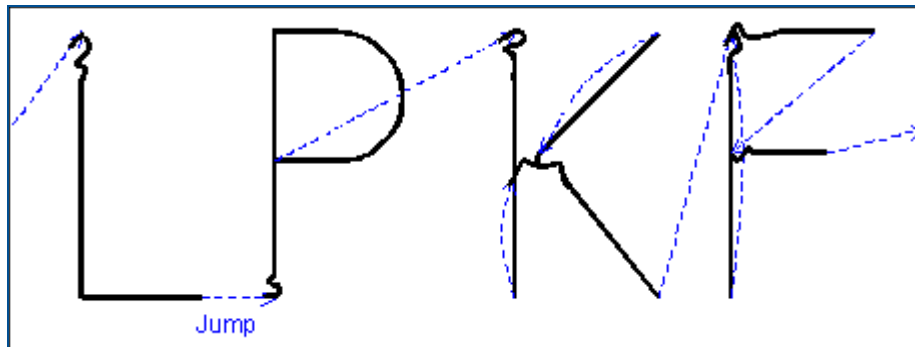


Fig. 101: Jump delay too low

A value that is too high has no negative impact on the processing quality. However, the process time increases.



The valid value range is between 1 μ s and 1 000 000 μ s.

Recommended value: 1000 μ s.

2.8.3 Laser on delay

This value determines the waiting time at the start of a vector, before the laser safety shutter is opened and the laser radiation is emitted. Due to their acceleration phase, the mirrors inside the scanner only reach the *Mark speed* with a delay. The laser safety shutter is only opened when the speed is reached.

A laser on delay that is too high causes the toolpaths not to be processed at the beginning of a vector:

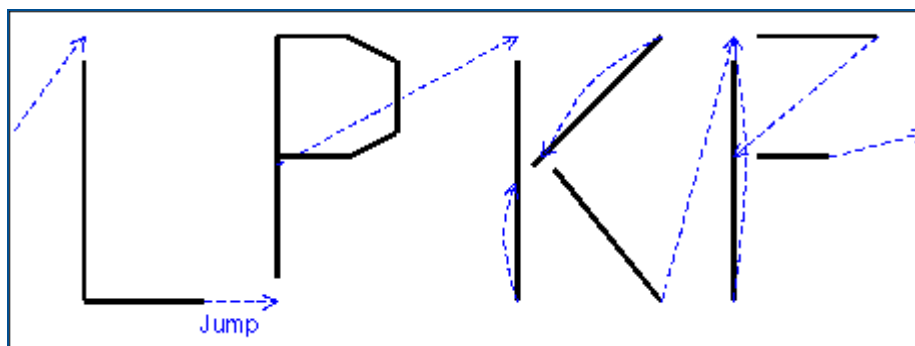


Fig. 102: Laser on delay too high

A laser on delay that is too low causes the laser to emit although the mirrors have not yet reached their necessary mark speed.

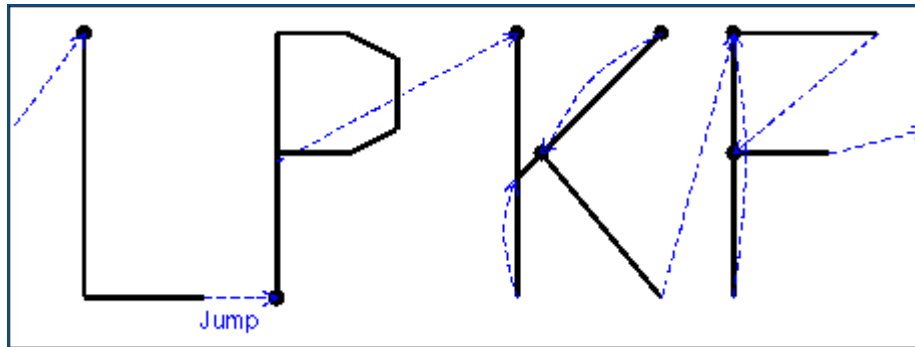


Fig. 103: Laser on delay too low



The valid value range is between 0 μ s and 1 000 μ s.

Recommended value: 50 μ s.

2.8.4 Laser off delay

This value determines the waiting time at the end of a vector, before the laser safety shutter is closed for the following jump to the next vector. Because of the tracking error, the mirrors inside the scanner only reach the end of a vector with a delay. To prevent parts at the end of the vector from not being processed, the laser safety shutter is only closed after the specified waiting time.

A laser off delay that is too high causes burn marks at the end of the vectors because the laser safety shutters stay opened although the mirrors inside the scanner have already reached their end position.

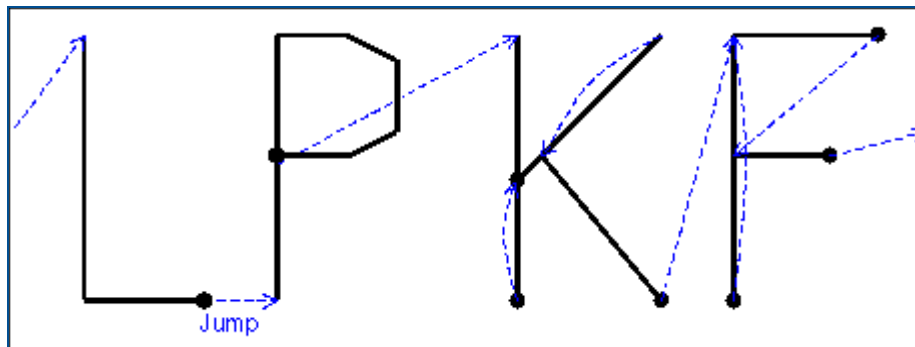


Fig. 104: Laser off delay too high

A laser on delay that is too low is not processing the toolpath completely –parts at the end of the vector are missing.

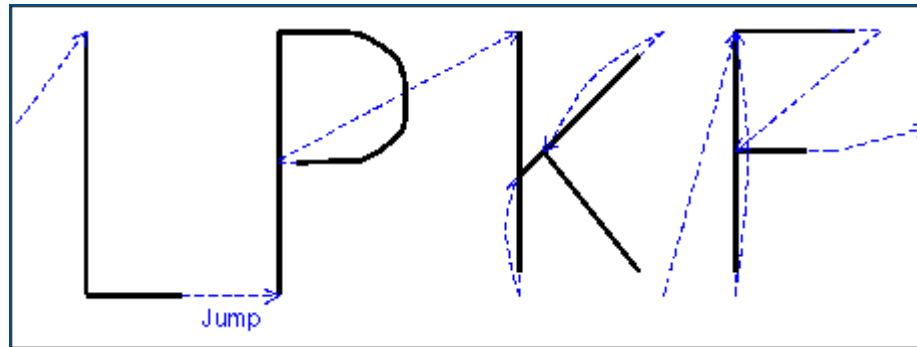


Fig. 105: Laser off delay too low



The valid value range is between 0 μ s and 1 000 μ s.

Recommended value: 100 μ s.

2.8.5 Mark delay

This value determines the speed of the laser beam when processing the vectors and is decisive for material processing. The lower this mark speed is set, the more the energy is applied to the target material per area. The overlap of the single pulses is increased.



The valid value range is between 1 mm/s and 2 000 mm/s.

Recommended value: Depending on the application.

2.8.6 Polygon delay

This value determines the waiting time between the individual vectors of a sequence of vectors. A tracking error occurs as a result of the change in direction between individual vectors of a vector sequence. The polygon delay compensates this tracking error, thus preventing the formation of radii at the transitions between the individual vectors.

A polygon delay that is too high leads to burn marks between the vectors:

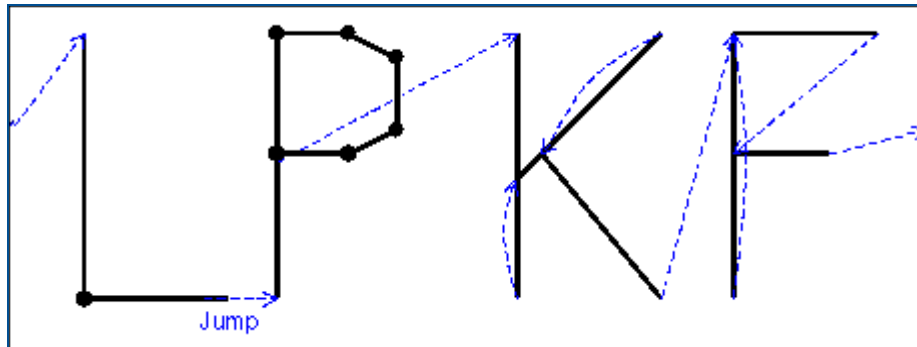


Fig. 106: Polygon delay too high

A polygon delay that is too low leads to radii at the transitions between the individual vectors:

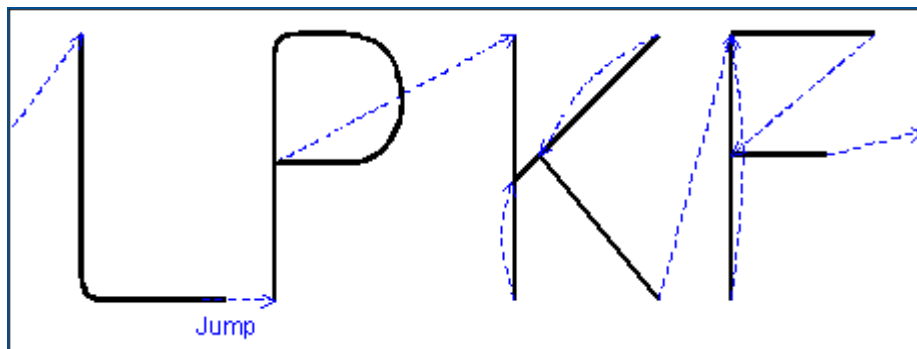


Fig. 107: Polygon delay too low



The valid value range is between 0 μ s and 1 000 μ s.

Recommended value: 0 μ s.

2.9 Mechanical tools

In the user guidance step *Mechanical tools*, the mechanical tools can be created and edited. You have to define tasks for the individual tools.

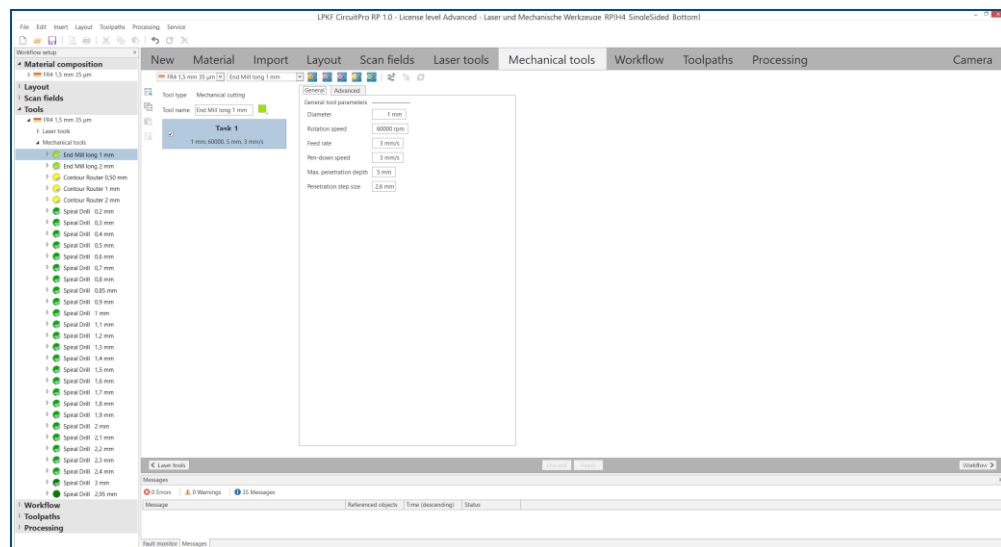


Fig. 108: User guidance step Tools

Changes have to be saved with [Save] before switching to another user guidance step.

The icons/functions of the toolbar are described in the following table.

Icon	Name	Description
	Isolation tool	Creates a new isolation tool.
	End Mill	Creates a new End Mill tool.
	End Mill long	Creates a new End Mill long tool.
	Cutting tool	Creates a new cutting tool.
	Drilling tool	Creates a new drilling tool.
	Duplicate tool	Creates a copy of the selected tool.
	Remove tool	Removes a tool copy.
	Copy tool to the global catalog	Copies the local tool to the global catalog.
	Create new task	Creates a new task with the currently selected tool.
	Duplicate existing task	Copies the currently selected task to the clipboard.
	Paste task	Pastes a task from the clipboard.
	Remove existing task	Deletes the currently selected task.

Icon	Name	Description
Button	Scan fields	Navigates to the previous user guidance step <i>Scan fields</i> .
Button	Laser tools	Only for the use of mechanical tools and laser tools. Navigates to the previous user guidance step <i>Laser tools</i> .
Button	Discard	Restores the state that was saved last. Any changes that have not been saved are lost.
Button	Apply	Saves the current settings.
Button	Workflow	Navigates to the following user guidance step <i>Workflow</i> .

Table 49: Symbols/Functions in the user guidance step *Tools*

General

The following table describes the tool parameters of the tab *General*:

Name	Description
General tool parameters	
Diameter	Indicates the diameter of the selected tool in [mm].
Rotation speed	Indicates the rotation speed of the selected tool in [rpm].
Feed rate	Indicates the feed rate of the selected tool in [mm/s].
Pen-down speed	Indicates the feed rate of the extended tool in [mm/s].
Max. penetration depth	Defines the maximum penetration depth of the tool.
Penetration step size	Specifies in which step sizes the maximum penetration depth of the tool is reached.

Table 50: Tool parameters | *General*

Advanced

The following table describes the parameters of the tab *Advanced*:

Name	Description
Advanced tool parameters	
Pen-down time	Indicates the duration the tool of the mechanical head touches the surface.
Maximum tool life	Defines the maximum lifetime of the tool.
Pen-down speed precise	Indicates the duration the tool of the mechanical head is touching the surface of the material during precise processing.
Rotation speed precise	Indicates the rotation speed of the selected tool in [rpm] during precise processing.
Tool length	Specifies the length of the tool. The LPKF default tools are always 36 mm long or 38 mm long.
Minimum diameter of processed hole	Indicates the minimum diameter of the hole in [mm] with the selected tool. This is the maximum allowed deviation to the parameter <i>Diameter</i> in the tab <i>General</i> .
Maximum diameter of processed hole	Indicates the maximum diameter of the hole in [mm] with the selected tool. This is the maximum allowed deviation to the parameter <i>Diameter</i> in the tab <i>General</i> .

Table 51: Tool parameters | *Advanced*

2.10 Toolpaths

In the user guidance step *Toolpaths*, you can compute the toolpaths for existing work packages and edit the points on the toolpaths.

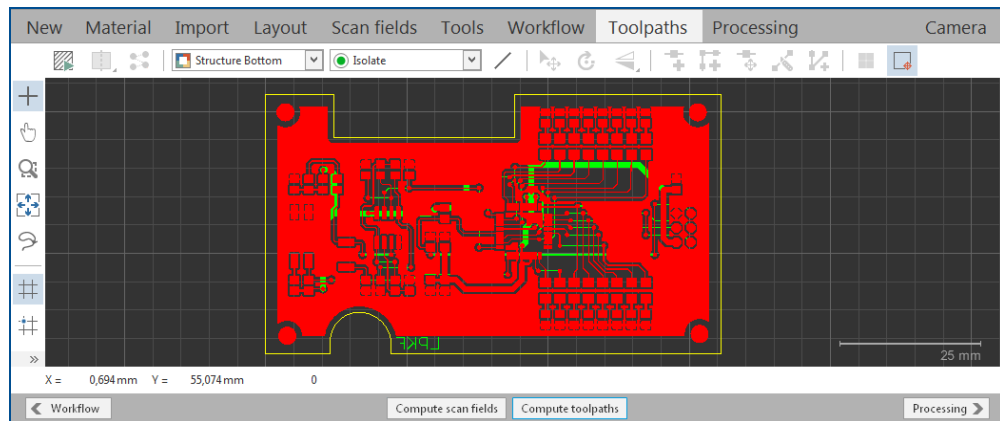


Fig. 109: User guidance step *Toolpaths*

Icons with a small triangle (see following figure) can open a context menu with a right-click. It contains additional related functions.



The icons/functions of the toolbar are described in the following tables.

Icon	Name	Description
	Compute all...	Computes the toolpaths based on the existing scan fields and work packages.
	Display mode <i>True width</i>	Shows the objects in their real dimensions. Filled objects are displayed as filled.
	Display mode <i>Outline</i>	Shows the objects in their real dimensions. Filled objects are displayed only as paths.
	Display mode <i>Thin line</i>	Shows filled objects only as paths. Lines are displayed only as thin lines regardless of their actual line width.
	Show jump lines	Shows/Hides the jump lines of the computed toolpaths.
	Work package	Selects a work package. New toolpaths are created in the selected work package.
	Show/Hide work package	Shows/Hides all objects in the view that are in the work package.
	Tool	Selects a tool. New toolpaths are created with the selected tool.
	Create toolpath	Creates a toolpath.
	Move object	Moves the selected object by a defined distance and direction.
	Rotate	Rotates one or multiple objects around a definable pivot point.
	Mirror horizontally	Mirrors one or multiple objects around the horizontal axis of reflection (x axis).

Icon	Name	Description
	Mirror vertically	Mirrors one or multiple objects around the vertical axis of reflection (y axis).
	Add point	Adds a point on a selected line.
	Add mirror point	Adds two points with the same distance from the reference point.
	Move point	Moves a selected point.
	Split path	Splits the selected line segment of a path.
	Combine paths	Combines two paths.
	Show/Hide scan fields	Shows/Hides the scan fields.
	Show/Hide processing area	The processing area is shown/hidden.
Button	Workflow	Navigates to the previous user guidance step <i>Workflow</i> .
Button	Compute scan fields	Computes the scan fields for the layers defined in the scan field set.
Button	Compute toolpaths	Computes the toolpaths based on the existing scan fields.
Button	Processing	Navigates to the following user guidance step <i>Processing</i> .

Table 52: User guidance step *Toolpaths*

2.10.1 Compute all...

Computes the toolpaths based on the computed scan fields and work packages.

2.10.2 Show jump lines

Displays the laser jump lines of the computed contour.

Summary

The resulting jump movement of the laser is a positioning movement from one point to be processed to the next point to be processed. In the meantime, the laser is switched off.

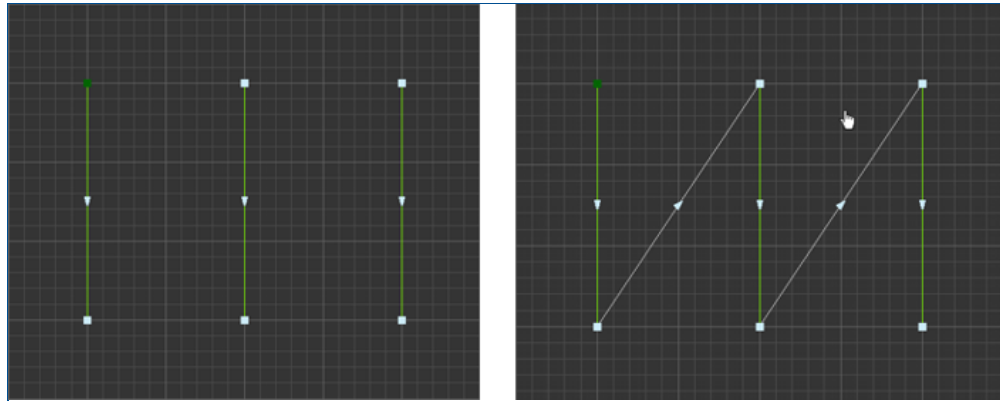


Fig. 110: Show/Hide jump lines

2.10.3 Create toolpath

Creates a toolpath in the current layer.

Summary

You can use the function [Create toolpath] to create toolpaths in the user guidance step *Toolpaths*. The objects are automatically assigned to the currently selected layer.

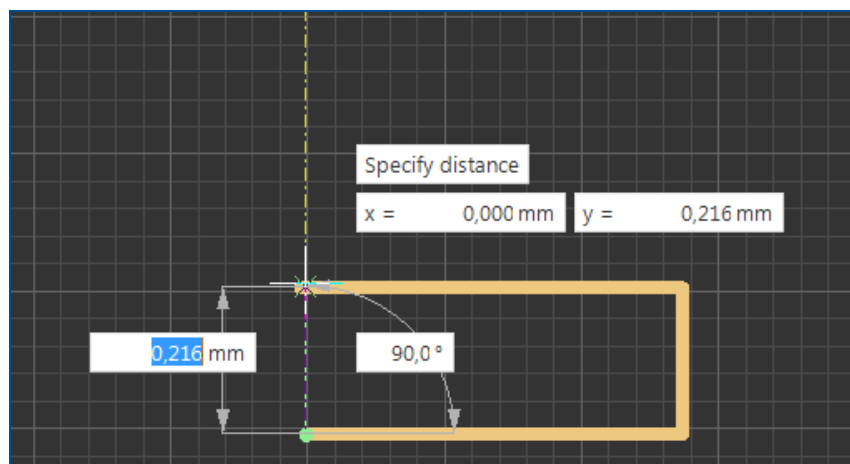


Fig. 111: Create toolpath

2.10.4 Move object

Moves the marked object/the marked contour by a defined distance and direction.

Summary

Before moving, a reference point has to be determined. This point can also be located outside of the marked object/contour and even be created on other objects/contours. After the reference point is determined, distance and direction can be specified. In the context menu, the object displacement can be set to the absolute coordinates with *Switch to absolute coordinates*.

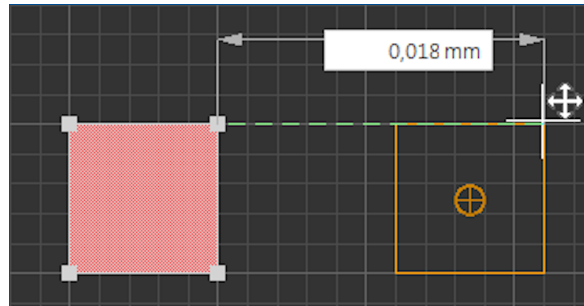


Fig. 112: Move object/contour

2.10.5 Rotate

Rotates one or multiple objects around a definable pivot point.

Summary

The marked objects/contours are rotated around one point. Thereby, you choose the position of the angle point and the rotation angle.

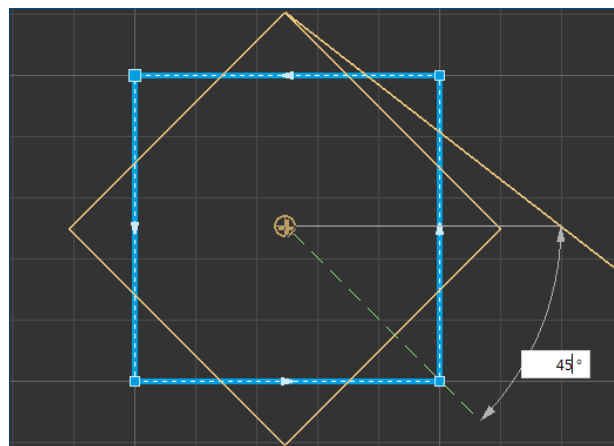


Fig. 113: Rotating an object/a contour

2.10.6 Mirror horizontal

Mirrors one or multiple objects around the horizontal axis of reflection (x axis).

Summary

The axis of reflection is located at the centroid of area of the selected object. If multiple objects are selected, a common centroid of area is calculated that is used for the reflection. The centroid of area can even be located outside of the objects.

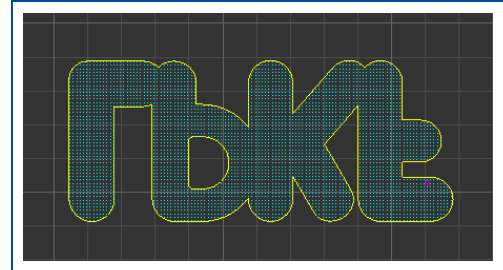
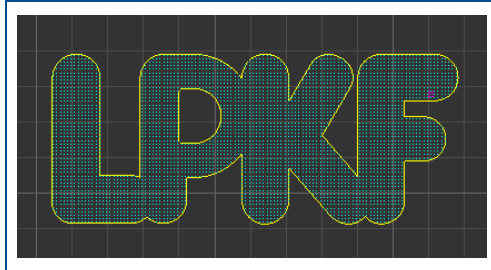


Fig. 114: Mirror object horizontally

2.10.7 Mirror vertical

Mirrors one or multiple objects around the vertical axis of reflection (y axis).

Summary

The axis of reflection is located at the centroid of area of the selected object. If multiple objects are selected, a common centroid of area is calculated that is used for the reflection. The centroid of area can even be located outside of the objects.

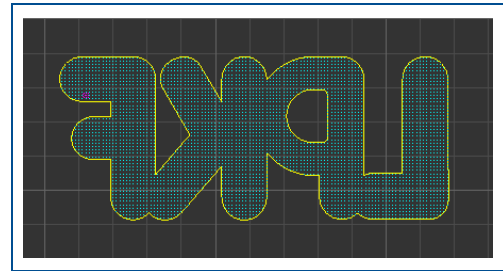
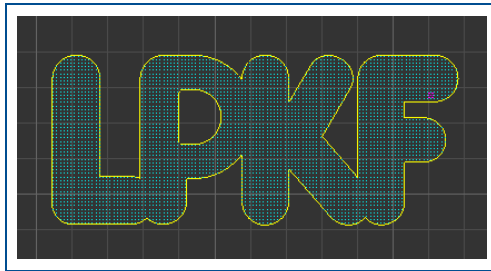


Fig. 115: Mirror object vertically

2.10.8 Add point

Adds a point on a marked line segment.

Summary

[Add point] is only available if a line or a point of a segment is marked.

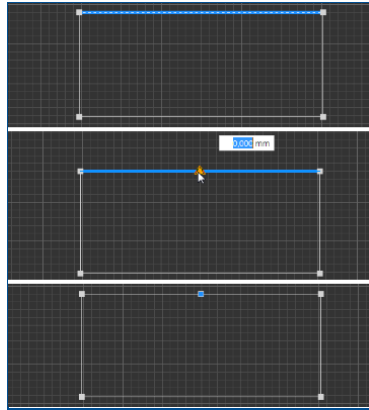


Fig. 116: Add point

2.10.9 Add mirror point

Adds two points with the same distance from the reference point.

Summary

[Add mirror point] is only available if a line or a point of a segment is marked.

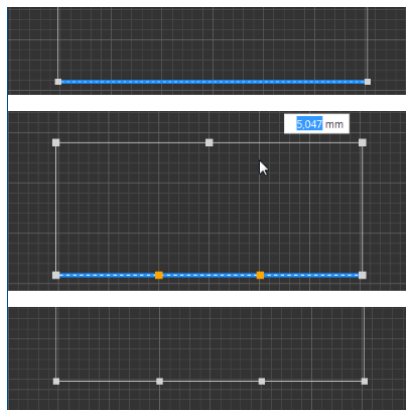


Fig. 117: Add mirror point

2.10.10 Move point

Moves a marked point.

Summary

The marked point can be moved by using the mouse or by entering the relative coordinates (default setting). In the context menu, you can use *Switch to absolute coordinates* to convert the point displacement to absolute coordinates. Several points can be selected, as long as they are located in the same object.

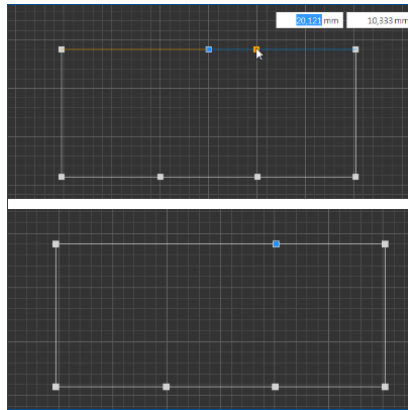


Fig. 118: Move point

2.10.11 Split path

Splits the marked line segment of a path.

Summary

The line segment can be split at the mouse position or by entering relative coordinates referring to the center of the path or the selected point.

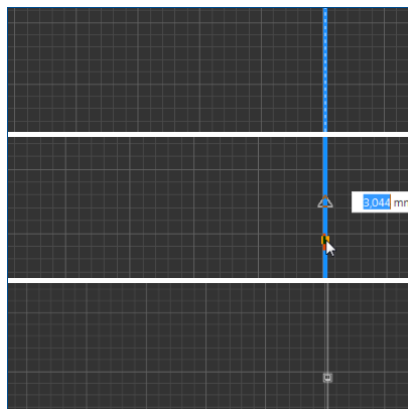


Fig. 119: Split path

[Split path] cannot be used for filled objects.

2.11 Processing

In the user guidance step *Processing*, the computed toolpaths are displayed on the material. Processing can be started when placement is finished.

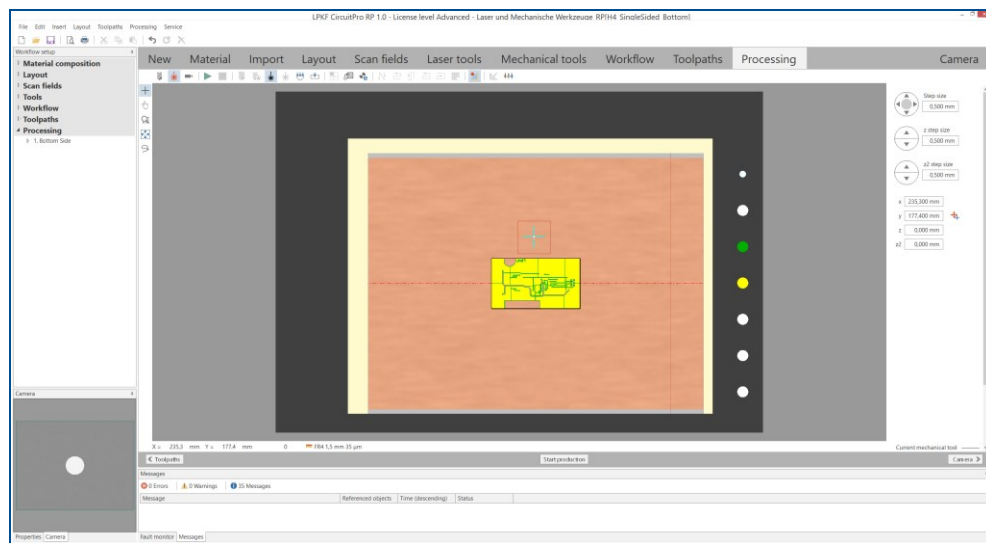


Fig. 120: User guidance step *Processing*

The icons/functions of the toolbar are described in the following tables:

Icon	Name	Description
	Activate mechanical tool	Activates the mechanical tool during processing.
	Activate the laser	Activates the laser during production. Material can only be processed while the laser is activated. Deactivating the laser can be used for measuring production times.
	Activate the camera	Activates the camera. The camera is moved to the previous position of the laser or the mechanical tool.
	Process all	Starts processing the toolpaths and work packages.
	Stop processing	Stops the current processing.
	Activate pilot laser	Activates the pilot laser.
	Switch on/off the extraction system	Switches the extraction system on and off.
	Move the system to the loading position	Moves the system to the loading position.
	Create instance type	Creates an instance type from the selected objects where the objects are used as the primary instance.

Icon	Name	Description
	Placement	Opens a dialog where the settings for placing the processing data in the processing area can be adjusted.
	Automatic fiducial creation	Opens a dialog automatic fiducial creation.
	Special ProtoLaser sorting	Sorts the order of scan fields in the specific ProtoLaser sorting.
	Meander sorting in x	Arranges the order of the scan fields from top to bottom alternatingly in both x directions.
	Meander sorting in y	Arranges the order of the scan fields from left to right alternatingly in both y directions.
	Spiral sorting inwards	Arranges the order of the scan fields in an inward spiral.
	Spiral sorting outwards	Arranges the order of the scan fields in an outward spiral.
	Manual sorting of scan fields	Defines the processing order of the existing scan fields by clicking on them.
	Show/Hide information layer	Shows/Hides the objects that are on the information layer.
	Power measurement	Opens the dialog <i>Power measurement</i> .
	Tool magazine	Opens the dialog <i>Tool magazine</i> . The mechanical tools can be managed here.
Button	Start processing	Starts processing the toolpaths and work packages.

Table 53: User guidance step *Processing***2.11.1 Process all**

Starts the production of all processing data.

2.11.2 Stop processing

The current processing procedure is stopped.

2.11.3 Placement...

Opens the dialog *Placement* for rotating and moving the processing data.

Summary

The dialog *Placement* allows correct placement of the material. Once the toolpaths and scan fields have been generated, the tab *Processing data* is also displayed.

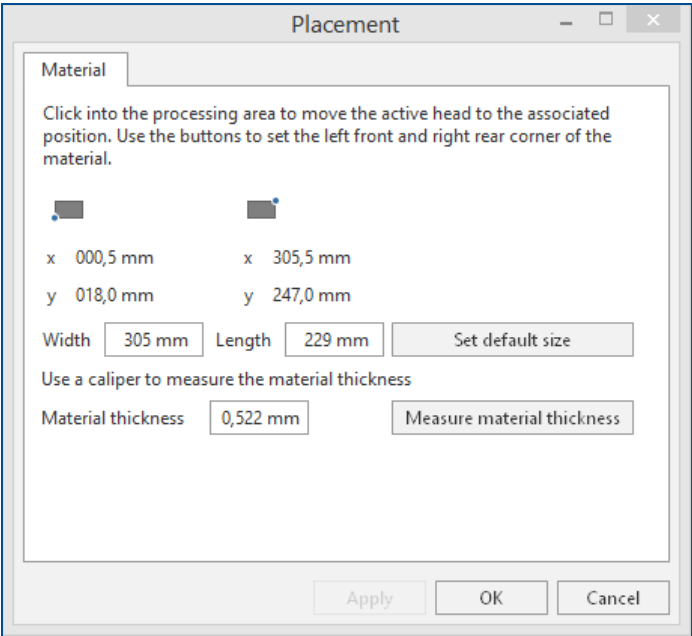


Fig. 121: Dialog *Placement*

The button [Measure material thickness] starts the automatic measurement of the material thickness. This function is used for unconventional material thicknesses and is only available if the required sensor is present in the system.

The following functions are available in the tab *Material*:

Name	Description
Material	
Width	Specifies the width of the material.
Length	Specifies the length of the material.
Set default size	Resets the width and length to the initial value.
Material thickness	Specifies the material thickness.
Measure material thickness	Measures the thickness of the material. You can find more settings for the thickness measurement in the menu <i>Processing</i> under <i>Material thickness measurement setting</i> .

Table 54: Dialog *Placement* | Tab *Material*

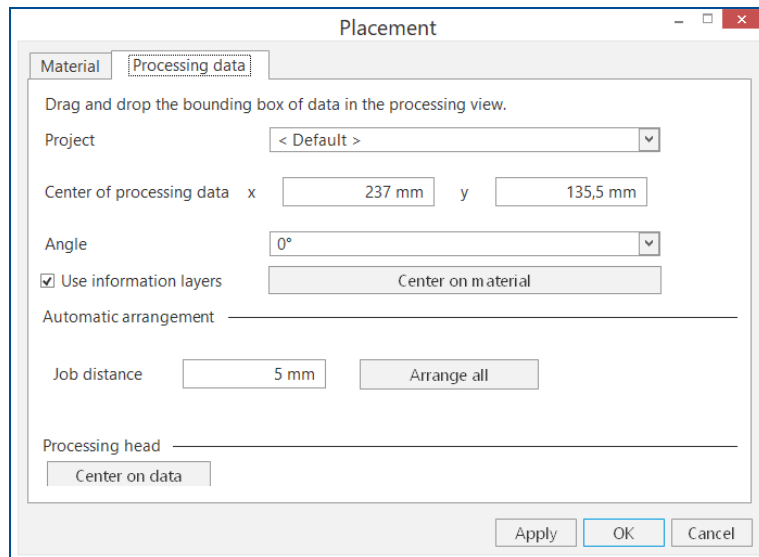


Fig. 122: Dialog *Placement* | Tab *Processing data*

The following functions are available in the tab *Processing data*:

Name	Description
Project	Specifies which processing data are to be placed when using multiple project files or instance types.
Center of processing data	Specifies the center of the processing data in x and y direction.
Angle	Rotates the processing data by a definable angle.
Use information layers	Takes the information layers into account when placing the processing data.
Center on material	Positions the processing data on the center of the material.
Automatic arrangement	
Job distance	Indicates the distance in [mm] between the individual jobs during automatic arrangement.
Arrange all	Takes the specified job distance into account when starting automatic arrangement of the processing data.
Processing head	
Center on data	Positions the processing head at the center over the processing data.
Show bounding box	Shows the bounding box of the processing data.

Table 55: Dialog *Placement* | Tab *Processing data*

2.11.4 Automatic fiducial creation

Opens a dialog for automatic fiducial creation.

Summary

The dialog *Automatic fiducial creation* allows you to change the settings for the automatic fiducial creation.

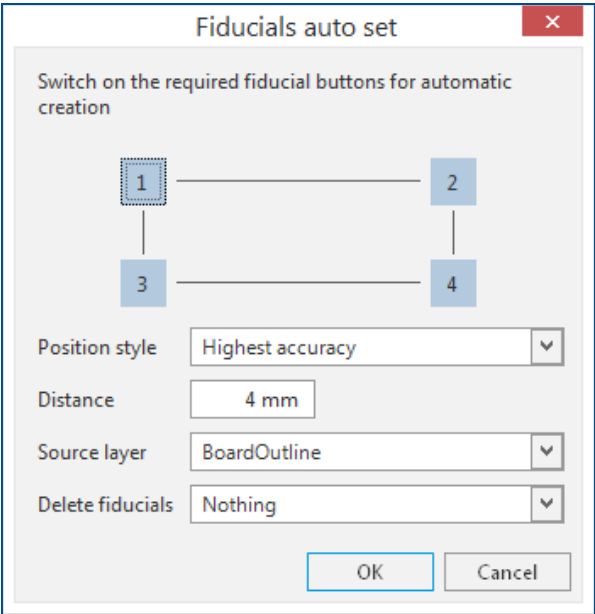


Fig. 123: Dialog *Automatic fiducial creation*

The following settings are available:

Name	Description
1, 2, 3, 4	Selects the fiducials that are to be created automatically.
Position style	Selects the criterion according to which the fiducials are to be placed. Highest accuracy: The fiducials are placed in a way that they can be captured with high accuracy in the camera image. Material efficient: The fiducials are placed so that the material is optimally used.
Distance	Indicates the (outer) distance between source layer and fiducials in x and y.
Source layer	Indicates the layer where fiducials are to be created.
Delete fiducials	Selects how to handle existing fiducials. None: The existing fiducials remain. All: All existing fiducials are deleted. Overlapping: Remaining fiducials that are automatically overlapping due to automatic creation are deleted.

Table 56: Dialog *Automatic fiducial creation*

2.11.5 Power measurement

Opens the dialog *Power measurement*.

Summary

The laser power of the system can be measured here.

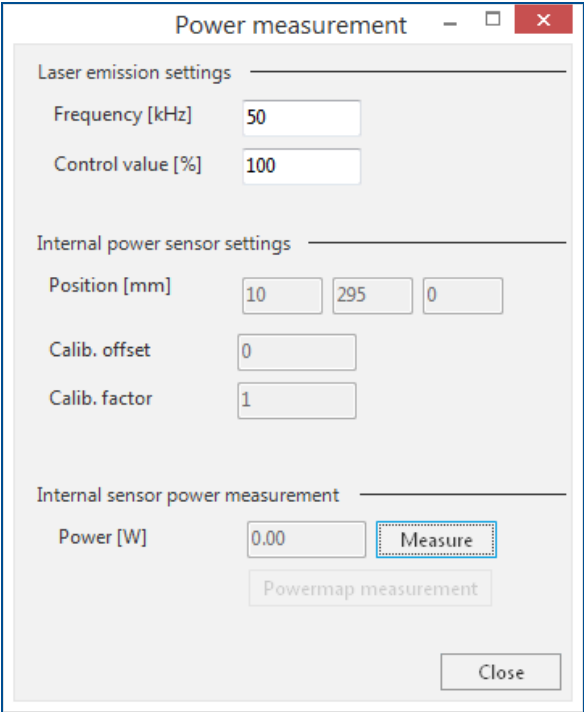


Fig. 124: Dialog *Power measurement*

Name	Description
Laser emission settings	
Frequency [kHz]	Defines the frequency for operating the laser.
Control value [%]	Defines the control value for operating the laser.
Internal power sensor settings	
Position [mm]	Displays the position of the laser power sensor.
Calib. offset	Displays the calibration offset of the laser power measurement.
Calib. factor	Displays the calibration factor of the laser power measurement.
Internal sensor power measurement	
Power [W]	Click on [Measure] to display the laser power measured by the laser power sensor.
Powermap measurement	Starts the power measurement for creating a powermap.

Table 57: Dialog *Power measurement*

2.11.6 Tool magazine

Opens the window *Tool magazine*. The mechanical tools for processing can be configured and managed, here.

Summary

You can adjust the tool assignment for the respective tool holder positions as well as see the tool wear, here. It is also indicated which tools are required for the current workflow.

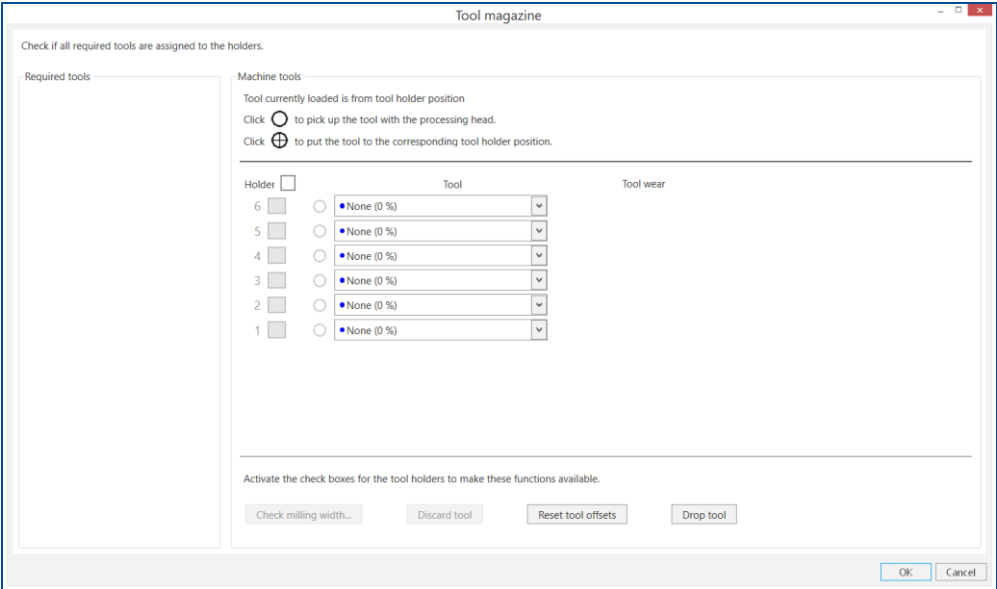


Fig. 125: Dialog *Tool magazine*

The following settings are available:

Button/Area	Description
Required tools	Contains all tools that are required for processing toolpaths. Tools that are missing in the tool magazine are marked with a red X.
Holder	Displays the number of the tool holders.
Tool	Selects a tool from the drop-down list for the tool holder.
Tool wear	Indicates the tool wear in [%].
Check milling width	Checks the milling width of the tool.
Discard tool	Removes selected tools from the list.
Reset tool offsets	Resets the offset of the selected tools.
Drop tool	Drops selected tools from the collet.

Table 58: Dialog *Tool magazine*



For more information on loading the tool magazine, refer to the user manual of your system.

2.12 Camera

In the view *Camera*, the camera image is displayed. The camera image can be moved by manually entered values or via double-click.

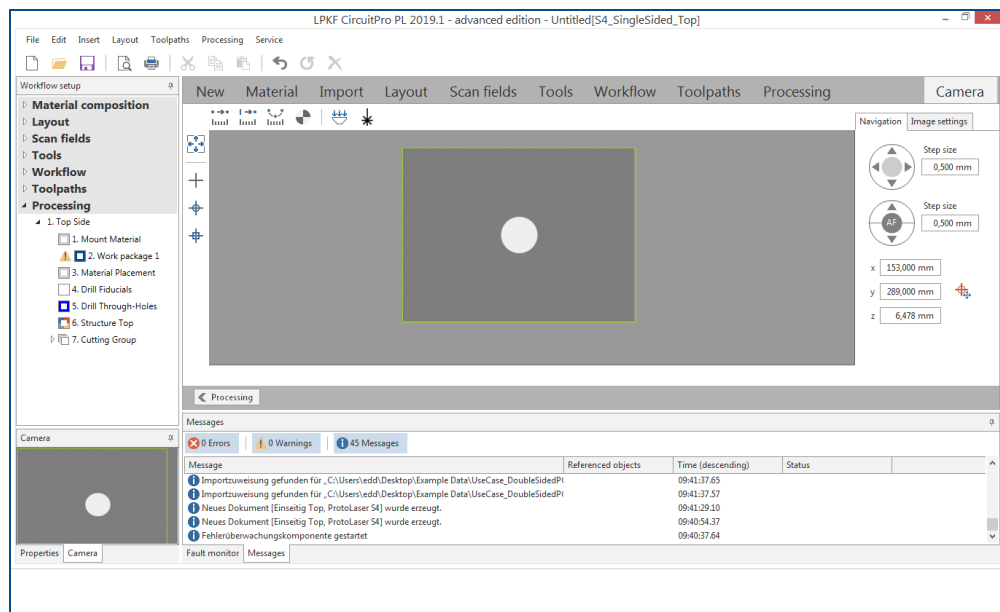


Fig. 126: View Camera

The icons/functions of the toolbar are described in the following table:

Icon	Name	Description
	Measure point to point	Measurement of the distance between two points.
	Measure point to line	Measurement of the distance between a line and a point. First, the line is defined by two points and then the point is positioned.
	Measure circle by 3 points	Measure circle The circle is computed by selecting three points on the circle.
	Fiducial search	The fiducials are searched in the current camera image.
	Extraction system turn on/off	Switch on/off the extraction system. Switching on the extraction system produces a vacuum that fastens the material.
	Activate pilot laser	Activates/Deactivates the pilot laser

Table 59: Toolbar view Camera

Using the functions on the right side of the view *Camera* the processing point can be manually moved in the directions x, y, and z.

The following button moves the processing point in x and y direction. The processing point is moved in the entered step size which can be changed arbitrarily.

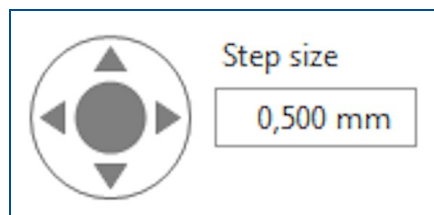


Fig. 127: Moving in x and y direction

The following button moves the processing point in x and y direction. The processing point is moved in the entered step size which can be changed arbitrarily.

The button [AF] activates the autofocus that tries to focus on the image automatically.

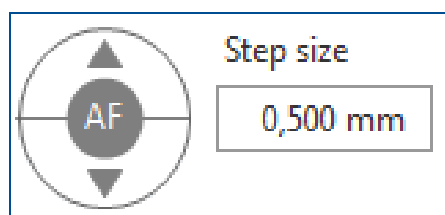


Fig. 128: Movement in z direction

The button  moves the image center to the position entered in the fields x, y, and z.

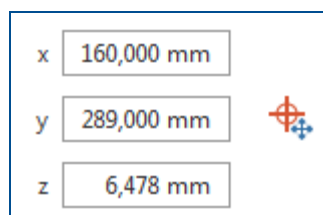


Fig. 129: Positioning the image center to x, y, and z value

Image settings

In the tab *Image settings*, you can adjust the parameters for the current camera image. The changes are immediately displayed in the camera image.

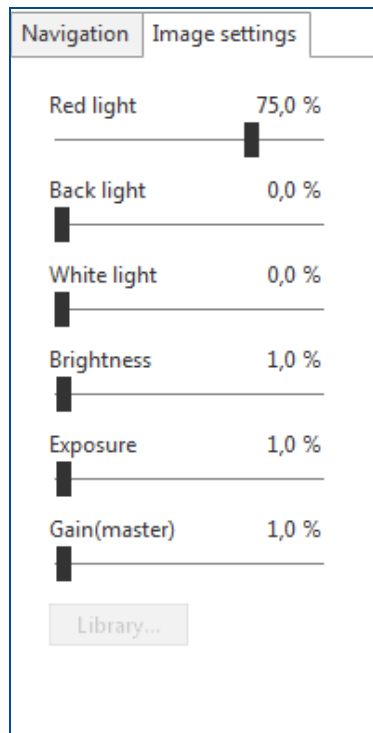


Fig. 130: View Camera | Tab *Image settings*

3 Menus

The entries of the menu bar are described in the following table:

Name	Description
Menu <i>File</i>	Contains the standard functions of the application.
Menu <i>Edit</i>	Contains functions to edit objects and their properties.
Menu <i>Insert</i>	Contains functions to create objects in the user guidance step <i>Layout</i> .
Menu <i>Layout</i>	Contains functions to edit geometric objects in the user guidance step <i>Layout</i> .
Menu <i>Toolpaths</i>	Contains various settings for toolpaths.
Menu <i>Processing</i>	Contains functions to process the previously defined processing data.
Menu <i>Service</i>	Contains more functions for maintenance and operating the system.

Table 60: Menus

3.1 Menu *File*

This menu contains the standard functions of the application.

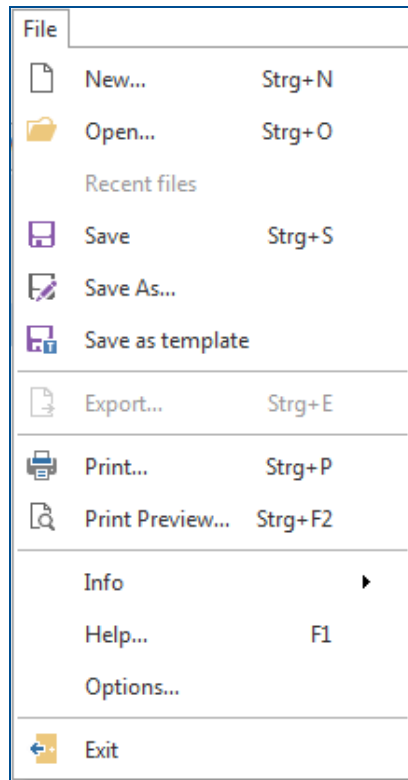


Fig. 131: Menu *File*

The entries of the menu *File* are described in the following table:

Icon	Name	Description
	New...	Starts a new project from a selected template or opens a project that is already existing (file extension *.cbf or *.cp2d).
	Open...	Opens an existing project file (file extensions *.cbf and *.cp2d).
	Recent files	Displays the files that have been opened/edited recently.
	Save	Saves the currently edited project file containing all changes with the same name and storage location.
	Save as...	Saves the currently edited project file containing all changes with a different name and/or storage location.
	Save as template	Saves the currently edited document with all changes as template so it can be used when creating a new document.
	Export	Exports the current project.
	Print...	Prints the current layout. Use the diverse settings to optimize your print result.
	Print preview...	Displays the preview of the print results using the current print settings.
	Info	Contains information on software and hardware.

Icon	Name	Description
	Help...	Displays the detailed help.
	Options...	Contains application settings, such as language settings.
	Exit	Exits and closes the current application.

Table 61: Menu *File*

3.1.1 New

Starts a new project from a selected template or opens a project that is already existing (file extension *.cp2d or *.cbf).

Summary

The command *New* enables you to create a new project file based on an existing, installed template or to search on your computer for a custom template that is suitable. The tab *Projects* lists the recently edited projects.

3.1.2 Open

Opens an existing project file (file extensions *.cp2d and *.cbf).

Summary

In the dialog to be displayed, navigate to the desired file and click on *Open*. The data are displayed in the user guidance step *Layout*.

3.1.3 Recent files

Displays the files that have been recently opened/edited.

3.1.4 Save

Saves the currently edited project file containing all changes with the same name and storage location.

3.1.5 Save as

Saves the currently edited project file containing all changes with a different name and/or storage location.

3.1.6 Save as template

Saves the actual edited project file with all changes as a template.

3.1.7 Export

Exports data to an *.LMD file.

Summary

The LMD file is used for data transfer between LPKF software products.

■ Exporting a project

1. Click on *File > Export...*
2. The following dialog is displayed:

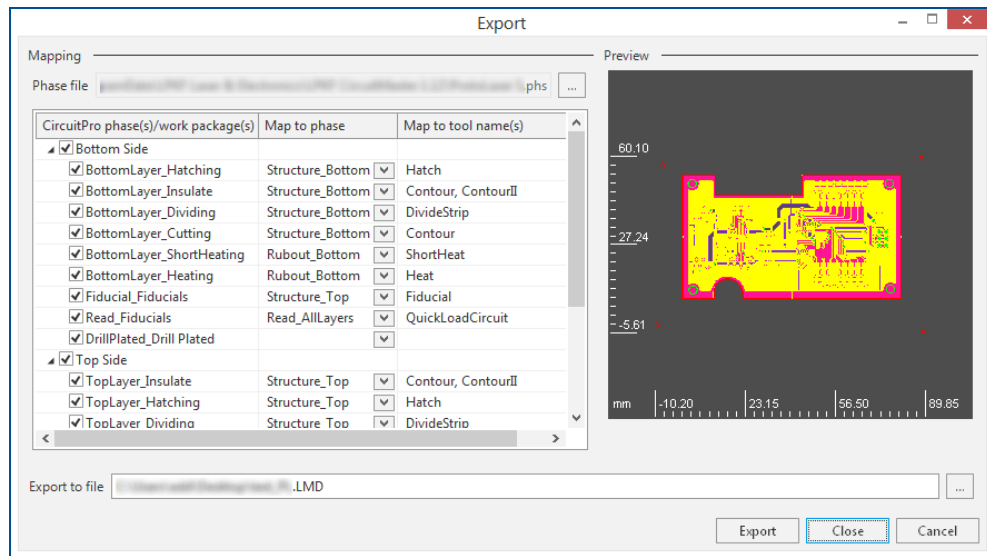


Fig. 132: Dialog Export

- The phase file is attached automatically. The columns *CircuitPro phase(s)/work package(s)*, *Map to phase*, and *Map to tool name(s)* are filled with the required information from the phase file.



If the phase file is not attached automatically you can find it in the installation folder of CircuitMaster or BoardMaster.

3. In the field *Export to file*, enter a name for the LMD file and select a location for saving.
4. Click on [Export].
- ☒ The project has been exported.

3.1.8 Print

Prints the current layout. Use the diverse settings to optimize your print result.

Summary

Click on [Print], to start the print process with the current settings.

To change the print options, various tabs are available.

Tab *General*

Contains general settings for the print process (number of pages, page range, etc.).

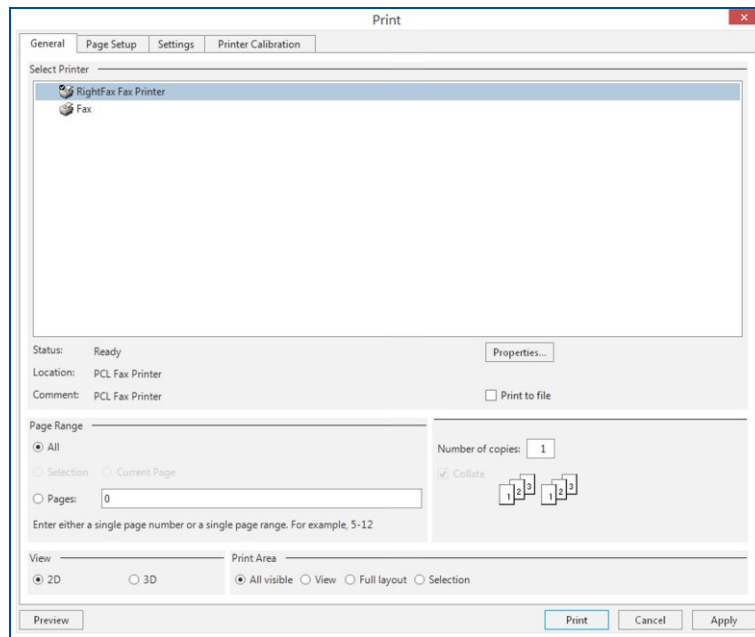


Fig. 133: Tab *General*

Select Printer

Select in this group the printer that is to be used for executing the print job. Use the button [Properties], to change the settings for the printer.

Page Range

In this group, select the pages to be printed. As soon as you want to print more than one copy, the option *Collate* is activated. This setting ensures that a complete copy is printed, before the next copy is started to be printed.

View

Here, you can define which view is to be printed.

Print area

Define in this group if the current view, the entire layout, the marked areas, or all is to be printed.

Tab *Page Setup*

Contains general settings for the page to be printed (paper size, orientation).

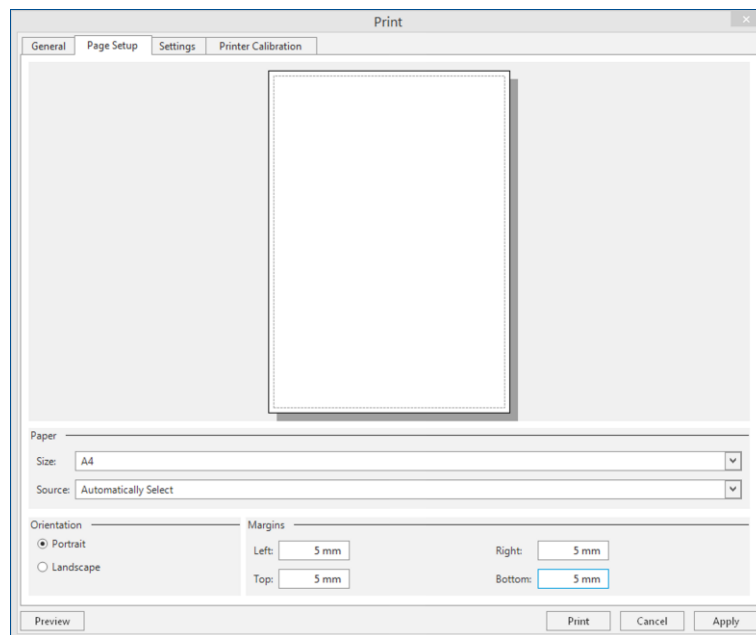


Fig. 134: Tab *Page Setup*

Paper

Select the paper size and the paper tray of the printer.

Orientation

Select the orientation of the paper (portrait, landscape).

Margins

Defines the size of the margins.

Tab Settings

Contains settings for the layout of the image to be printed (scaling, mirroring etc.).

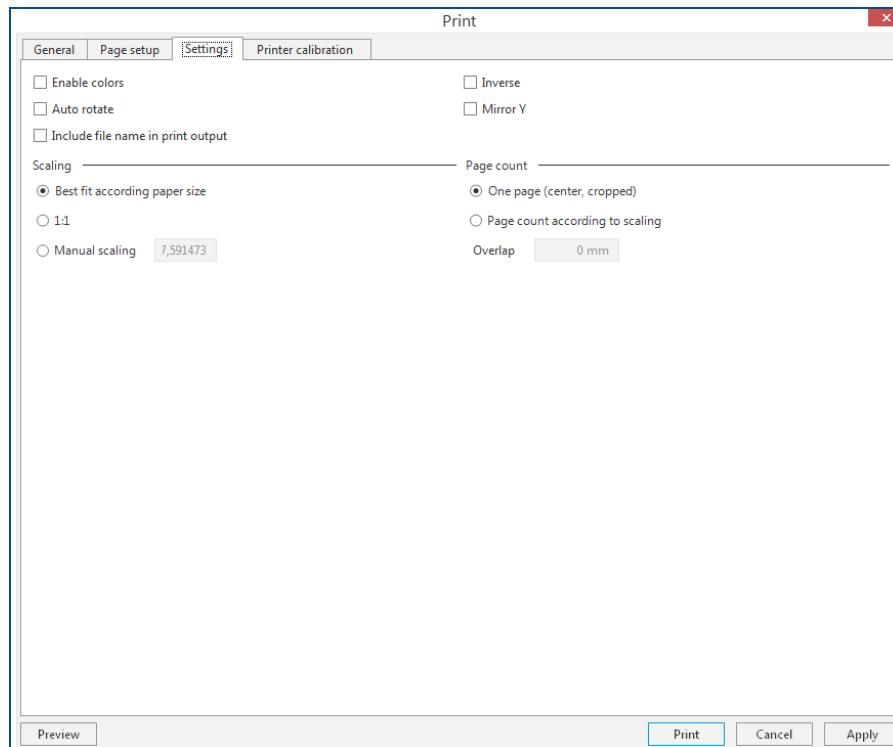


Fig. 135: Tab Settings

This group offers the following options:

- *Enable colors*
Activates color printing
- *Auto rotate*
Adjusts the page orientation according to the orientation set in the printer properties.
- *Include file name in print output*
Prints the file name of the project on every sheet.
- *Inverse*
Causes a display inversion of the rubout area, i.e. the area that is removed during production (e.g. rubout area) is not printed.
- *Mirror y*
Mirrors the object to be printed along the y axis.

Scaling

This group offers the following options:

- *Best fit according paper size*
Automatically adjusts the printout to the preselected paper size.
- *1:1*
Causes that the printout is printed in the actual size. There is no scaling/adjusting to the actual paper size. Large graphics can be spread across several sheets. Small graphics can be too small and may thus be unreadable in some circumstances.
- *Manual scaling*
Scales the printout according to the entered value.

Page count

In this group, you can define which view is to be printed.

- *One page (center, cropped)*
Prints the graphic centered on one page, i.e. that possibly enlarged graphics that would be printed on several sheets are trimmed.
- *Page count according to scaling*
Prints the pages exactly in accordance with the specified number of pages in the print preview.

Tab *Printer Calibration*

Contains parameters (rectangle size, printed size etc.) for calibrating the printer.

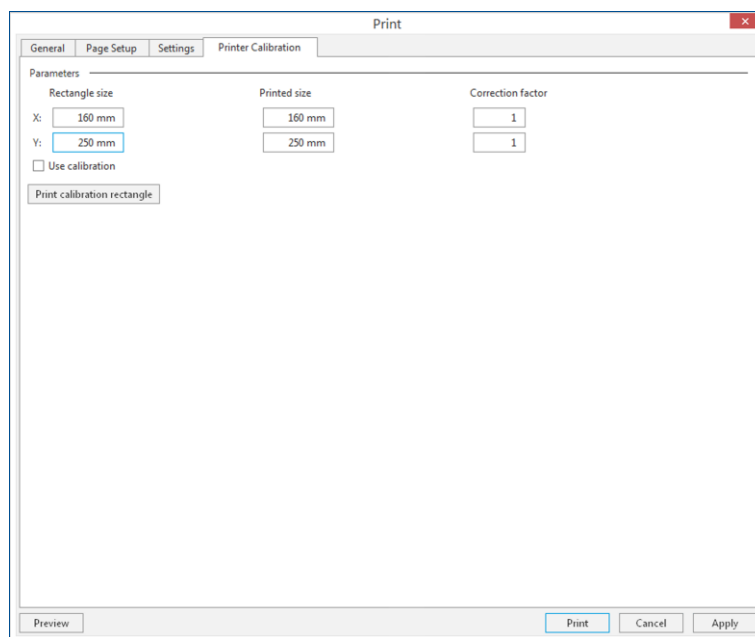


Fig. 136: Tab *Printer calibration*

Parameters

This group provides the following options:

- *Rectangle size:*
Defines the size of the calibration rectangle by entering values for x and y.
- *Printed size:*
Used for the entry of the actual printed rectangle size.
- *Correction factor:*
Automatically displays the difference between the *Rectangle size* and the entered size in the *Printed size*.

3.1.9 Print preview

Displays a preview of the printed layout.

Summary

The print preview enables you to check the layout to be printed on the screen and to change the display via various settings.

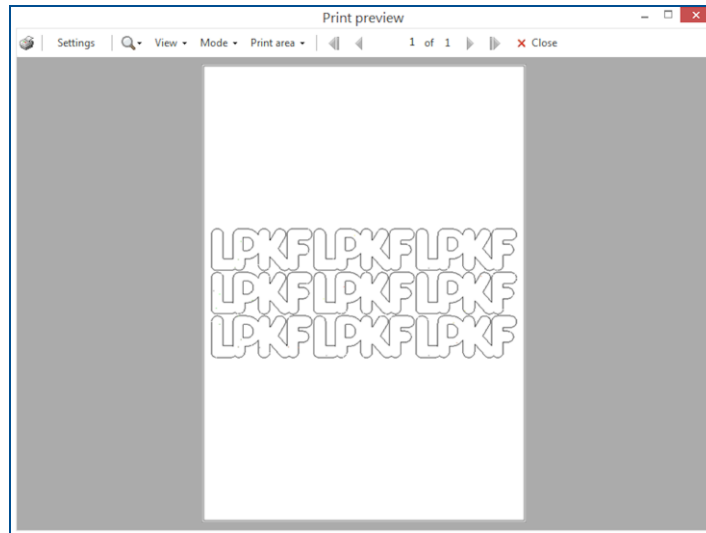


Fig. 137: Dialog *Print preview*

The dialog *Print preview* contains the following icons/functions:

Icon/Button	Description
	Starts the printing operation.
Settings	Opens the dialog <i>Print Settings</i> .
	Zooms in/out the view of the page to be printed.
View	Offers the option to select between the view for 2D objects and the view for 3D objects.
Mode	
One page	Displays one page of the document to be printed.
Two pages	Displays two pages of the document to be printed.
Three pages	Displays three pages of the document to be printed.
Four pages	Displays four pages of the document to be printed.
Six pages	Displays six pages of the document to be printed.

Icon/Button	Description
Print area	
All visible	Limits the print area to all visible objects.
View	Limits the print area to the current view.
Full layout	Adapts the print area to the full layout.
Selection	Limits the print area to the current selection.
	Displays the first page.
	Displays the previous page.
Page number	Displays the current page number.
	Displays the next page.
	Displays the last page.
 Close	Closes the dialog <i>Print preview</i> .

Table 62: Dialog *Print preview*

3.1.10 Info

Contains information on software and hardware.

Summary

Software...

Displays the version numbers and copyright of the program component.

Hardware...

Displays information about the PC running the application.

Operating hours...

Displays the *Operating hours of the system*, the *activated hours in CircuitPro*, as well as *Operating hours of the laser*.

3.1.11 Help...

The menu item *Help* provides information on operating the software.

3.1.12 Options

Contains application settings, such as language settings.

Context sensitive help texts that are relevant for the selected option are displayed in the lower area of the dialog:

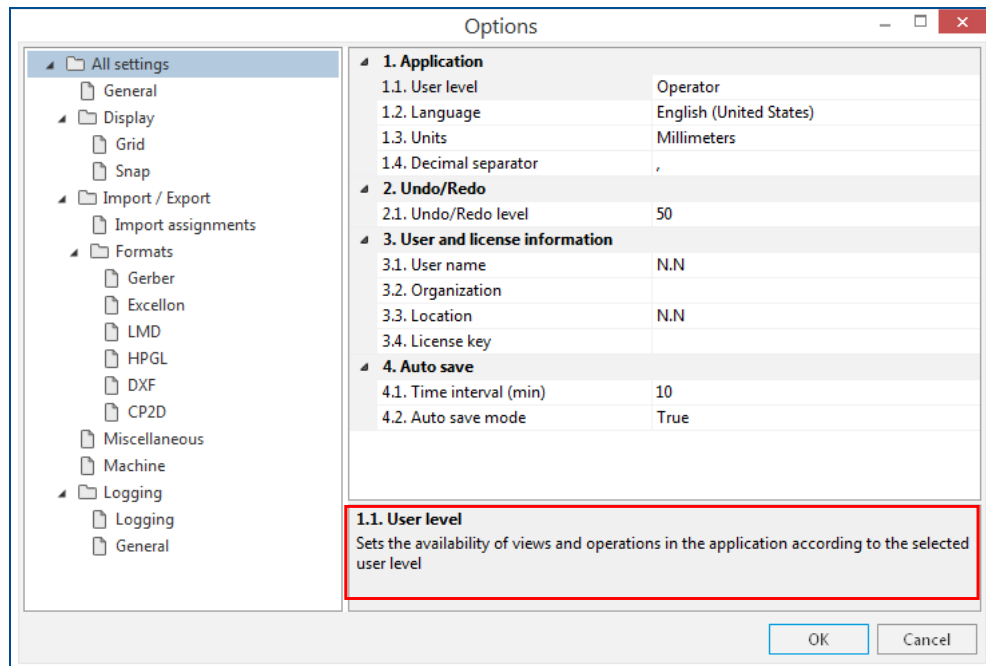


Fig. 138: Help texts in the dialog *Options*

3.1.13 Exit

Exits and closes the current application.

3.2 Menu *Edit*

This menu contains functions to edit objects and their properties.

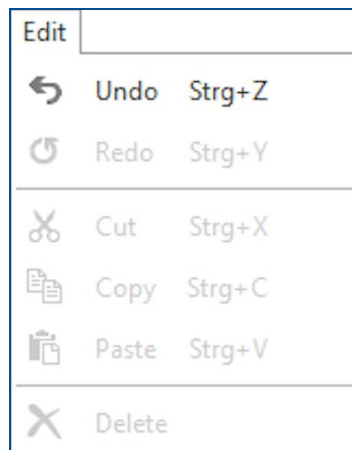


Fig. 139: Menu *Edit*

The icons/functions of the menu *Edit* are described in the following table:

Icon	Name	Description
	Undo	Undoes the last action performed.
	Redo	Executes the last action once more that was undone by clicking on [Undo].
	Repeat	Executes the last action once more.
	Cut	Removes the selected item(s) and puts them into the clipboard.
	Copy	Copies the selected item(s) and puts them into the clipboard.
	Paste	Pastes the contents from the clipboard to the cursor position.
	Delete	Deletes the selected items.

Table 63: Menu *Edit*

3.2.1 Undo

The last action is undone.

Summary

Click on/Tap on [Undo] to undo the last action and to restore the previous state.

The number of actions that can be undone can be set in the options.

[Undo] can also be executed with the key combination Ctrl + Z.

3.2.2 Repeat

Executes the last action once more.

Summary

Click on/Tap on [Repeat] to execute the previously performed action again.

[Repeat] can also be executed with the key combination Ctrl + Y.

3.2.3 Redo

Executes the last action once more that was performed by clicking on [Undo].

Summary

Click on/Tap on [Redo] to execute the previously performed action again that was performed by clicking on [Undo].

[Redo] can also be executed with the key combination `Ctrl` + `Y`.

3.2.4 Cut

The selection is removed and added to the clipboard.

Summary

Click on/Tap on [Cut] to remove the marked contents and to add them to the clipboard. These contents can be reinserted via [Paste].

[Cut] can also be executed with the key combination `Ctrl` + `X`.

3.2.5 Copy

The selection is copied to the clipboard.

Summary

Click on/Tap on [Copy] to copy the marked contents to the clipboard. Use [Paste] to insert these contents to the cursor position.

[Copy] can also be executed with the key combination `Ctrl` + `C`.

3.2.6 Paste

Pastes the contents from the clipboard to the cursor position.

Summary

Click on/Tap on [Paste] to add contents from the clipboard to the cursor position. For example, these can be added to the clipboard via [Cut] or [Copy].

[Paste] can also be executed with the key combination `Ctrl` + `V`.

3.2.7 Delete

The marked contents are removed.

Summary

Click on/Tap on [Delete] to remove the marked texts or objects (e.g. layers, toolpaths, etc.).

Accidentally removed contents can be restored with [Undo].

[Delete] can also be executed with `Del`.

3.3 Menu *Insert*

This menu contains functions to create and edit objects in the user guidance step *Layout*.

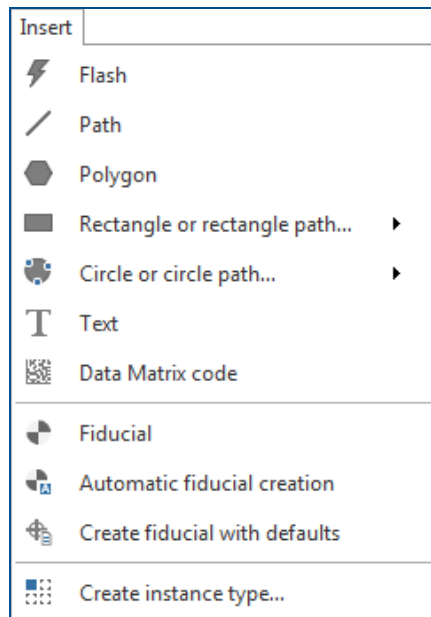


Fig. 140: Menu *Insert*

The icons/functions of the menu *Insert* are described in the following table:

Icon	Name	Description
	Flash	Creates a flash based on the aperture currently selected.
	Path	Creates a path in the current layer.
	Polygon	Creates a polygon in the current layer.
	Rectangle	Creates a filled rectangle in the current layer.
	Rectangle path	Creates a rectangle path in the current layer.
	Circle by diameter	Creates a filled circle by defining a diameter.
	Circle by points	Creates a filled circle by setting three points.
	Circle path by diameter	Creates a circle path by defining a diameter.
	Circle path by points	Creates a circle path by setting three points.
	Create text object	Creates a text field.
	Create Data Matrix code	Creates a Data Matrix code
	Fiducial	Creates a new fiducial.

Icon	Name	Description
	Automatic fiducial creation	Opens a dialog automatic fiducial creation.
	Create fiducial with defaults	Creates a fiducial with the default camera settings.
	Create instance type...	Creates an instance type from the selected objects where the objects are used as the primary instance.

Table 64: Menu *Insert*

3.3.1 Flash

Creates a flash based on the aperture or block currently selected.

Summary

Use the function [Flash] to create a flash or block flash based on the apertures or blocks in the library. If no aperture is selected, the first aperture in the library is used.

The flash is assigned to the currently selected layer.

3.3.2 Path

Creates a path in the current layer.

Summary

Apply the [Path] function to create open and closed paths in the user guidance step *Layout*. These paths are automatically assigned to the currently selected layer and use the selected aperture or path. Only circular apertures can be used for paths.

To close a path, you must create the last point, then select [Close open path] in the context menu. The paths are automatically connected to close the shape.

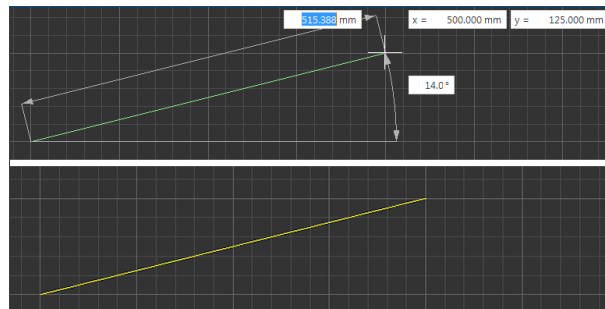


Fig. 141: Creating a path

3.3.3 Polygon

Creates a polygon in the current layer.

Summary

Use the function [Polygon] to create polygons in the user guidance step *Layout*. These polygons are automatically assigned to the currently selected layer. The individual lines can be created as straight lines or as arcs. Once the element is finished, it is filled automatically.

Open the context menu and click on [Finish] or press to close the polygon.

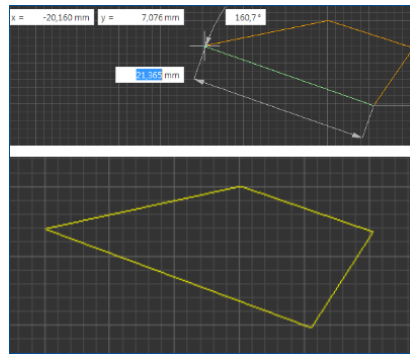


Fig. 142: Create polygon

3.3.4 Rectangle

Creates a filled rectangle in the current layer.

Summary

Use the function [Rectangle] to create filled rectangles in the user guidance step *Layout*. The objects are automatically assigned to the currently selected layer.

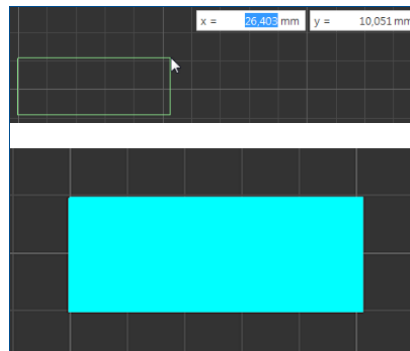


Fig. 143: Create rectangle

3.3.5 Rectangle path

Creates a rectangle path in the current layer.

Summary

Use the function [Rectangle path] to create rectangle paths in the user guidance step *Layout*. The objects are automatically assigned to the currently selected layer.

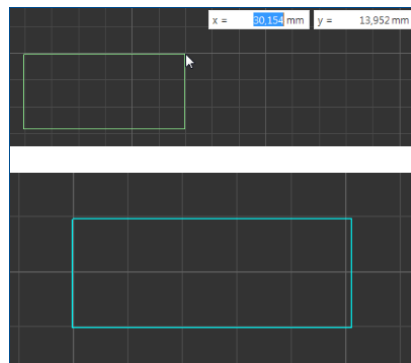


Fig. 144: Create rectangle path

3.3.6 Circle by diameter

Creates a filled circle of a defined diameter.

Summary

Use [Circle by diameter] to create circles in the user guidance step *Layout*. In the context menu, you can also use *Specify radius* to create a circle by radius. After the circles have been created they are automatically filled and assigned to the currently selected layer.

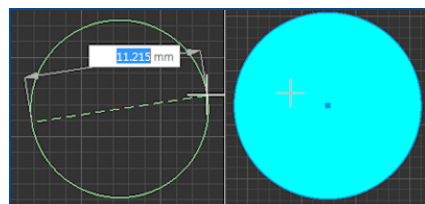


Fig. 145: Create circle by diameter

3.3.7 Circle by points

Creates a filled circle by setting three points.

Summary

Use the function [Circle by points] to create circles in the user guidance step *Layout*. After the circles have been created they are automatically filled and assigned to the currently selected layer.

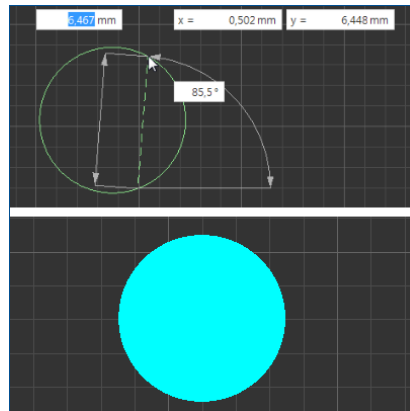


Fig. 146: Create circle by points

3.3.8 Circle path by diameter

Creates a circle path by the defined diameter.

Summary

Use [Circle line by diameter] to create circle lines in the user guidance step *Layout*. In the context menu, you can also use *Specify radius* to create a circle line by radius. After the circle lines have been created they are automatically assigned to the active layer.

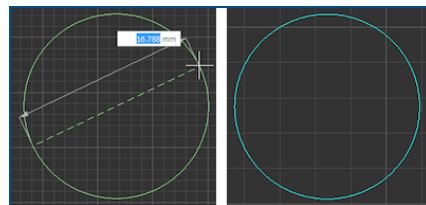


Fig. 147: Create circle line by diameter

3.3.9 Circle path by points

Creates a circle path by setting three points.

Summary

Use the function [Circle path by points] to create circle paths in the user guidance step *Layout*. After the circle paths have been created, they are automatically assigned to the active layer.

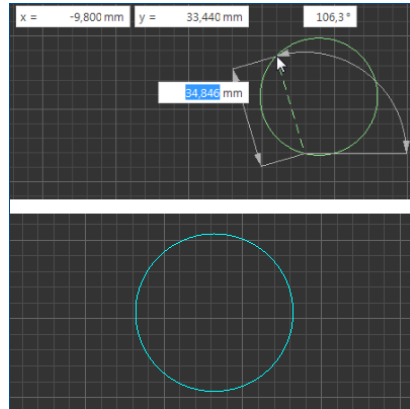


Fig. 148: Create circle path by points

3.3.10 Create text object

Creates a text object in the current layer.

Summary

Use the function [Create text object] to create text objects in the user guidance step *Layout*. In addition to conventional texts and numbers, the text objects can also contain the serial number, the current date, and variables.

The texts are automatically assigned to the currently selected layer.

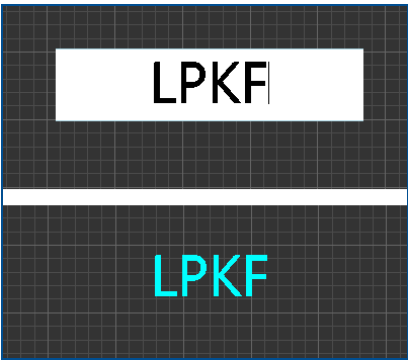


Fig. 149: Create text



Fig. 150: Toolbar *Create text object*

Icon	Name	Description
	Selected layer	Displays the currently selected layer. You can change this by opening a drop-down list with a left-click and selecting a different layer from the list.
	Font	Displays the currently selected font. You can change this by opening a drop-down list with a left-click and selecting a different font from the list.
	Font size	Displays the currently selected font size. Enter the desired value for the font size into the input field.
	Bold	Displays the currently selected text in bold letters.
	Italic	Displays the currently selected text in italics.
	Outline	Displays the currently selected text as an outline.
	Left	Aligns text objects to the left of the input field.
	Center	Aligns text objects to the center of the input field.
	Right	Aligns text objects to the right of the input field.

Table 65: Functions *Create text object*

With the functions in the right toolbar you can insert variable contents into the text object. Their values are not static but are adjusted at a certain point in time. Click on  to add a variable. Variables of the format *Number* can be additionally assigned a type (*Serial number*, *Batch*, or *Lot*). Click on  to add the variable into the text field.

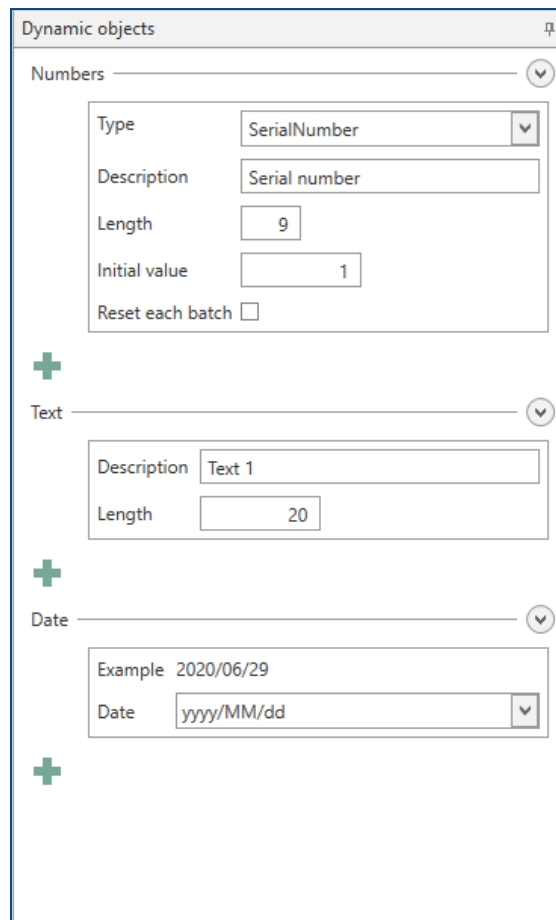


Fig. 151: Settings for text objects with dynamic contents

Name	Description
Number	
Type	Defines the type of the variable. You can select between the following types: - Serial number At the start of each production, the serial number is incremented by one value. If there are several serial numbers and the length is changed, this value changes for all serial numbers. - Batch The value is incremented by 1 when the maximum number of serial numbers (length) has been reached. - Lot Indicates the number of fully produced batches. The value is incremented by 1 when the maximum number of batches has been reached.
Description	Indicates the description of the variable.
Length	Defines the maximum number of digits for this variable. Example: At a length of 3, the maximum value is 999.

Name	Description
Initial value	Defines the initial (starting) value of the variable.
Reset each batch	Activates/Deactivates resetting the serial number after each batch.
Batch size	Defines the maximum batch size. A batch has been produced, when the maximum serial number has been reached.
Reset each lot	Activates/Deactivates resetting the count after each lot.
Lot size	Defines the maximum lot size. A lot has been produced, when the maximum batch size has been reached.
Text	
Description	Specifies the description of the variable.
Length	Indicates the maximum character length of the variable.
Date	
Example	Displays an example of the date according to the selected format.
Date	Defines the format used for displaying the date.

Table 66: Functions for dynamic text objects



When adding dynamic objects, the user guidance step *Layout* only displays example values.

3.3.11 Create Data Matrix code

Creates a Data Matrix code in the current layer

Summary

Use the function [Create Data Matrix code] to create a 2D code in a rectangular matrix in the user guidance step *Layout*. This code can be read using a camera.

The Data Matrix codes are automatically assigned to the currently selected layer.


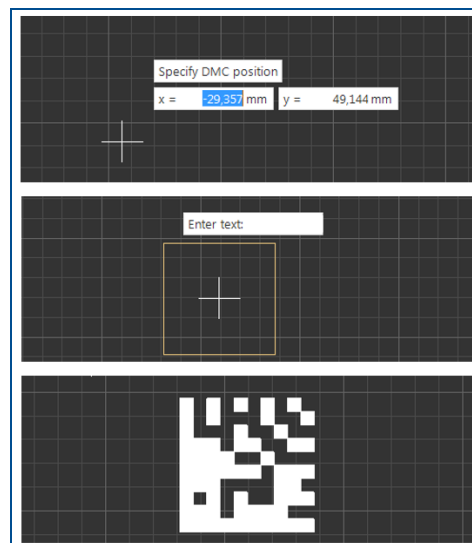


Fig. 152: Create Data Matrix code

With the functions in the right toolbar, variable contents can be displayed as Data Matrix code. These values are not static but are adjusted at a certain point in time. Click on  to add a variable of a specific data format (*Number*, *Text*, or *Date*).

Variables of the format *Number* can be additionally assigned a type (*Serial number*, *Batch*, or *Lot*). Click on  to insert the variable into the text field.

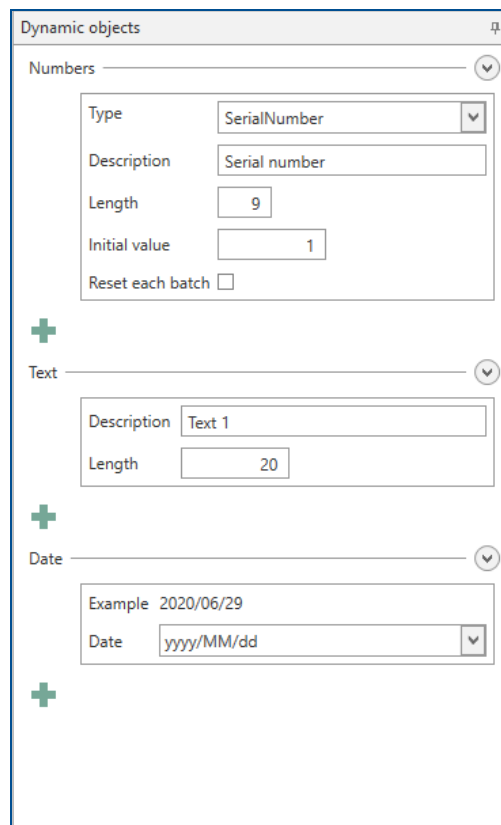

The screenshot shows the 'Dynamic objects' settings window. It contains three main sections: 'Numbers', 'Text', and 'Date'. Each section has a plus icon to its left. The 'Numbers' section includes fields for 'Type' (set to 'SerialNumber'), 'Description' (set to 'Serial number'), 'Length' (set to '9'), 'Initial value' (set to '1'), and a 'Reset each batch' checkbox. The 'Text' section includes fields for 'Description' (set to 'Text 1') and 'Length' (set to '20'). The 'Date' section includes an 'Example' field (set to '2020/06/29') and a 'Date' field with a dropdown menu showing 'yyyy/MM/dd'.

Fig. 153: Settings for Data Matrix code with dynamic contents

Name	Description
Number	
Type	Defines the type of the variable. You can select one of the following types: - Serial number At the start of each production, the serial number is incremented by one value. If there are several serial numbers and the length is changed, this value changes for all serial numbers. - Batch The value is incremented by 1 when the maximum number of serial numbers (length) has been reached. - Lot Indicates the number of fully produced batches. The value is incremented by 1 when the maximum number of batches has been reached.
Description	Defines the description of the variable.
Length	Defines the maximum number of digits for this variable. Example: At a length of 3 the maximum value is 999.

Name	Description
Initial value	Defines the initial (starting) value of the variable.
Reset each batch	Activates/Deactivates resetting the count after each batch.
Batch size	Defines the maximum batch size. A batch has been produced, when the maximum serial number has been reached.
Reset each lot	Activates/Deactivates resetting the count after each batch.
Lot size	Defines the maximum lot size. A lot has been produced, when the maximum batch size has been reached.
Text	
Description	Defines the description of the variable.
Length	Defines the maximum character length of the variable.
Date	
Example	Displays an example of the date according to the selected format.
Date	Defines the format used for displaying the date.

Table 67: Functions for dynamic Data Matrix codes

3.3.12 Fiducial

Displays a fiducial at the cursor position. Left-click to determine the center of the fiducial and to create the fiducial.

Summary

The total size of the fiducial can be defined by the diameter in *Options > Miscellaneous > Fiducial > Diameter*.

3.3.13 Automatic fiducial creation

Opens a dialog for automatic fiducial creation.

Summary

The dialog *Automatic fiducial creation* allows you to change the settings for the automatic fiducial creation.

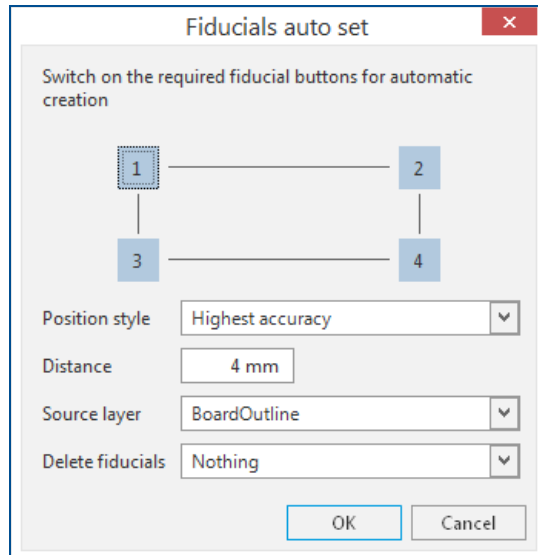


Fig. 154: Dialog *Automatic fiducial creation*

The following settings are available:

Name	Description
1, 2, 3, 4	Selects the fiducials that are to be created automatically.
Position style	Selects the criterion according to which the fiducials are to be placed. Highest accuracy: The fiducials are placed in a way that they can be captured with high accuracy in the camera image. Material efficient: The fiducials are placed so that the material is optimally used.
Distance	Indicates the (outer) distance between source layer and fiducials in x and y.
Source layer	Indicates the layer where fiducials are to be created.
Delete fiducials	Selects how to handle existing fiducials. None: The existing fiducials remain. All: All existing fiducials are deleted. Overlapping: Remaining fiducials that are automatically overlapping due to automatic creation are deleted.

Table 68: Dialog *Automatic fiducial creation*

3.3.14 Create fiducial with defaults

Creates a fiducial with standard camera settings.

Summary

To change standard values, open the user guidance step *Camera* and click [Library]. Select the entry marked as *Standard* and adopt the current camera settings by using [Apply] or [OK].

3.3.15 Create instance type...

Creates an instance type with the selected objects as a primary instance.

Summary

An instance type consists of a primary instance and at least one instance. Instances are references to the primary instance. The primary instance is produced at the position of the individual instance during processing.

Subsequent changes to the primary instance are applied only partially. Once you remove an object, this is applied immediately to the instance. If you want to add new objects, you have to dissolve the instance type and create it anew with the added objects

The fiducials contained in the primary instance are created as local fiducials and are also multiplied during processing.

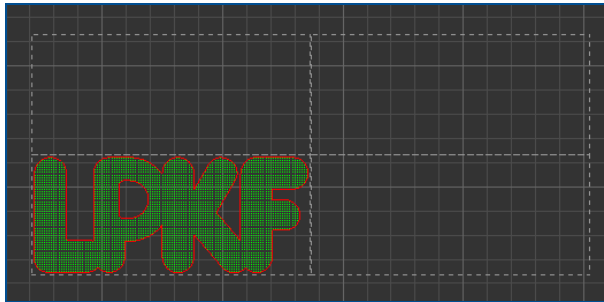


Fig. 155: Instance type (with primary instance and three instances)

To create tool paths for an instance type, you must use the user guidance step *Workflow* to assign it to an instance group.

Compared to multiplied data (Step and Repeat), instances have several advantages:

- You need less memory. As a result, the data is loaded faster and its calculation accelerated.
- Tool paths are only calculated for the primary instance and reused for the other instances. This greatly speeds up the calculation of the tool paths.

3.4 Menu *Layout*

This menu contains functions to create and edit geometric objects in the user guidance step *Layout*.

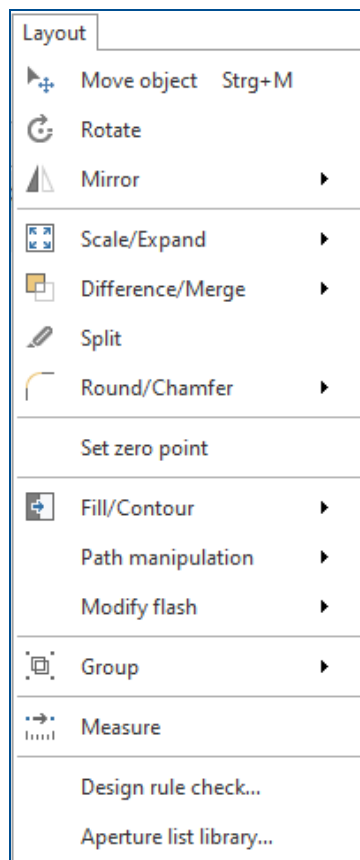


Fig. 156: Menu *Layout*

The icons/functions of the menu *Layout* are described in the following table:

Icon	Name	Description
	Move object	Moves the selected object by a defined distance and direction.
	Rotate	Rotates one or multiple objects around a definable pivot point.
	Mirror horizontally	Mirrors one or multiple objects around the horizontal coordinate axis (x axis).
	Mirror vertically	Mirrors one or multiple objects around the vertical axis of reflection (y axis).
	Scale	Scales up or scales down the marked object by the scale factor.
	Expand	Expands or shrinks the marked object by a definable length.
	Merge	Merges adjoining or overlapping objects to a single geometrical object.
	Difference	Removes the area of a geometrical object that is overlapped by a second selected object.
	Split	Splits a marked object using a predefined path.

Icon	Name	Description
	Round	Rounds the corners of the marked object.
	Chamfer	Chamfers the corners of the marked object.
	Set zero point	Sets the zero point to the selected position in the user guidance step <i>Layout</i> .
	Convert to polygon	Converts a selected closed path into a filled object.
	Convert to closed path	Converts a filled object into a closed path.
	Add point	Adds a point on a selected line.
	Add mirror point	Adds two points with the same distance from the reference point.
	Move point	Moves a selected point.
	Split path	Splits the selected line segment of a path
	Reduce number of elements	Removes redundant points in the selected object.
	Change line width	Changes the line width of the selected path.
	Change arc radius	Changes the arc radius of the selected path.
	Close open path	Connects both end points of an open path with a line.
	Convert to flash	Converts a selected object into a flash object.
	Combine to flash	Combines two or more selected objects to one flash object.
	Compare to flash	Compares the selected flash with objects on the same layer. Objects of the same shape are converted into a flash.
	Explode flash	Converts the flash into an object.
	Group	Groups selected objects.
	Ungroup	Ungroups grouped objects.
	Measure	Measures the distance between two points.
	Design rule check	Opens the dialog <i>Design rule check</i> .
	Aperture list library	Opens the dialog <i>Aperture list library</i> .

Table 69: Menu *Layout*

3.4.1 Move object

Moves the marked object/the marked contour by a defined distance and direction.

Summary

Before moving, a reference point has to be determined. This point can also be located outside of the marked object/contour and even be created on other objects/contours. After the reference point is determined, distance and direction can be specified. In the context menu, the object displacement can be set to the absolute coordinates with *Switch to absolute coordinates*.

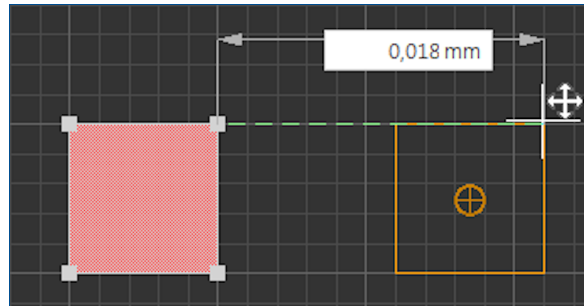


Fig. 157: Move object/contour

3.4.2 Rotate

Rotates one or multiple objects around a definable pivot point.

Summary

The marked objects/contours are rotated around one point. Thereby, you choose the position of the angle point and the rotation angle.

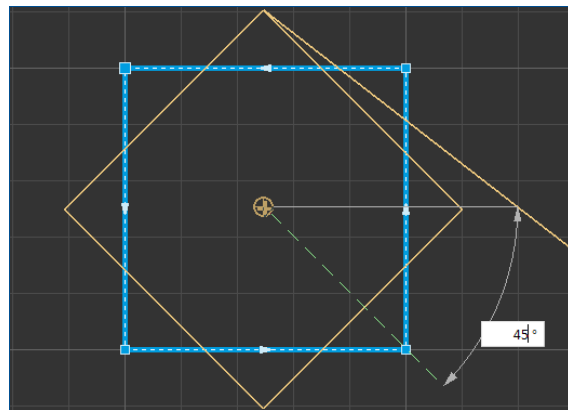


Fig. 158: Rotating an object/a contour

3.4.3 Mirror horizontal

Mirrors one or multiple objects around the horizontal axis of reflection (x axis).

Summary

The axis of reflection is located at the centroid of area of the selected object. If multiple objects are selected, a common centroid of area is calculated that is used for the reflection. The centroid of area can even be located outside of the objects.

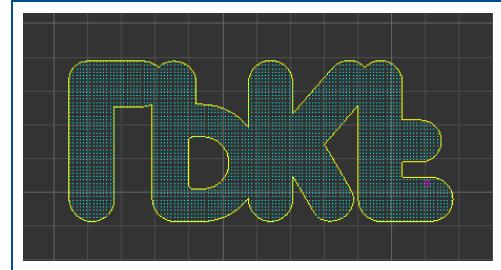
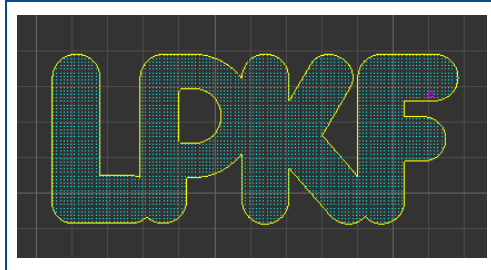


Fig. 159: Mirror object horizontally

3.4.4 Mirror vertical

Mirrors one or multiple objects around the vertical axis of reflection (y axis).

Summary

The axis of reflection is located at the centroid of area of the selected object. If multiple objects are selected, a common centroid of area is calculated that is used for the reflection. The centroid of area can even be located outside of the objects.

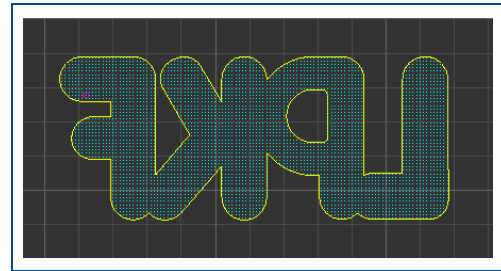
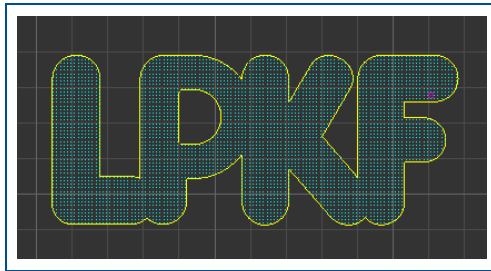


Fig. 160: Mirror object vertically

3.4.5 Scale

Scales up or scales down the marked object by the scale factor.

Summary

All lines of the object are scaled uniformly so they keep their original shape even after increasing/reducing the size.

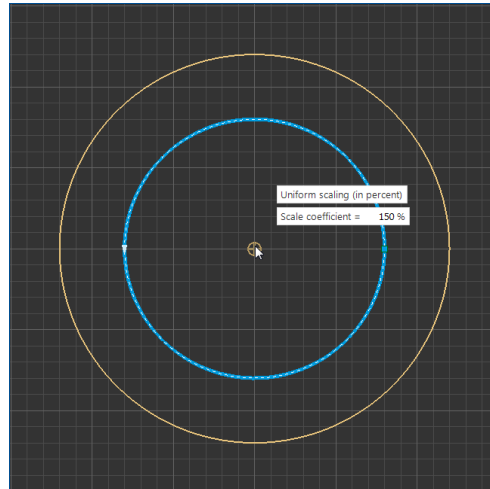


Fig. 161: Scaling object

3.4.6 Expand

Increases or decreases the marked object by a definable offset to the contour.

Summary

The marked object is increased or decreased uniformly around all sides. Increasing the object can cause a significant change of the shape.

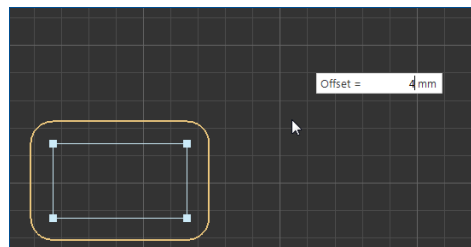


Fig. 162: Expanding an object

The function is only available if a single object is marked. Multiple objects cannot be expanded at the same time.

3.4.7 Difference

Removes the area of a geometrical object that is overlapped by a second selected object.

Summary

[Difference] is only available if a filled object is selected. If the function is activated, a second object has to be selected. The area where the objects are overlapping is deleted.

After using this function, the second object is deleted by default. This setting can be changed in the options.

Objects that have been edited with [Difference] can only be restored to the previous state with [Undo].

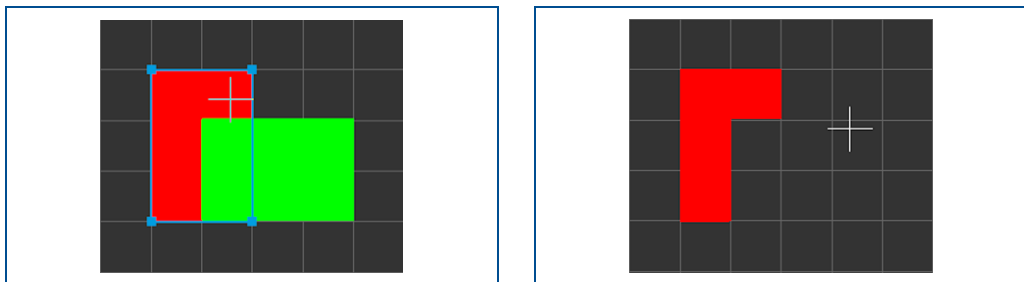


Fig. 163: Difference

3.4.8 Merge

Merges adjoining or overlapping objects to a single geometrical object.

Summary

[Merge] is only available if at least two geometrical objects are marked.

Merged objects can only be restored to the previous state with [Undo].

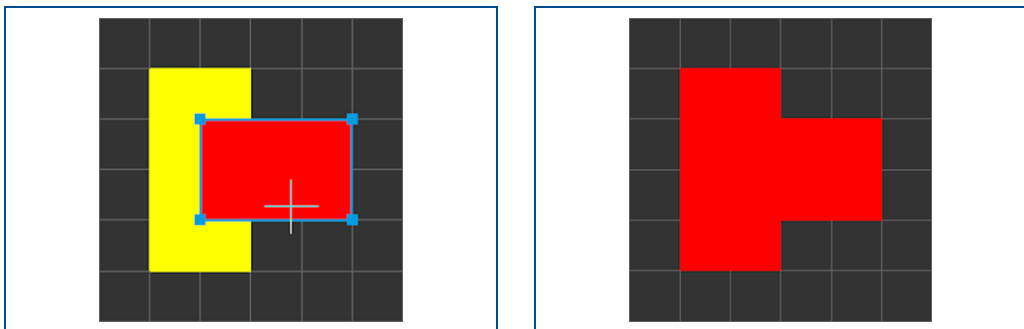


Fig. 164: Merge objects

The created object is assigned to the layer of the objects used. If the objects are located on different layers, the newly created object is assigned to the upmost layer used.

3.4.9 Split

Splits a marked object by using a predefined path.

Summary

When splitting, the line located on the object to be split is drawn first. Later, this line shall be used as a dividing line. Then select the object and enable the [Split] function. Click the line to split the object at the position of the line.

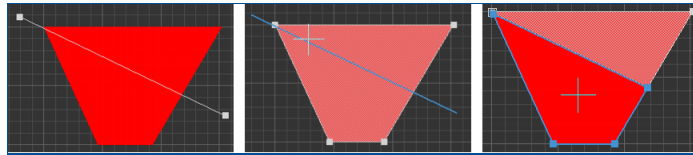


Fig. 165: Splitting an object

3.4.10 Round

Rounds the corners of the marked object.

Summary

You can specify the roundings and select the angles to be rounded.

A distinction is made between the outer and inner angles.

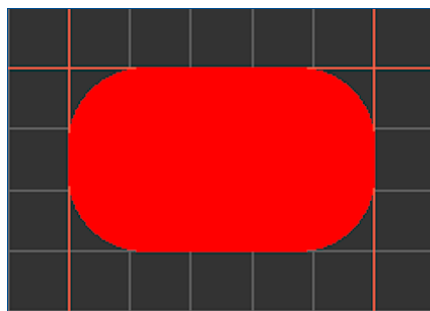


Fig. 166: Round angle

Outer angles have an angle smaller than 180° within the geometric object.

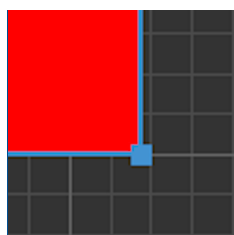


Fig. 167: Outer angle

Inner angle have an angle greater than 180° within the geometric object.

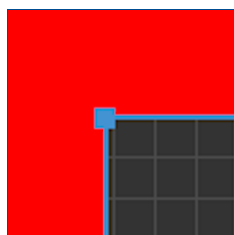


Fig. 168: Inner angle

3.4.11 Chamfer

Chamfers the corners of the marked object.

Summary

You can specify the length of the chamfered sides and the angle to be chamfered.

A distinction is made between the outer and inner angles.

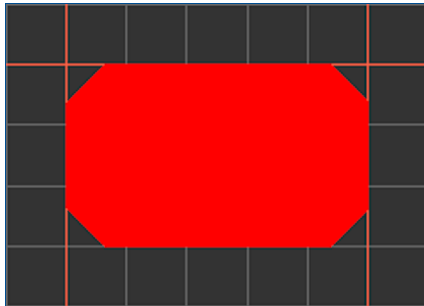


Fig. 169: Chamfer angle

Outer angles have an angle smaller than 180° within the geometric object.

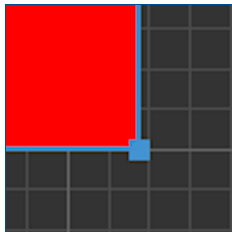


Fig. 170: Outer angle

Inner angle have an angle greater than 180° within the geometric object.

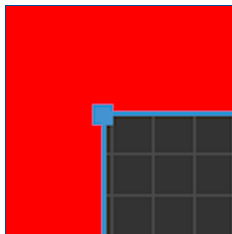


Fig. 171: Inner angle

3.4.12 Set zero point

Sets the zero point to the selected position in the user guidance step *Layout*.

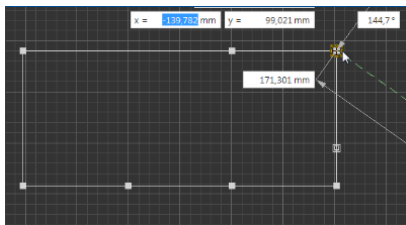


Fig. 172: Setting zero point

3.4.13 Convert to polygon

Fills a marked closed path.

Summary

[Convert to polygon] is only available if a closed path is marked.

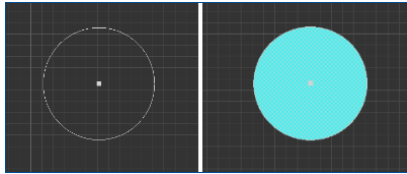


Fig. 173: Converting object to polygon

3.4.14 Convert to closed path

Removes the filling of filled objects.

Summary

[Convert to closed path] is only available for marked and filled objects.

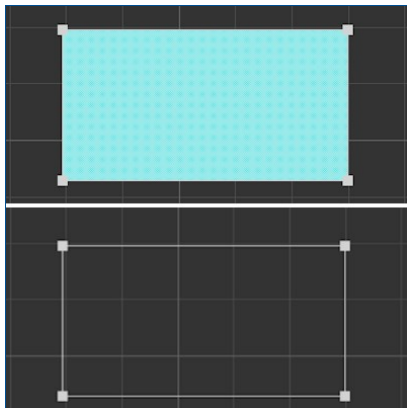


Fig. 174: Converting object to closed path

3.4.15 Add point

Adds a point on a marked line segment.

Summary

[Add point] is only available if a line or a point of a segment is marked.

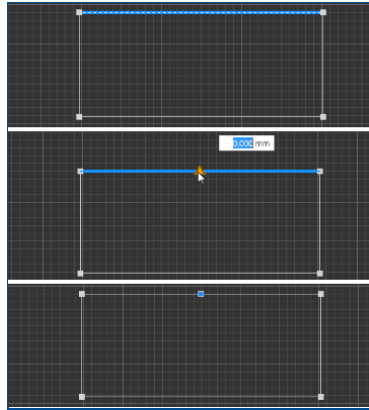


Fig. 175: Add point

3.4.16 Add mirror point

Adds two points with the same distance from the reference point.

Summary

[Add mirror point] is only available if a line or a point of a segment is marked.

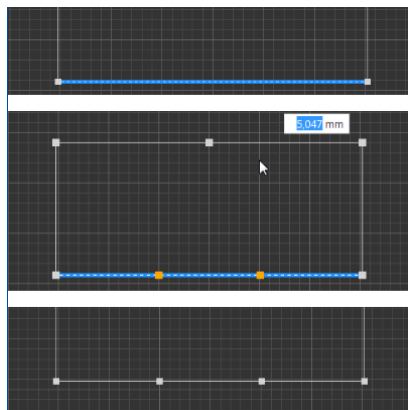


Fig. 176: Add mirror point

3.4.17 Close open path

Connects both end points of an open path with a line.

Summary

[Close open path] is only available if an open path is marked. The marked object is converted to a closed path.

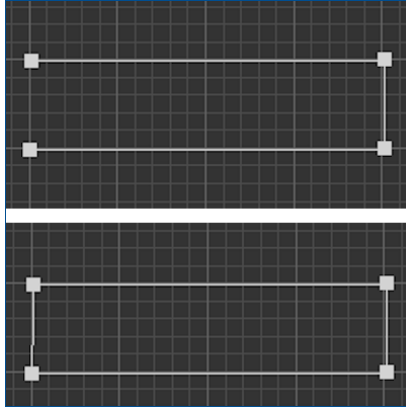


Fig. 177: Close open path

3.4.18 Move point

Moves a marked point.

Summary

The marked point can be moved by using the mouse or by entering the relative coordinates (default setting). In the context menu, you can use *Switch to absolute coordinates* to convert the point displacement to absolute coordinates. Several points can be selected, as long as they are located in the same object.

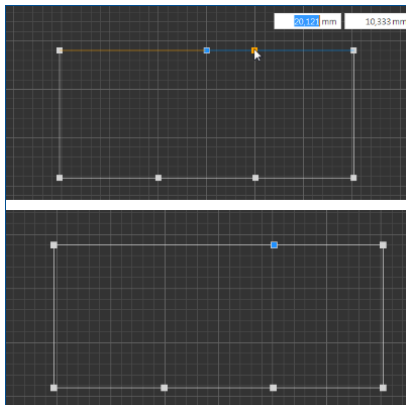


Fig. 178: Move point

3.4.19 Split path

Splits the marked line segment of a path.

Summary

The line segment can be split at the mouse position or by entering relative coordinates referring to the center of the path or the selected point.

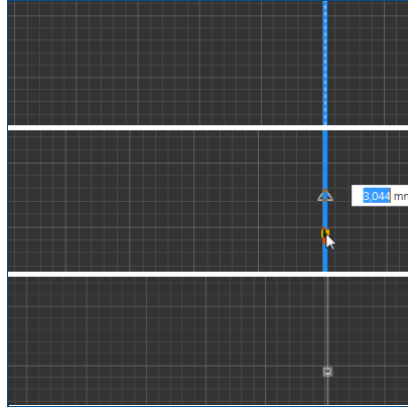


Fig. 179: Split path

[Split path] cannot be used for filled objects.

3.4.20 Reduce number of elements

Removes redundant points in the marked object.

Summary

The shape of the object is not changed. Only the points that are not required for the current shape are removed.

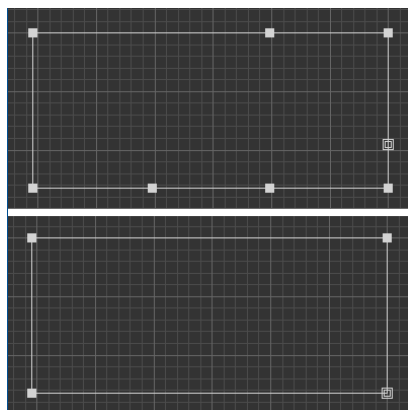


Fig. 180: Reduce number of elements

3.4.21 Change line width

Changes the line width of the marked path.

Summary

[Change line width] is only available if a path is marked. When increasing the line width, the outer corners are rounded.

The line width is entered as a fixed value in mm.

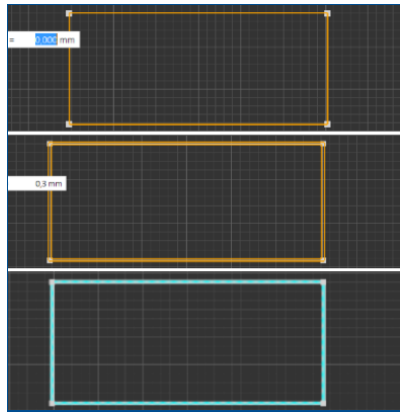


Fig. 181: Change line width

3.4.22 Change arc radius

Changes the arc radius of the selected path.

Summary

[Change arc radius] is only available if a path is marked. This function can also be selected via the context menu. The arc radius is changed by defining a distance from the original path.

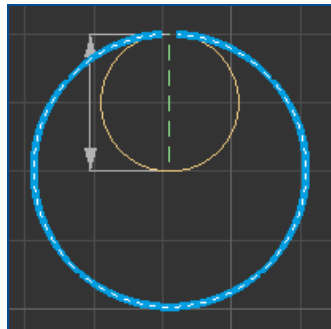


Fig. 182: Change arc radius

3.4.23 Convert to flash

Converts a marked object into a flash.

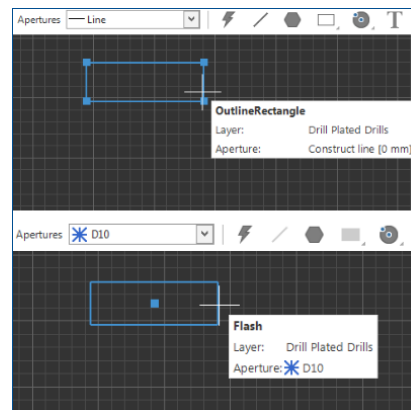


Fig. 183: Converting an object into a flash

3.4.24 Combine to flash

Combines two or more marked objects to one flash.

Summary

Geometrical objects as well as flashes can be used. After combining the objects, an aperture based on the newly created flash is created.

The combined objects within the flash can only be moved together.

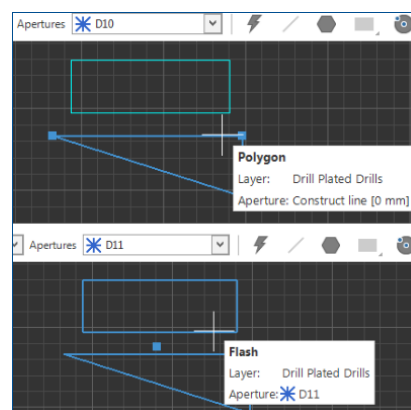


Fig. 184: Combining objects to flash

3.4.25 Compare to flash

Compares the marked flash with objects on the same layer. Objects of the same shape are converted into a flash.

Summary

Smaller deviations of the object's size and angles can be adapted by entering tolerance values in the dialog.

3.4.26 Explode flash

Converts the flash into an object.

3.4.27 Group

Groups marked objects.

Summary

[Group] is only available if at least two objects are marked.

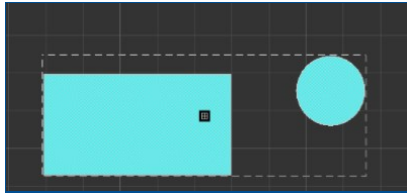


Fig. 185: Group objects

3.4.28 Ungroup

Ungroups objects.

Summary

[Ungroup] is only available if grouped objects are marked exclusively.

3.4.29 Measure

Measures the distance, starting from the selected position.

Summary

The selected position is used as the initial point for measurement. As soon as you select another position, it is used as initial point for measurement.

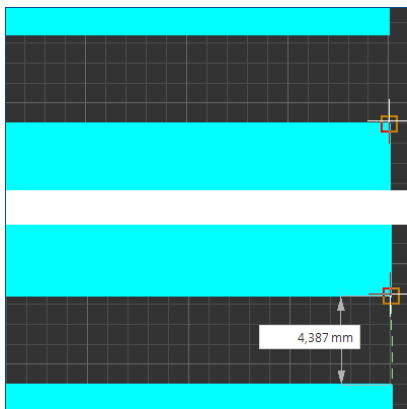


Fig. 186: Measure from point to point

3.4.30 Design rule check

Opens the dialog *Design rule check*.

Summary

Use the Design rule check for checking if the PCB layout complies with the defined and recommended standards of the Design rule check.

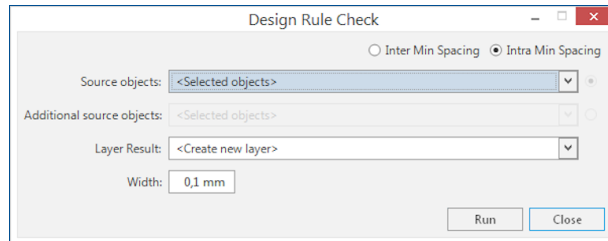


Fig. 187: Dialog *Design rule check*

The following can be checked with the *Design rule check*:

- Spacing of objects on different layers.
- Spacing of objects on the same layer.

3.4.31 Aperture list library

Opens the dialog *Aperture list library*.

Summary

In the dialog *Aperture list library*, aperture lists can be copied, edited, deleted and imported.

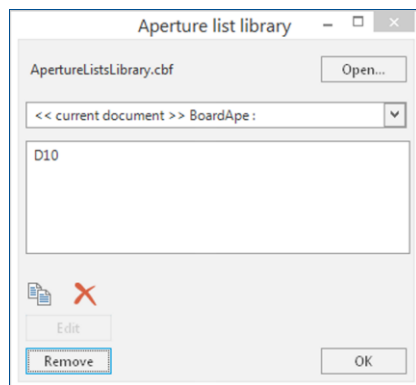


Fig. 188: Dialog *Aperture list library*

3.5 Menu *Toolpaths*

This menu contains settings for toolpaths.

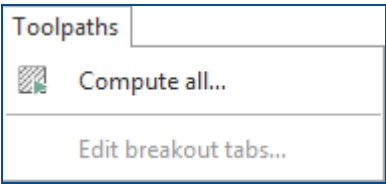


Fig. 189: Menu *Toolpaths*

The icons/functions of the menu *Toolpaths* are described in the following table:

Icon	Name	Description
	Compute all...	Computes the toolpaths based on the computed scan fields and work packages.
	Edit breakout tabs...	Edits the breakout tabs of the workpiece.

Table 70: Menu *Toolpaths*

3.5.1 Compute all...

Computes the toolpaths based on the computed scan fields and work packages.

3.5.2 Edit breakout tabs

Opens a dialog for editing the settings of the breakout tabs.

Summary

In the dialog *Edit breakout tabs position* the *Gap width* can be modified, the *Break position* can be changed by entering values for *x* and *y* , the breakout tabs can be deleted, and the breakout tabs can be created.

The dialog is structured as follows:

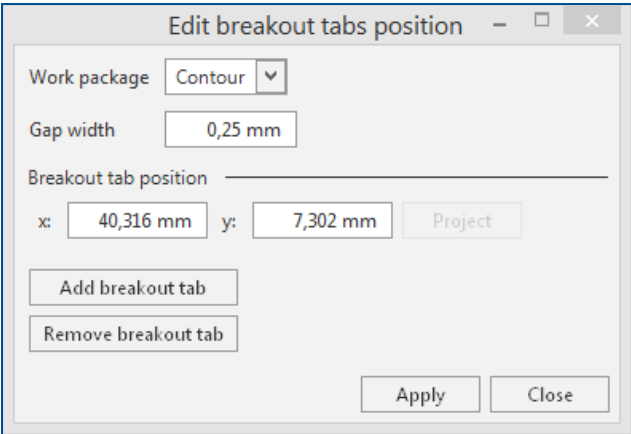


Fig. 190: Dialog *Edit breakout tabs position*

The following settings are available:

Function	Description
Work package	List for selecting a work package.
Gap width	Indicates the width of the breakout tabs.
Break tab position	Indicates the x and y position of the selected breakout tab.
Project	Indicates the projection of the breakout tab.
Add breakout tab	Adds a new breakout tab.
Remove breakout tab	Deletes the selected breakout tab.

Table 71: Dialog *Edit breakout tabs position*

3.6 Menu *Processing*

This menu contains functions for processing the previously defined processing data.

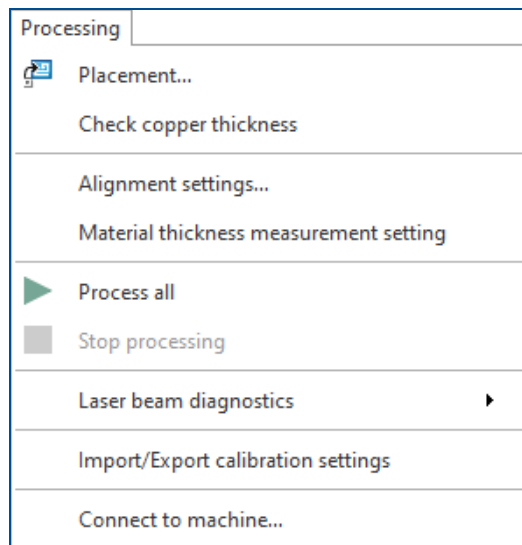


Fig. 191: Menu *Processing*

The entries of the menu *Processing* are described in the following table:

Icon	Name	Description
	Placement...	Opens a dialog for shifting the processing data.
	Check copper thickness	Opens a dialog for checking the copper thickness.
	Alignment settings...	Opens a dialog for configuring the fiducial search. While processing, these settings are used for the fiducial search.
	Material thickness measurement setting	Opens the dialog <i>Material thickness measurement settings</i> . This dialog is only available if the connected machine allows a material thickness measurement.
	Process all	Starts the production of all processing data.
	Stop processing	Stops the production of the processing data.
	Power measurement	Opens the dialog <i>Power measurement</i> .
	Laser beam diagnostics	Opens the dialog <i>Laser diagnostics</i> .
	Import/Export calibration settings	Opens a dialog for importing and exporting calibration settings.
	Connect to machine...	Opens a dialog for connecting the system software to a real or simulated machine.

Table 72: Menu *Processing*

■ Referencing the processing area

After replacing or cleaning the sinter plate and after transporting the system, it is recommended to re-reference the processing area. This function is only available if the required sensor is present in the system.

1. In the menu *Processing*, click on *Material thickness measurement setting*.
2. Click on [Perform referencing] to start the procedure.
- ☐ The message *Thickness measurement running* is displayed.
3. Wait until the measurement is finished.
- ☒ The processing area has been referenced.

3.6.1 Placement...

Opens the dialog *Placement* for rotating and moving the processing data.

Summary

The dialog *Placement* allows correct placement of the material. Once the toolpaths and scan fields have been generated, the tab *Processing data* is also displayed.

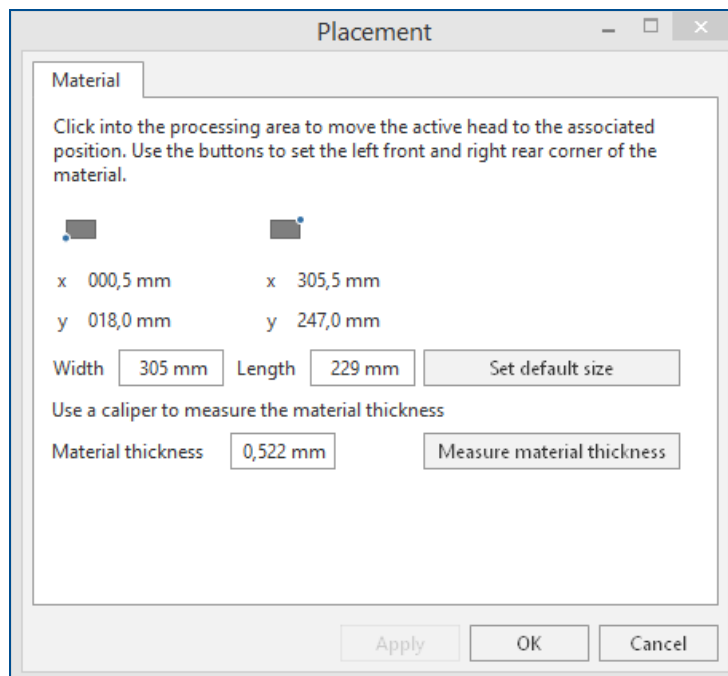


Fig. 192: Dialog *Placement*

The button [Measure material thickness] starts the automatic measurement of the material thickness. This function is used for unconventional material thicknesses and is only available if the required sensor is present in the system.

The following functions are available in the tab *Material*:

Name	Description
Material	
Width	Specifies the width of the material.
Length	Specifies the length of the material.
Set default size	Resets the width and length to the initial value.
Material thickness	Specifies the material thickness.
Measure material thickness	Measures the thickness of the material. You can find more settings for the thickness measurement in the menu <i>Processing</i> under <i>Material thickness measurement setting</i> .

Table 73: Dialog *Placement* | Tab *Material*

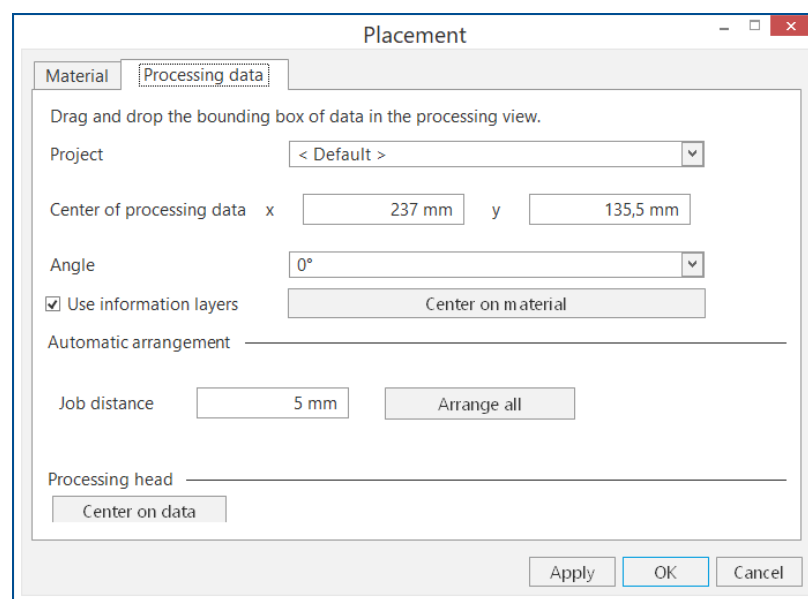


Fig. 193: Dialog *Placement* | Tab *Processing data*

The following functions are available in the tab *Processing data*:

Name	Description
Project	Specifies which processing data are to be placed when using multiple project files or instance types.
Center of processing data	Specifies the center of the processing data in x and y direction.
Angle	Rotates the processing data by a definable angle.
Use information layers	Takes the information layers into account when placing the processing data.
Center on material	Positions the processing data on the center of the material.
Automatic arrangement	
Job distance	Indicates the distance in [mm] between the individual jobs during automatic arrangement.
Arrange all	Takes the specified job distance into account when starting automatic arrangement of the processing data.
Processing head	
Center on data	Positions the processing head at the center over the processing data.
Show bounding box	Shows the bounding box of the processing data.

Table 74: Dialog *Placement* | Tab *Processing data*

3.6.2 Check copper thickness

Opens a dialog for checking the copper thickness.

Summary

In the dialog *Copper thickness* the copper thickness required for the process can be checked and changed if necessary.

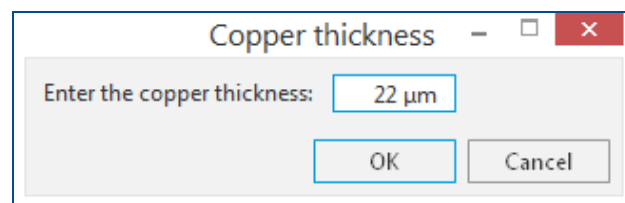


Fig. 194: Copper thickness

You can create a work package of the type *Instruction* in the user guidance step *Workflow* containing the instruction *Check copper thickness* to open this dialog automatically during production.

3.6.3 Alignment settings

Opens a dialog for configuring the fiducial search.

Summary

In the dialog *Alignment settings* you can configure the fiducial search settings. While processing, these settings are used for the fiducial search.

You can adjust the search area, the fiducial criteria, and the alignment settings.

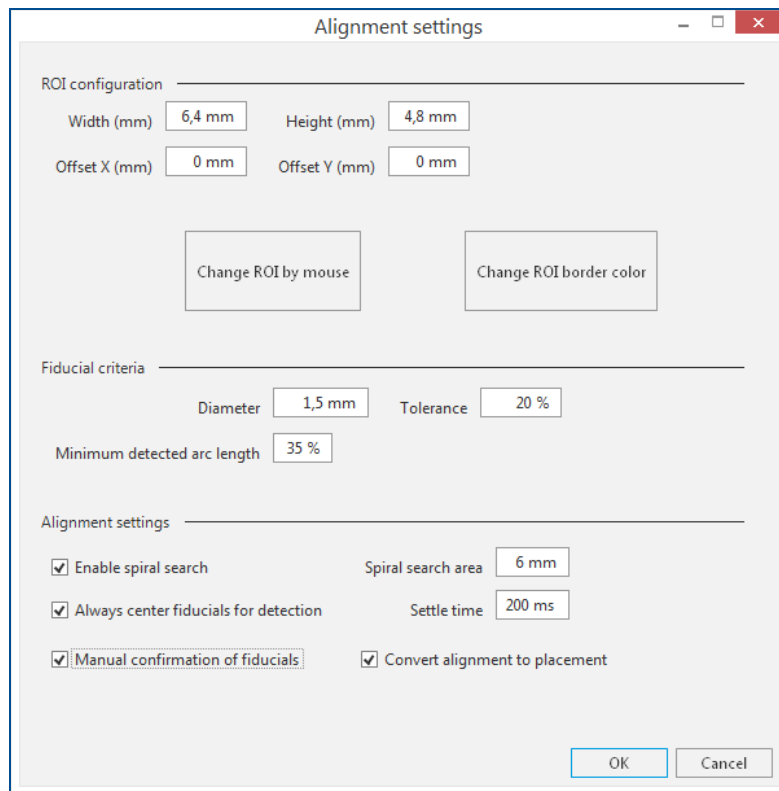


Fig. 195: Dialog *Alignment settings*

Name	Description
ROI configuration	
Width (mm)	The specified width is used for the search in the camera pane. If this value is decreased, measuring works faster. Large fiducials (larger than 1 mm) incur the risk of not being recognized.
Height (mm)	The specified height is used for the search in the camera pane. If this value is decreased, measuring works faster. Large fiducials (larger than 1 mm) incur the risk of not being recognized.
Offset X (mm)	Defines an offset in x direction.
Offset Y (mm)	Defines an offset in y direction.
Fiducial criteria	
Diameter	Displays the allowed diameter of the fiducial.
Tolerance	Indicates the allowed tolerance for the fiducial search.
Minimum detected arc length	Indicates the minimum allowed arc length for the fiducial search.
Alignment settings	
Enable spiral search	Activates the spiral search within the alignment settings.
Always center fiducials for detection	If this function is activated, the camera is positioned above the center of the fiducial.
Manual confirmation of fiducials	If this function is activated, the position has to be manually confirmed, after a fiducial is found.
Spiral search area	Determines the searching area for the spiral search.
Settle time	Determines how long the system should wait after a movement.
Convert alignment to placement	If this function is active, the alignment settings are also applied in the dialog <i>Placement</i> .

Table 75: Dialog *Alignment settings*

3.6.4 Material thickness measurement setting

The dialog *Material thickness measurement settings* contains functions for measuring the material thickness and for defining the processing area.

Fig. 196: Dialog Material thickness measurement settings

Button/Element	Description
Perform thickness measurement during process	Activates the material thickness measurement during processing. The material thickness measurement is started by a work package of the type <i>Instruction</i> . The option Material placement must be selected here as instruction.
Material thickness tolerance	Specifies the permissible measurement deviation from the specified material thickness. The lower the tolerance, the longer the process time.
Min hole distance	Specifies the minimum hole spacing of the printed circuit board. This ensures that the material thickness measurement does not take place in a hole or other depression of the material.
Measurement strategy	Sets the measurement strategy. Measure three points: A total of three points are measured Measure five points: A total of five points are measured Measure one point per scan field: Each scan field is measured separately with one point at a time.
Referencing	
Left rear	x, y, and z coordinates of the material at the left rear corner.

Button/Element	Description
Right rear	x, y, and z coordinates of the material at the rear right corner.
Center	x, y, and z coordinates of the material at the center.
Front left	x, y, and z coordinates of the material at the front left corner.
Front right	x, y, and z coordinates of the material at the front right corner.
Material thickness	Specifies the material thickness. If a material template is used in the user guidance step <i>Material</i> , the value of the material thickness is automatically entered.
Perform referencing	Starts the referencing of the processing area taking into account the selected measuring strategy. Referencing should always be carried out after cleaning or replacing the sinter plate and after transport to ensure the highest possible precision of the system.

Table 76: Functions in the dialog *Material thickness measurement settings*

3.6.5 Process all

Starts the production of all processing data.

3.6.6 Stop processing

Stops the current production.

3.6.7 Power measurement

Opens the dialog *Power measurement*.

Summary

The laser power of the system can be measured here.

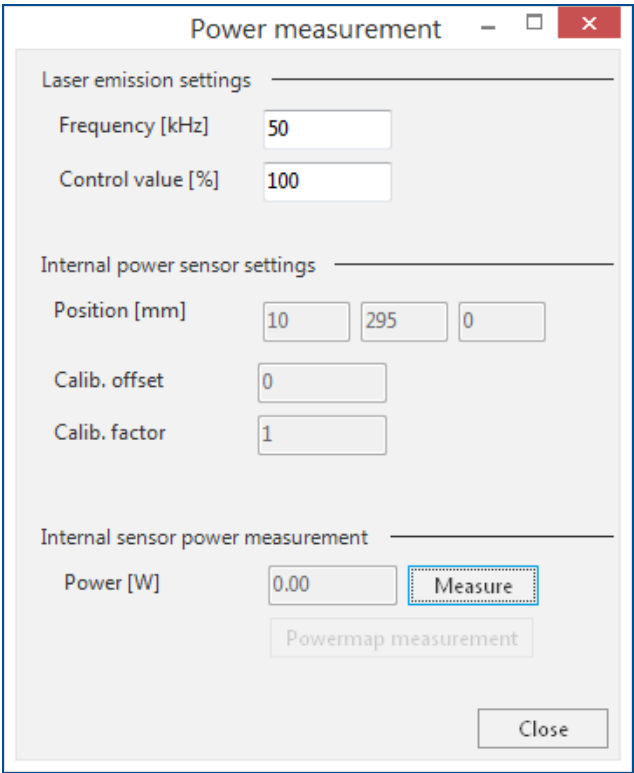


Fig. 197: Dialog *Power measurement*

Name	Description
Laser emission settings	
Frequency [kHz]	Defines the frequency for operating the laser.
Control value [%]	Defines the control value for operating the laser.
Internal power sensor settings	
Position [mm]	Displays the position of the laser power sensor.
Calib. offset	Displays the calibration offset of the laser power measurement.
Calib. factor	Displays the calibration factor of the laser power measurement.
Internal sensor power measurement	
Power [W]	Click on [Measure] to display the laser power measured by the laser power sensor.
Powermap measurement	Starts the power measurement for creating a powermap.

Table 77: Dialog *Power measurement*

3.6.8 Laser beam diagnostics

Opens the dialog *Laser diagnostics*.

Summary

You can diagnose the laser beam here which includes a focus measurement and determining the optimum cutting speed.

Fig. 198: Dialog *Laser diagnostics*

The following settings are available:

Button	Description
Laser diagnostics process position	
Reset zero position	Defines the current position as the zero position.
Move to the next position	Moves to the next position.
	Moves the processing head to the next/previous position.
Material thickness value	Specifies the offset between the laser sensor and the processing table. This value has been set correctly already on delivery of the system.
Focus measurement	
Cut the pattern	Activated: A test pattern is cut during focus measurement. This is necessary for the first focus measurement. Deactivated: The focus is measured with a test pattern that was cut previously.
Coarse focus	Starts the coarse focus measurement. This requires that a test pattern is cut first that is evaluated with the vision system. The measured value is displayed in <i>Measured focus</i> .

Button	Description
Fine focus	Starts the fine focus measurement. This requires that a test pattern is cut first that is evaluated with the vision system. The measured value is displayed in <i>Measured focus</i> .
Astigmatism	Indicates the ratio between the x focus level and y focus level of the laser beam. An astigmatism of ≥ 0.2 mm indicates a technical problem with the system.
Apply	Applies the focus values determined with [Coarse focus] and [Fine focus].
Cutting speed	
Cut the pattern	Activated: A test pattern is cut when determining the cutting speed. This is necessary when determining the cutting speed for the first time. Deactivated: The cutting speed is determined with a test pattern that was cut previously.
Cutting speed	Determines the optimum cutting speed.

Table 78: Buttons and functions in the dialog *Laser diagnostics*

3.6.9 Import/Export calibration settings

Opens a dialog for importing and exporting calibration settings.

Summary

Click on/Tap on [Import] to select a file from the file system to import calibration settings.

Click on/Tap on [Export] to save the active calibration settings in the file system.

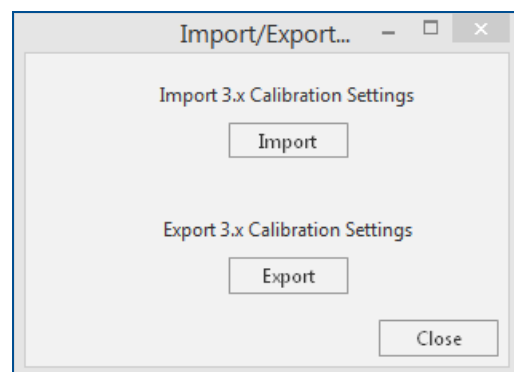


Fig. 199: Dialog *Import/Export calibration settings*

3.6.10 Connect to machine...

Opens a dialog where you can connect the system software to a real or simulated machine.

Summary

Select an appropriate machine from the list for connecting.

You can also simulate a virtual machine without having a real machine connected.

3.7 Menu Service

This menu contains password-protected menu items that are only available for the LPKF Service.

Use the menu item *Send support information* to send an email with support information to the LPKF Service.

Service
Calibration
Import settings from a previous version
Maintenance schedule
Send support information
Show reports
Equipment configuration

Fig. 200: Menu Service

The entries of the menu *Service* are described in the following table:

Name	Description
Calibration	Opens the CircuitPro operator UI. You can create and manage logbook entries here.
Import settings from a previous version	Opens a dialog for importing settings from an old CircuitPro installation.
Maintenance schedule	Displays the maintenance schedule of the connected system with the maintenance steps that have to be performed on a regular basis.
Send support information	Sends an email with support information to the LPKF Service.
Show reports	Opens the CircuitPro reports location in the file system.
Equipment configuration	Opens the dialog <i>Equipment configuration</i> . You can select LPKF systems and the equipment that has to be operated with CircuitPro here.

Table 79: Menu Service

3.7.1 Calibration

Opens the CircuitPro operator UI. You can create and manage diary entries here.

3.7.2 Import settings from a previous version

The menu item *Import settings from a previous version* allows you to import settings from previous CircuitPro versions and CircuitMaster versions. You can import settings from older CircuitPro PL versions automatically or select a folder of the file system manually. This function can only be used if no machine is connected. So disconnect the machine beforehand, if necessary (see).



Importing powermaps from *CircuitMaster 1.10* can cause errors if the Microsoft ACE drivers (Access Database Engine) are not installed on the system.

In case of errors, proceed as follows:

■ Troubleshooting powermap import errors

1. Navigate to the program folder of CircuitPro PL (C:\Program Files\LPKF Laser Electronics SE\LPKF CircuitPro PL [version number]\Support Files\Runtime\AccessEngine).
 2. Right-click on the application `AccessDatabaseEngine_X64.exe` and create a link.
 3. Right-click on the newly created link and click on *Properties*.
 4. In the tab *Link*, add the parameter **/quiet** in the line *Target*.
 5. Start the link.
 6. Once the installation has finished, retry importing the powermap.
- ☒ Troubleshooting of powermap import errors is finished.

3.7.3 Maintenance schedule

Displays the maintenance schedule of the system.

Summary

The maintenance schedule shows all maintenance steps that have to be performed for the system on a regular basis.

Maintenance step	Last performed	Scheduled for	Remaining time	Maintenance performed	Progress
Extraction hood	10/19/2022	10/26/2022	-110d 05h	Done	Red bar
Protection glass check	10/19/2022	10/26/2022	-110d 05h	Done	Red bar
Interior housing	10/19/2022	05d 08h	00d 21h	Done	Green bar
Extraction prefilter	10/19/2022	45d 08h	40d 21h	Done	Green bar
Protection glass replacement	Not performed yet	41d 16h	37d 05h	Done	Green bar
Lubricate spindle	Not performed yet	41d 16h	37d 05h	Done	Green bar
Filter drawer	Not performed yet	20d 20h	16d 09h	Done	Green bar
Compressed air	Not performed yet	20d 20h	16d 09h	Done	Green bar

Fig. 201: Dialog *Maintenance schedule* (example: ProtoLaser H4)

The functions in the dialog *Maintenance schedule* are described in the following table:

Button/Area	Description
Maintenance step	Shows all maintenance steps for the connected system. Pending maintenance tasks are displayed in red. Completed maintenance tasks are displayed in green. Clicking on a maintenance step opens the instructions for performing the selected maintenance step.
Last performed	Indicates when the maintenance step was last performed.
Scheduled for	Indicates when the next performance of the maintenance step is planned.
Remaining time	Shows the end of the maintenance interval.
Maintenance performed	Clicking on [Done] confirms that the maintenance step has been performed. After that, the maintenance interval is reset for this tasks.
Progress	Shows the progress of the maintenance step. A green bar indicates that the maintenance step has been completely performed. Red bar indicates that the maintenance step has not been performed yet.

Table 80: Dialog *Maintenance schedule*

3.7.4 Send support information

Sends support information to the LPKF Service

3.7.5 Equipment configuration

Contains settings for selecting LPKF systems and the corresponding tools.

Summary

In the tab *Systems*, you can select the LPKF systems that are to be operated with CircuitPro RP.

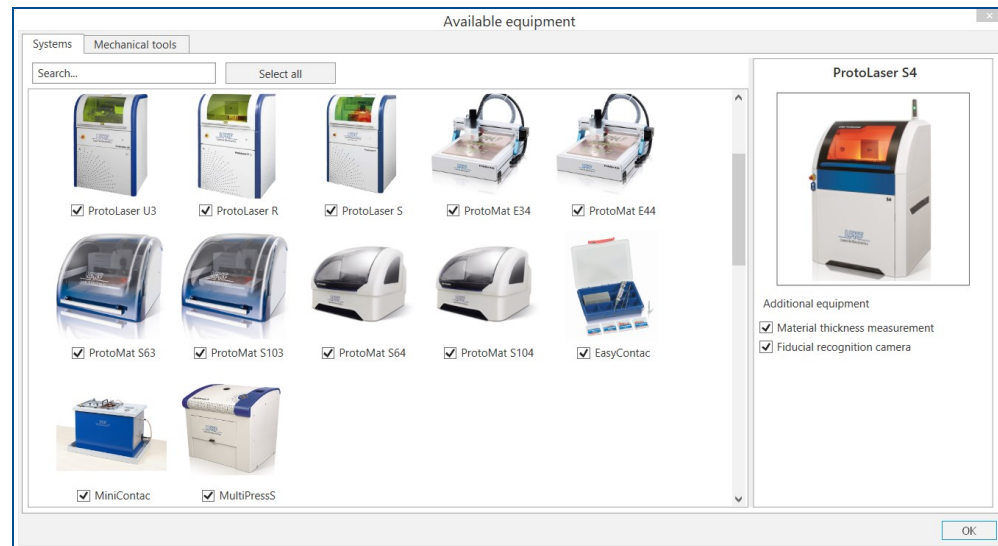


Fig. 202: Dialog Equipment configuration

The functions of the tab *Systems* are explained in the following table:

Button/Area	Description
Search...	Filters all systems by the searched term.
Select all	Selects all systems that are in the list.
Additional equipment	Selects for the selected system the additional equipment (options):
OK	Confirms the settings and closes the dialog.

Table 81: Dialog Equipment configuration | Tab Systems

In the tab *Mechanical tools*, you can select the tools available. The functions in the tab *Mechanical tools* are described in the following table:

Button/Area	Description
Select all	Selects all mechanical tools that are in the list.
Deselect all	Deselects all mechanical tools that are in the list.
OK	Confirms the settings and closes the dialog.

Table 82: Dialog Equipment configuration | Tab Mechanical tools

4 How to work with the software

The following pages provide information on the typical production process of the system and the software.

4.1 Typical production process

This chapter describes a typical production process.

The following tasks are executed:

- Selecting a material
- Importing the data
- Multiplying the layout (optional)
- Creating fiducials
- Computing toolpaths and scan fields automatically
- Computing scan fields manually (optional)
- Configuring toolpaths manually (optional)
- Loading the tool magazine
- Processing the PCB
- Stopping processing (optional)
- Switching off the system

■ Selecting a material

1. In the user guidance step *Material*, select the Material *FR4 Double-sided, 1.5 mm, 18/18 μ m*.

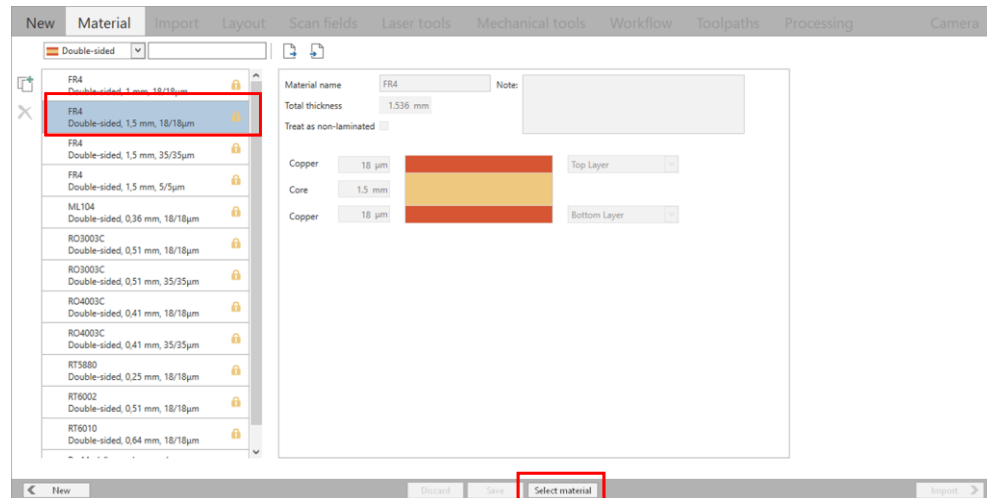


Fig. 203: User guidance step *Material*

2. Click on [Select material] or double-click on the desired material in the list.
 - ☐ The user guidance step *Import* appears.
 - ☒ The material has been selected.



Selecting a material type

By selecting the *Material* you also select the tools with the laser parameters specific to the material.

Example of the composition of the material name:

FR4 Double-sided, 1 mm, 18/18µm	🔒
FR4 Double-sided, 1,5 mm, 18/18µm	🔒
FR4 Double-sided, 1,5 mm, 35/35µm	🔒
FR4 Double-sided, 1,5 mm, 5/5µm	🔒
FR4 Nanya Double-sided, 1,5 mm, 35/35µm	🔒
IS400 Double-sided, 0,18 mm, 18/18µm	🔒
IS400	

- ▶ *FR4 Double-sided* – Material type
- ▶ *1.5 mm* – Material thickness
- ▶ *18/18 µm* – Copper layer thickness

■ Importing the data

1. In the user guidance step *Import* click on .
- The following dialog is displayed:

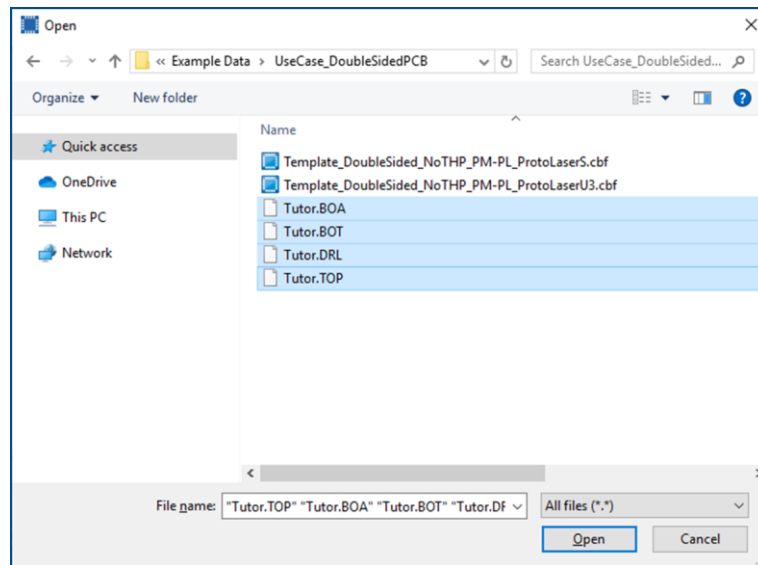


Fig. 204: Dialog Open

2. Navigate to the folder that contains the data you wish to import. For the example data that are used for this tutorial, refer to the folder:
C:\Program Files\LPKF Laser & Electronics SE\
LPKF CircuitPro RP\Example Data\UseCase_DoubleSidedPCB.
3. Select the desired files for import (in this example *Tutor.BOA*, *Tutor.BOT*, *Tutor.DRL* and *Tutor.TOP*).
4. Click on [Open].
- The data are automatically assigned to the correct layers and the user guidance step *Import* is displayed:

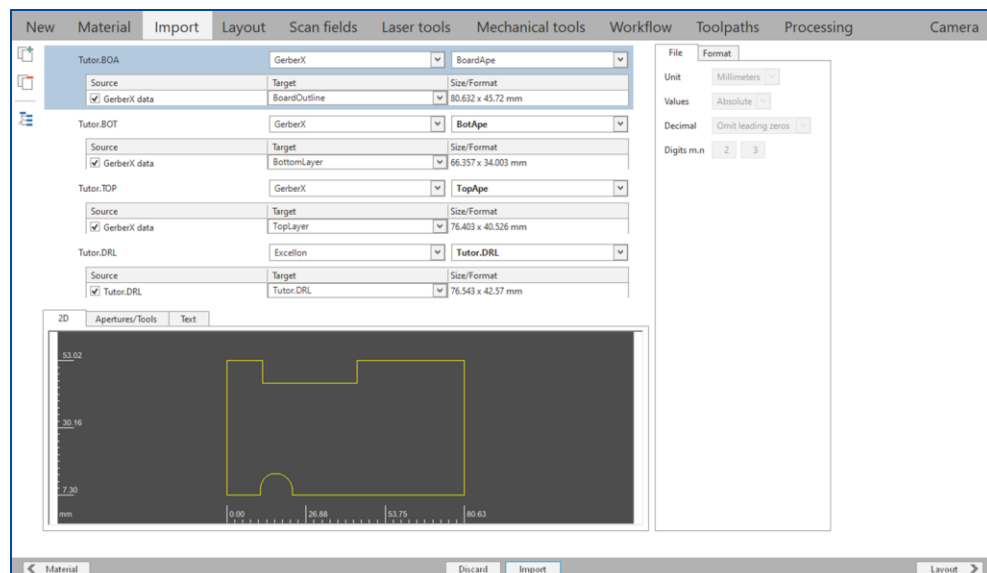


Fig. 205: User guidance step Import

5. Assign the holes to the layer *DrillUnplated*.

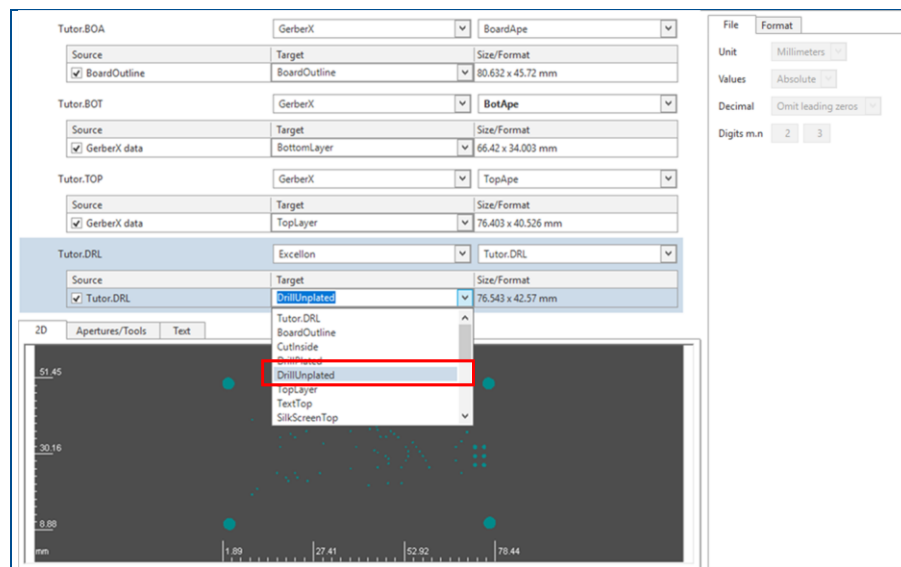


Fig. 206: Assigning holes to layer

6. Check in the preview of the layout whether the graphics and size (in the *Size/Format* column) are correct. If not, you can adjust the settings in the sub-tab *File*.
 7. Click on [Import].
- ☐ The user guidance step *Layout* is displayed:

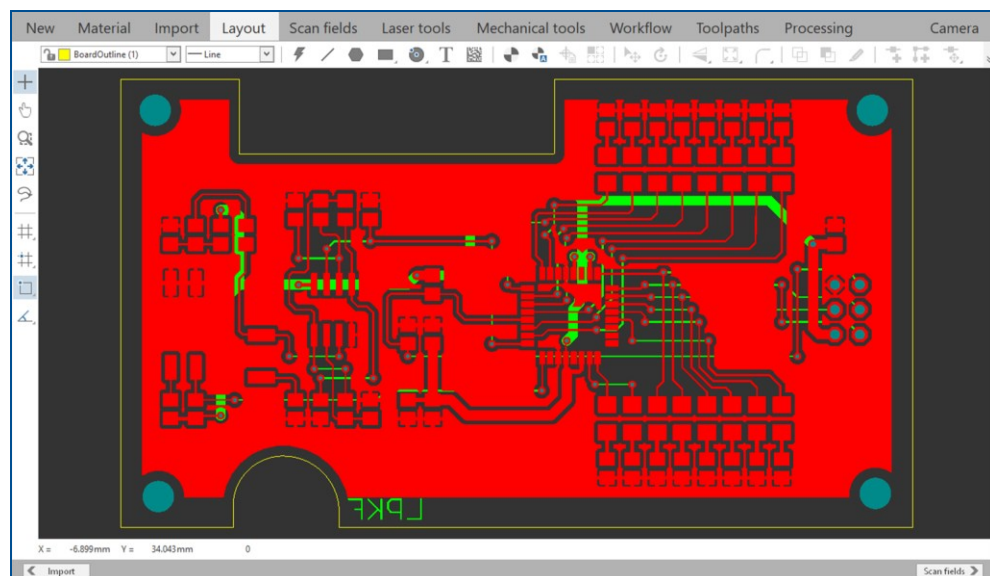



Fig. 207: User guidance step *Layout*

- ☒ The data have been imported.



Assigning the layers manually

If the data have not been assigned to the correct layers automatically, they can be assigned manually. In the drop-down list in the column *Target*, select which layer is to be assigned to the imported source data.

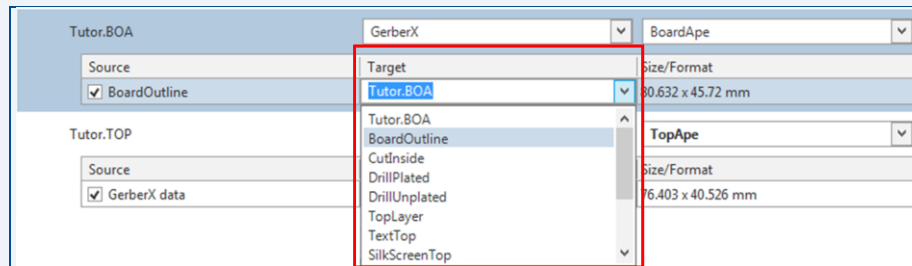

Multiplying the layout (optional)

If desired, you can multiply the layout. In this example multiplies of the layout are not necessary.



The functions *Step and repeat* and *Create instance type* are only available in the license level Advanced of CircuitPro RP. If you have any questions contact the LPKF sales department.

1. In the user guidance step *Layout* select the entire layout by pressing **Ctrl** + **A**.
2. Right-click on the layout.
3. The following context menu is displayed:

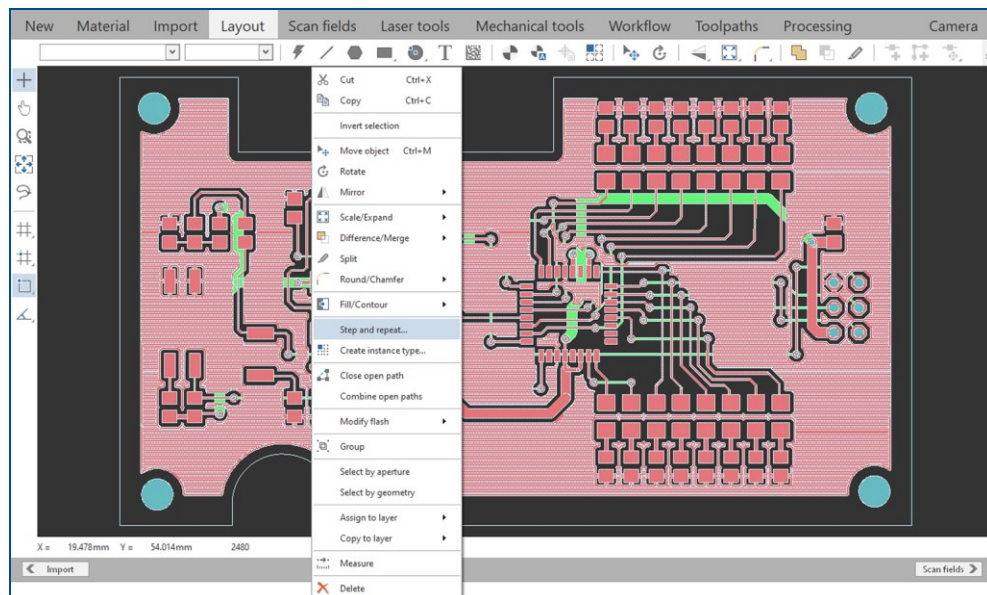


Fig. 208: Context menu *Step and repeat*

3. Click on *Step and repeat...*

- The following dialog is displayed:

Fig. 209: Dialog *Step and repeat*

4. Enter the desired number of repetitions along each axis in the fields *Count*.
For this example, four multiples of the layout have been made. Enter **2** counts for the x axis and **2** counts for the y axis.



Some space for cutout is required between the copies, so the *Gap distance* has to be specified for the x and y direction.

5. Enter **2 mm** in the fields *Gap distance*.

- After entering all the values, the dialog is displayed as follows:

Fig. 210: Dialog *Step and repeat* after entering values

6. Click on [OK].
□ The multiplied layouts are created.

7. In order to zoom out and get an overview of the multiplied layouts, perform one of the following steps:
 - Scroll the mouse wheel.
 - Press the `Home` key.
 - Click on .
 8. Press `Esc` or click anywhere on the black background to deselect the highlighted layout.
- ☐ The user guidance step *Layout* changes as follows:

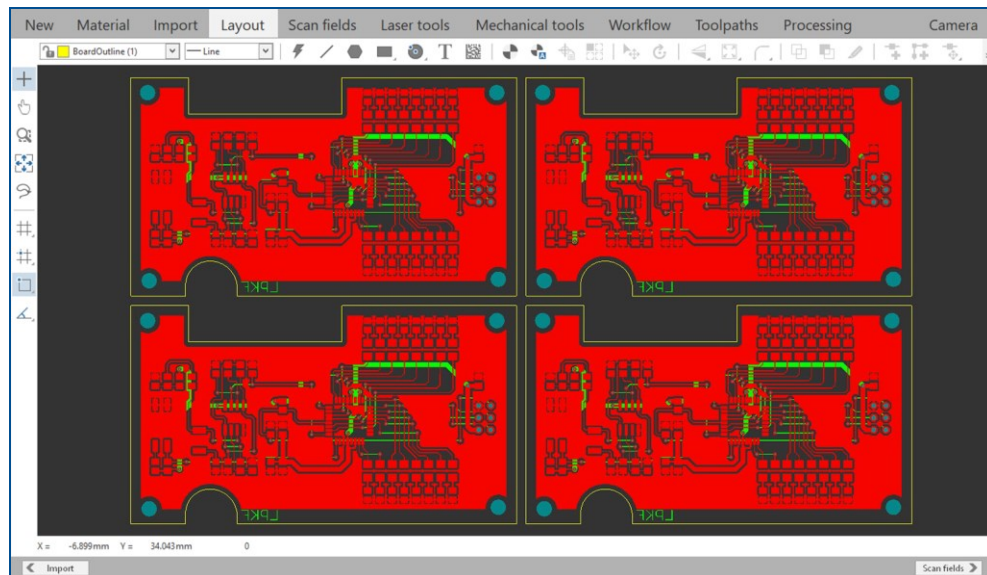


Fig. 211: Multiplied layout

- ☒ The layout has been multiplied.



Creating an instance type


As an alternative to multiplying the layout data, you can use instances. The advantages are:

- Less memory is needed.
- The calculation of the toolpaths is speeded up.

You can create an instance type by performing the following steps:


1. Select the entire layout by pressing **Ctrl** + **A**.
2. Click on *Insert > Create instance type* or on .

☐ The following dialog is displayed:

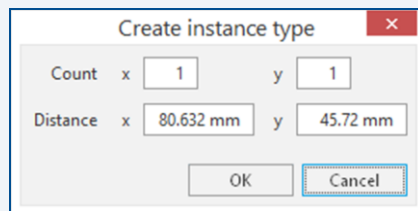

3. Enter the desired number of instances in the input fields *Count*.
For this example, enter **2** counts for the x axis and **2** counts for the y axis.
4. Increase the entered values in the input fields *Distance* by **2** mm.
5. Click on [OK].

☐ The instance type is created:

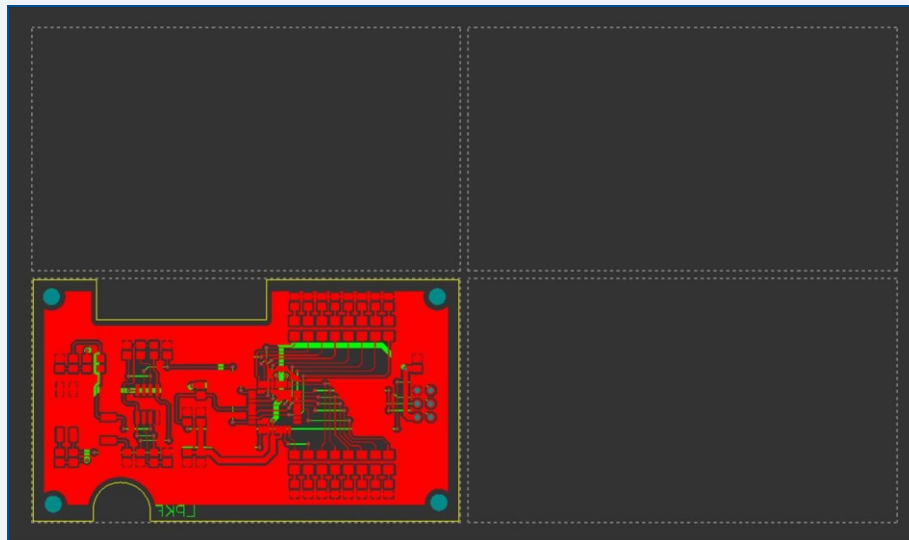

■ Creating fiducials



The function *Automatic fiducial creation* is only available in the license level Advanced of CircuitPro RP. If you have any questions contact the LPKF sales department.

1. In the user guidance step *Layout* click on *Insert > Automatic fiducial creation* or click on .

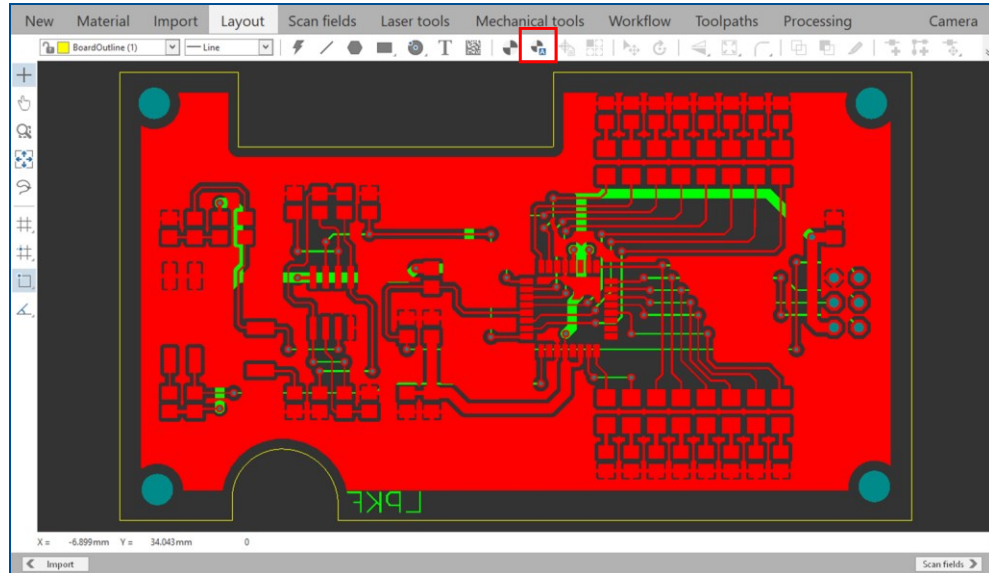


Fig. 212: Create fiducials automatically

- The following dialog is displayed:

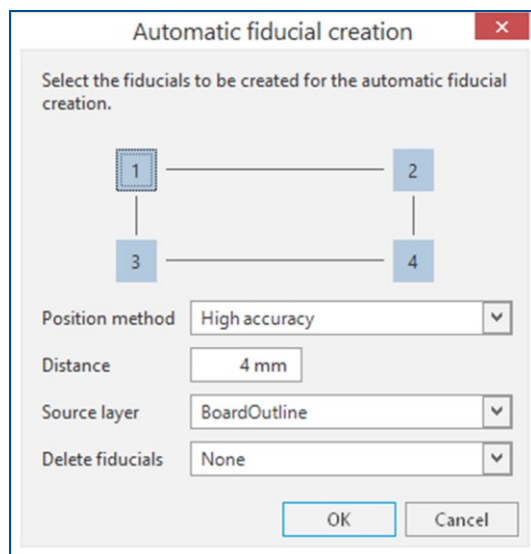


Fig. 213: Dialog *Automatic fiducial creation*



For optimum alignment results it is recommended to create four fiducials and to place them outside the outer contour.

Three fiducials help you to align the base material correctly.

At least two fiducials are required for correct operation of the process; arrange them diagonally.

2. Adapt the settings for the fiducials.
In this example four fiducials with a distance of 4 mm from the board outline are created.
3. Click on [OK].

- ☐ The fiducials are automatically added to the layout:

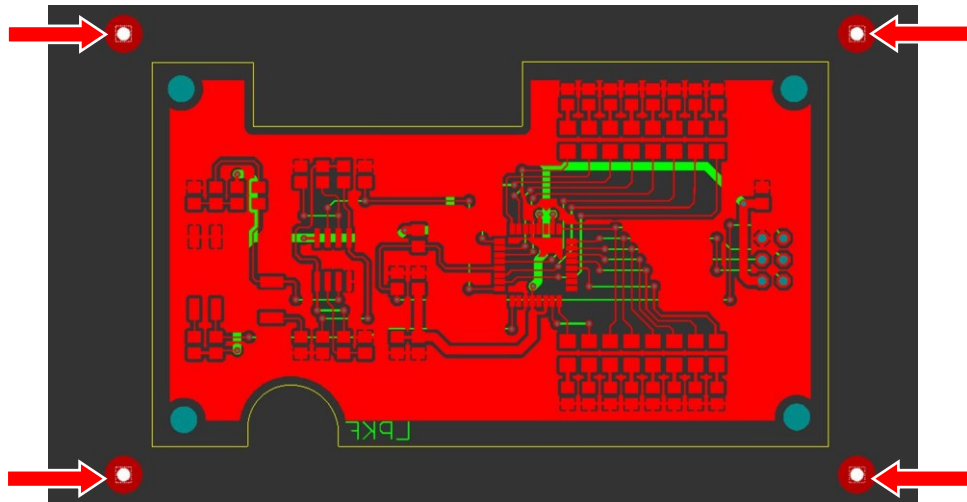


Fig. 214: Fiducials created

- ☒ The fiducials have been created.




Creating fiducials manually

You can add fiducials to the layout manually by performing the following steps:

1. Click on *Insert > Fiducial* or click on .

- ☐ The input fields for *Specify center point* are displayed:

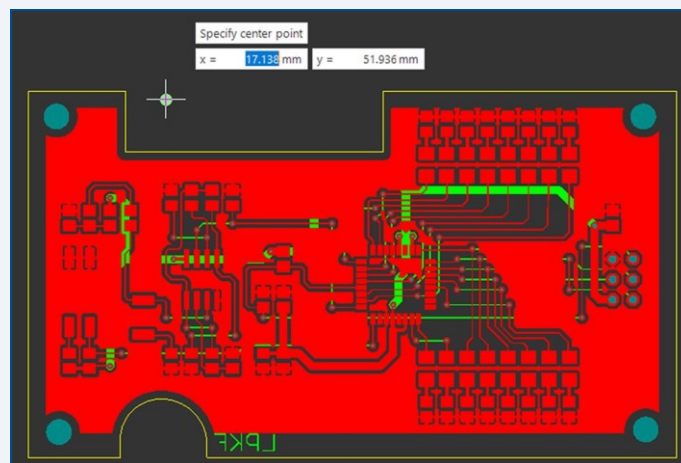

2. To insert the fiducial, perform one of the following steps:
 - Click on a desired point in the layout.
 - Enter the values for x and y in the input fields.
3. Repeat step 2 for all other fiducials.
4. Press **[Esc]** to close the function.

■ Computing toolpaths and scan fields automatically

1. Switch to the user guidance step *Scan fields*.
2. Click on [Compute scan fields] or on .

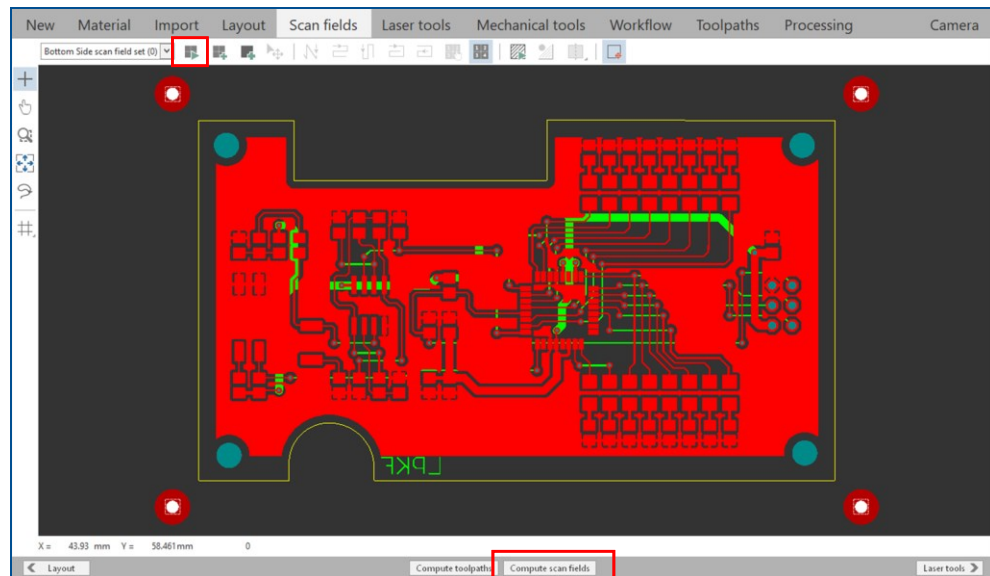


Fig. 215: Compute scan fields

- The following dialog is displayed:

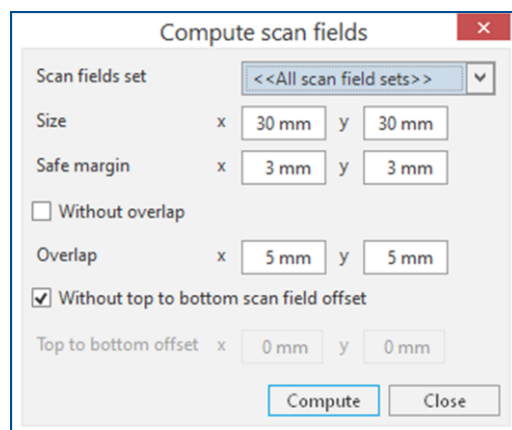


Fig. 216: Dialog *Compute scan fields*

3. Adapt the settings for the scan fields, if necessary. In this example, the default settings are used.
4. Click on [Compute].

- The scan fields are computed automatically.

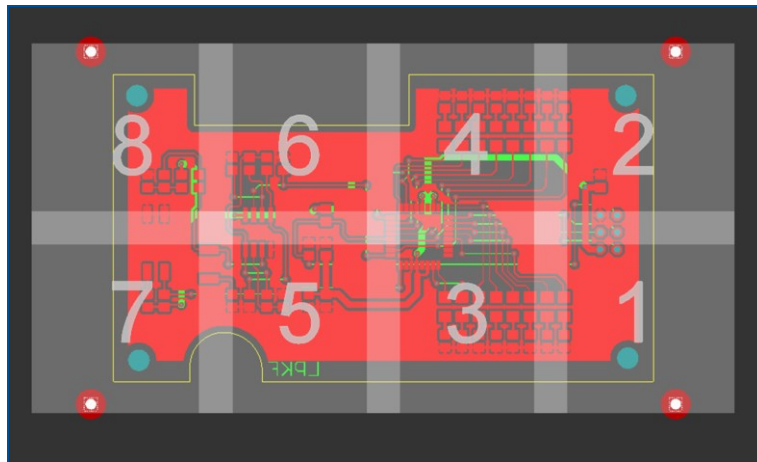


Fig. 217: Scan fields computed

5. Click on [Compute toolpaths] or on .

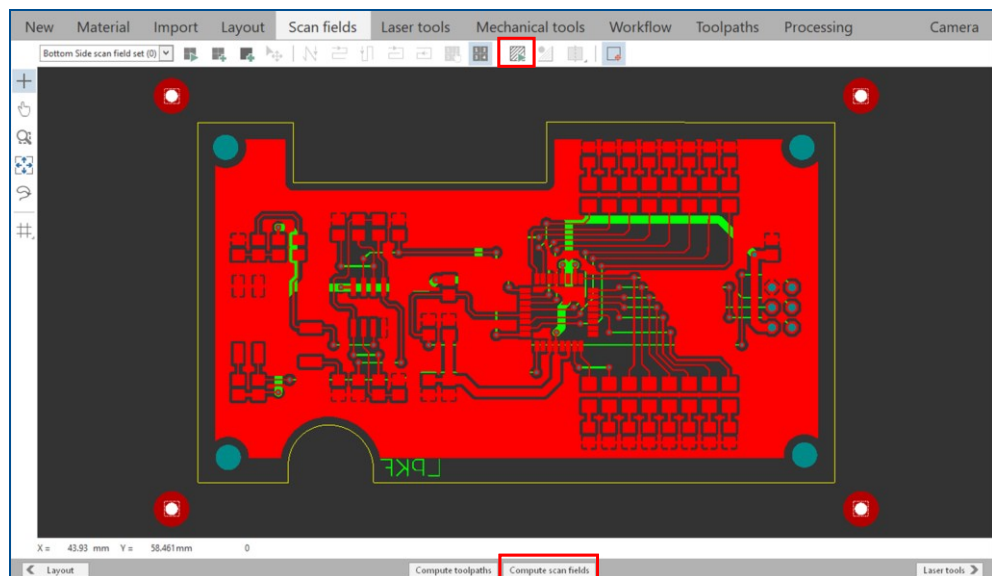


Fig. 218: Compute toolpaths

- The following message is displayed:

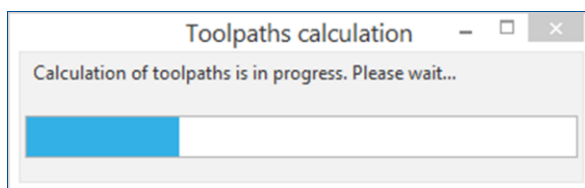


Fig. 219: Message *Toolpaths calculation*

- ☐ The toolpaths are computed automatically with default settings.
The following message is displayed:

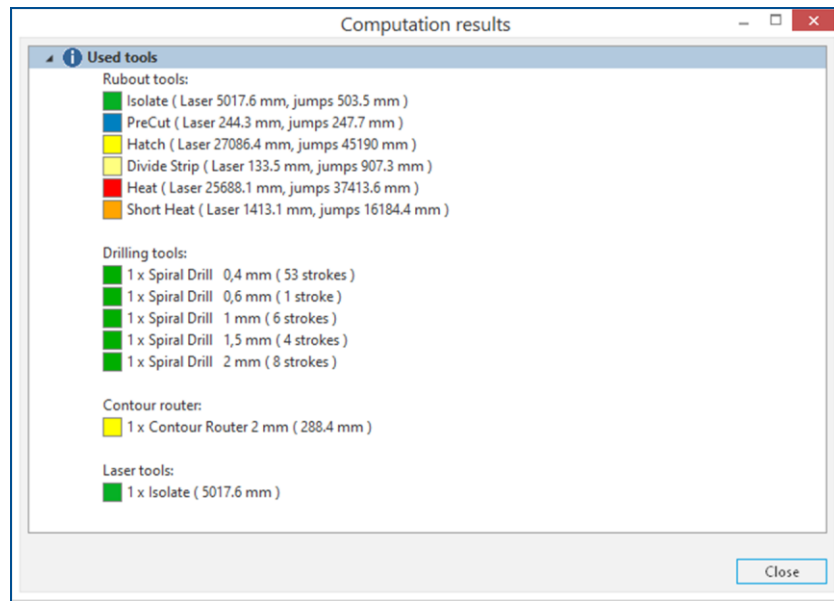


Fig. 220: Message **Computation results**

6. Check the computation results for any possible warnings or errors and make corrections, if required.
 7. Click on [Close].
- ☒ The toolpaths and scan fields have been computed.

■ Computing scan fields manually (optional)

1. Switch to the user guidance step *Scan fields*.
2. Click on [Compute scan fields] or on .
- ☐ The dialog *Compute scan fields* is displayed.
3. Select *Bottom Side scan field set* from the drop-down list.

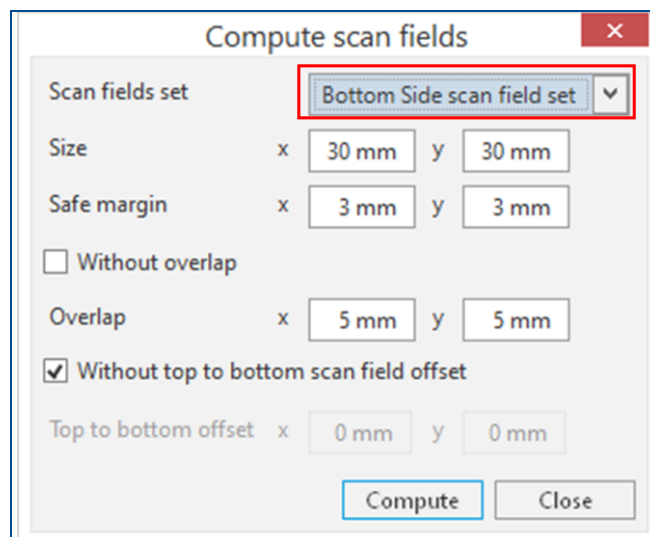


Fig. 221: **Bottom Side scan field set** selected



Alternatively, in the pane *Workflow setup*, right-click in the group *Scan fields* on *Bottom Side scan field set* and click on the context menu item *Compute*.

4. Adapt the settings, if necessary.
5. Click on [Compute].
- ☐ The scan fields for the *Bottom Side* are computed.

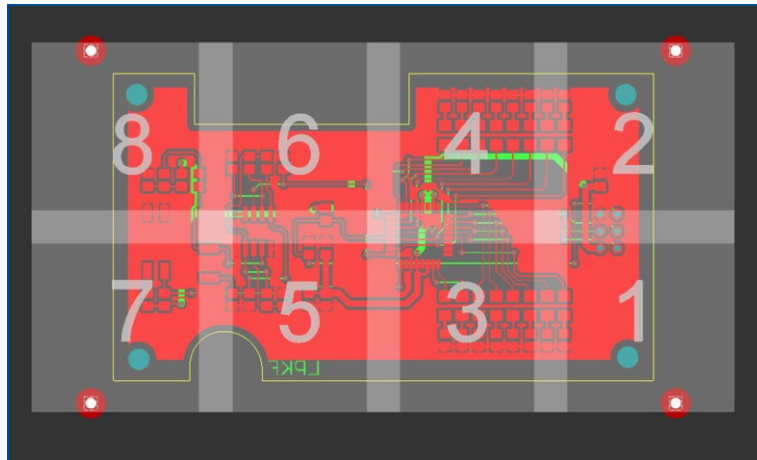


Fig. 222: Scan fields *Bottom Side*

6. Repeat the steps 2 to 5 for the *Top Side* scan field set.
- ☐ The scan fields for the *Top Side* are computed.

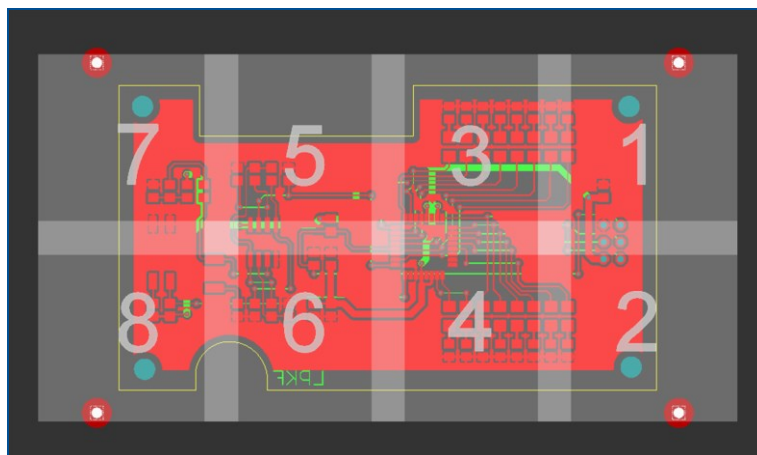


Fig. 223: Scan fields *Top Side*

7. Repeat the steps 2 to 5 for the *Fiducials* scan field set.
- ☐ The scan fields for the *Fiducials* are computed.

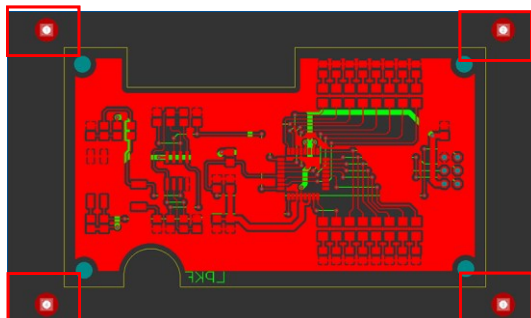


Fig. 224: Scan fields *Fiducials*

- ☒ The scan fields have been computed.

■ Configuring toolpaths manually (optional)

1. Switch to the user guidance step *Workflow*.

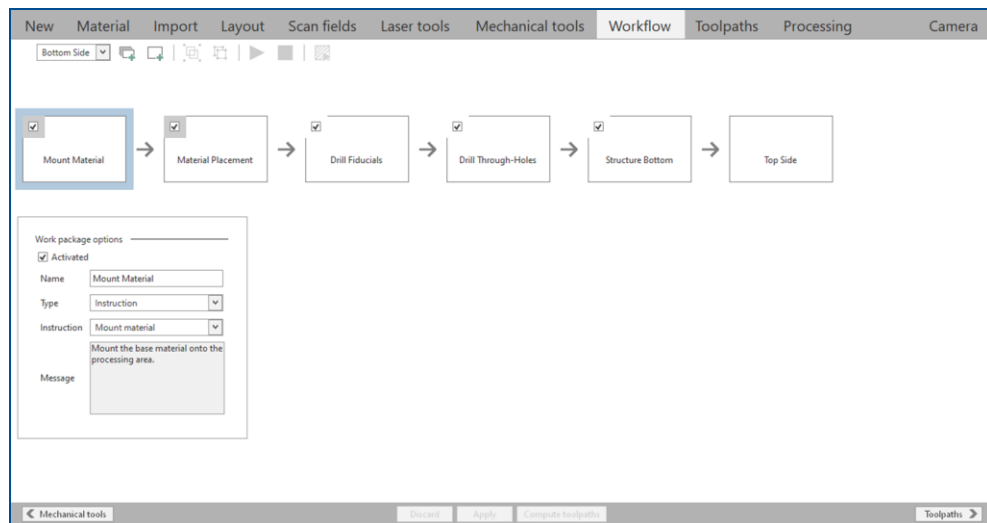


Fig. 225: User guidance step *Workflow*

2. Select the work package *Drill Fiducials*.

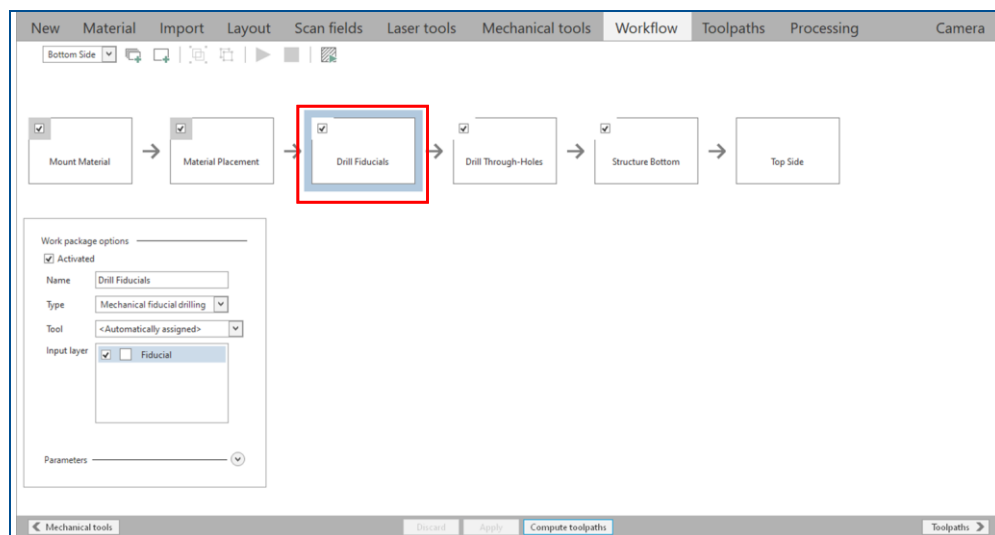


Fig. 226: Work package *Drill Fiducials* selected

3. Adapt the settings, if necessary.
4. Select the work package *Drill Through-Holes*.

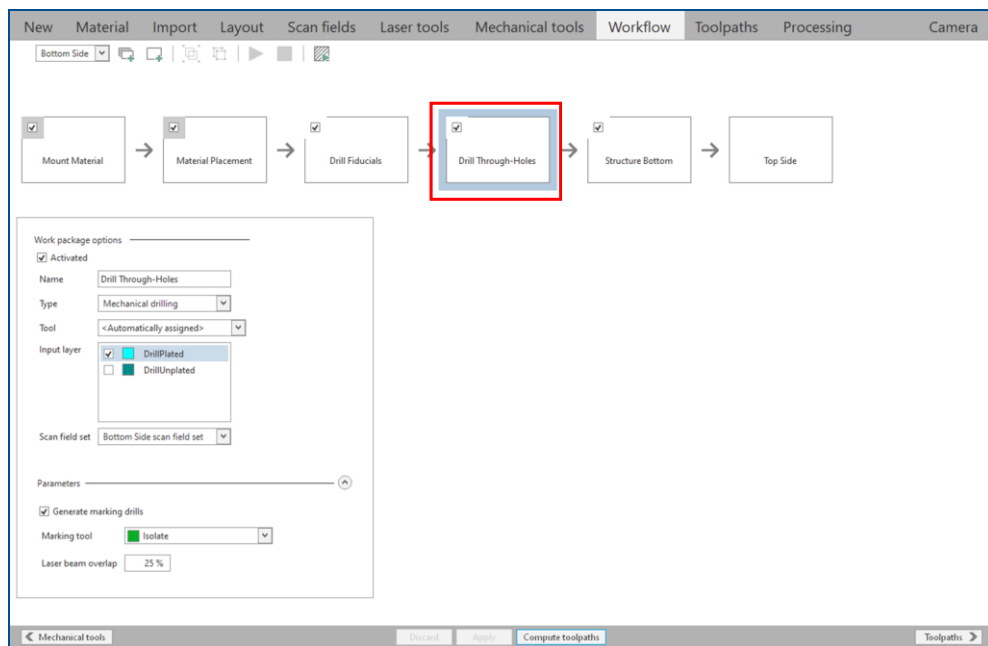


Fig. 227: Work package *Drill Through-Holes* selected

5. Adapt the settings, if necessary.
6. Select the work package *Structure Bottom*.

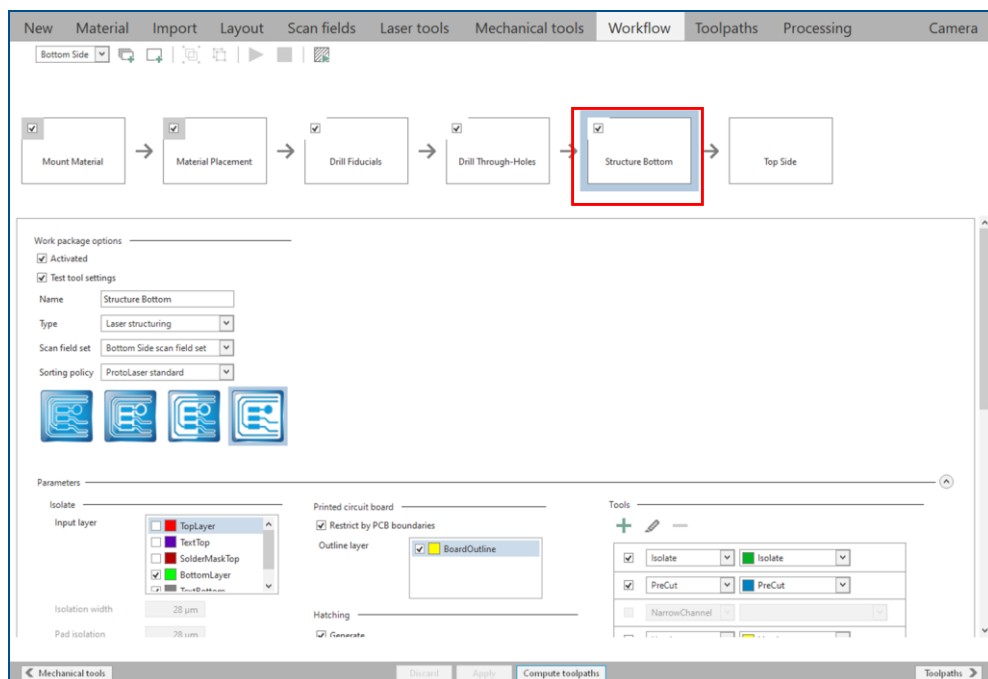


Fig. 228: Work package *Structure Bottom* selected

7. Adapt the settings, if necessary.
8. Select *Top Side* from the drop-down list or select the work package *Top Side*.

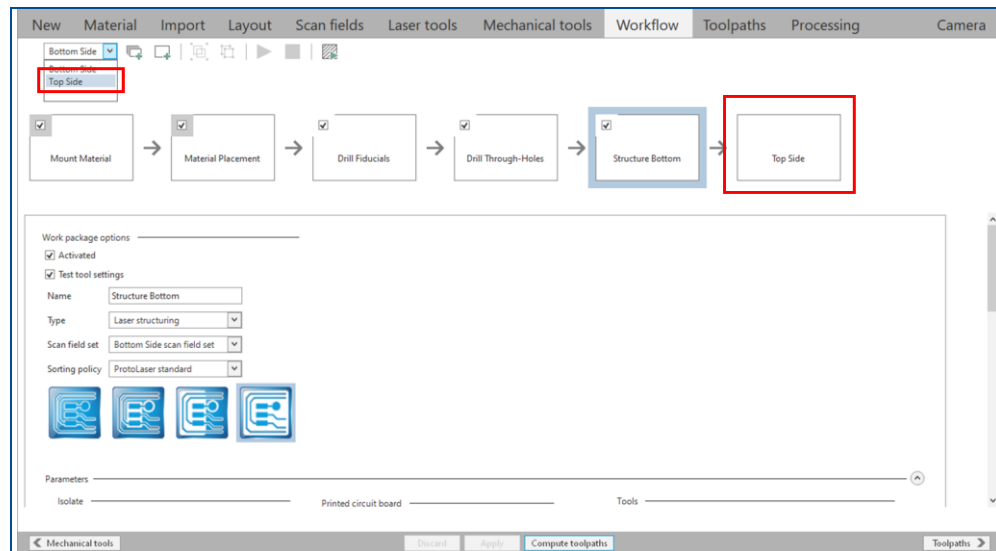


Fig. 229: Selecting Top Side

- The user guidance step *Workflow* changes as follows:

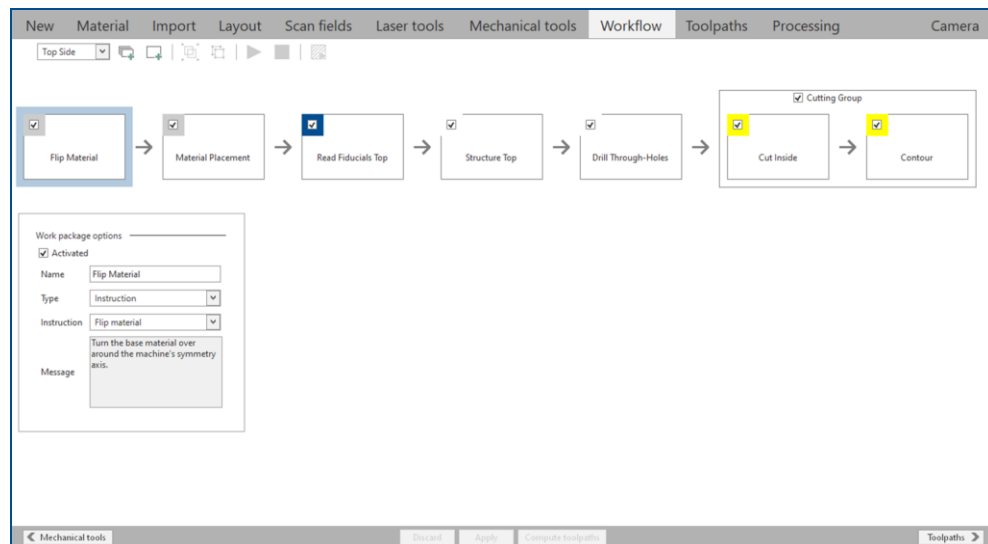


Fig. 230: User guidance step Workflow | Top Side

9. Select the desired work packages and adapt their settings, if necessary.
10. Click on [Apply].
- The workflow settings are modified.
11. Switch to the user guidance step *Toolpaths*.
12. Click on [Compute toolpaths] or on .
- ☑ The toolpaths have been configured manually.



Computing toolpaths for individual work packages

You can compute the toolpaths for each individual work package. Select the work package, adapt its settings, and click on [Compute toolpaths]. The *Computation results* for the work package are displayed in a dialog.

■ Loading the tool magazine

Before you can start processing, the tool magazine has to be loaded and the tools have to be assigned to the tool holder positions of the tool magazine in the system software.

1. Switch to the user guidance step *Processing*.

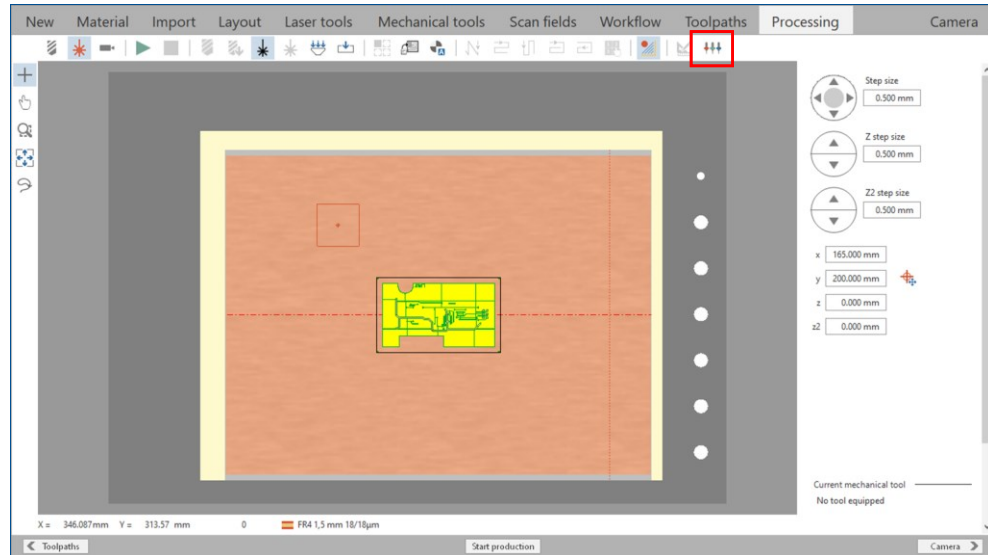


Fig. 231: User guidance step *Processing*

2. Click on

□ The following dialog is displayed:

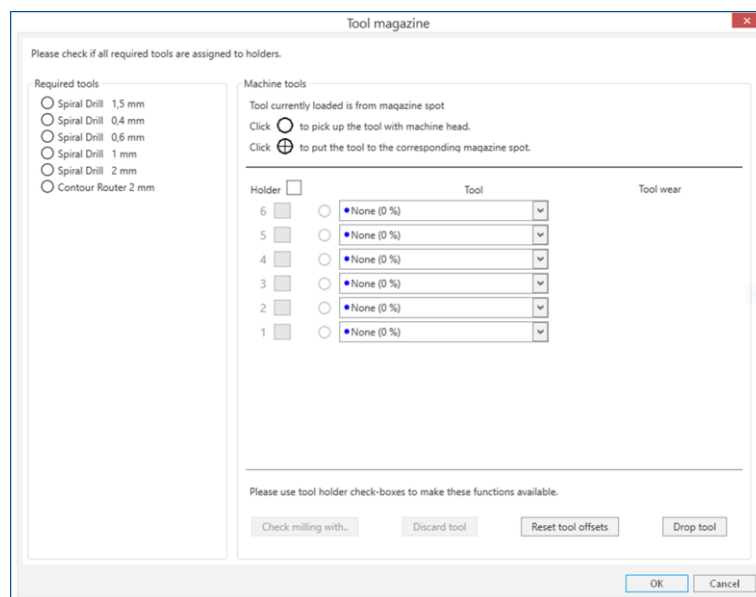


Fig. 232: Dialog *Tool magazine*

The tools required for circuit board production are displayed. Tools that are missing in the tool magazine are marked with a black circle (○).

3. Assign the required tools to the tool holder positions:

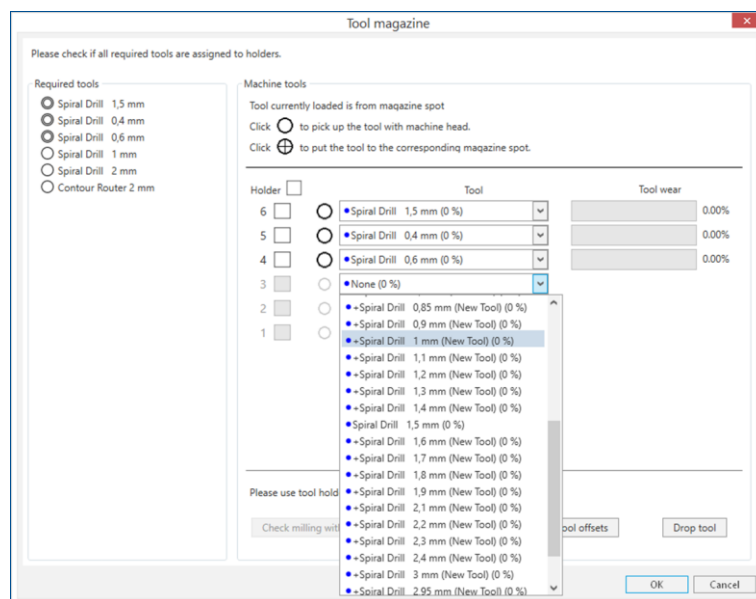


Fig. 233: Assigning tools



There are six tool holder positions. In some cases there are more required tools than tool holder positions. Assign the **first six required tools**, since these are the first to be used during processing. The system software will prompt you to assign the remaining required tools later during the process.

□ Once all tools have been assigned successfully the view changes as follows:

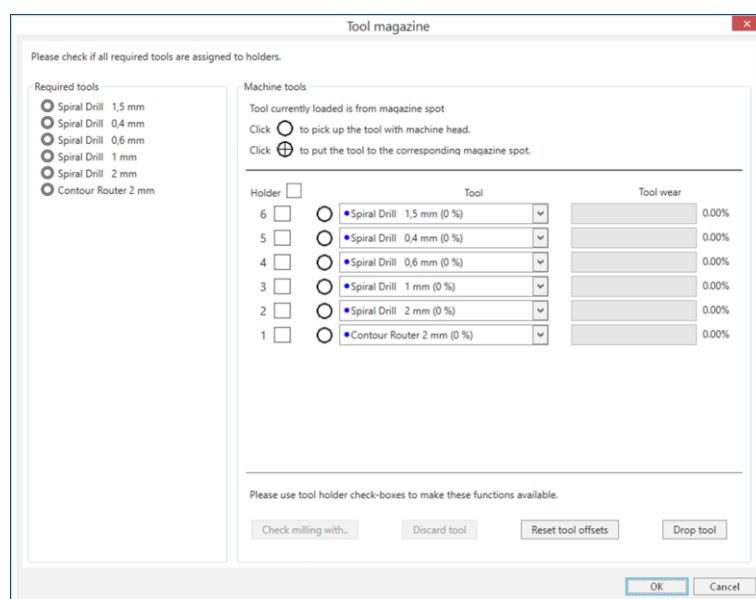


Fig. 234: All tools assigned

4. Open the system cover.
5. Insert the tools into the tool holders of the tool magazine.



Ensure that the tools are inserted into the correct tool holder positions that you have already assigned in the dialog *Tool magazine*!

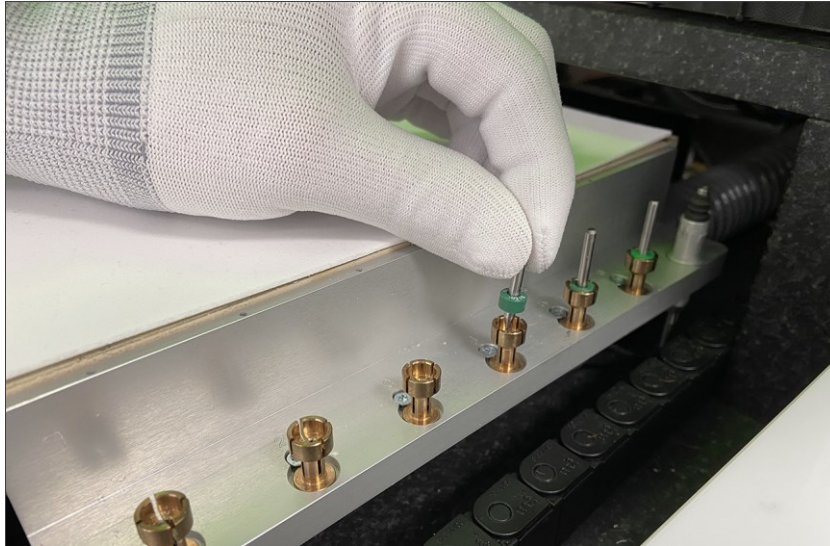


Fig. 235: Inserting tools

6. Click on [OK].
- ☐ The dialog is closed. The tools are in their holder positions.



Fig. 236: Loaded tool magazine (example)

- ☒ The tool magazine has been loaded.

■ Processing the PCB



Clean the material surface with LPKF Cleaner if a discoloration (oxide layer) is discernible. Thus, a surface is achieved that always has the same characteristics.

1. In the user guidance step *Processing* click on or click on [Start production].

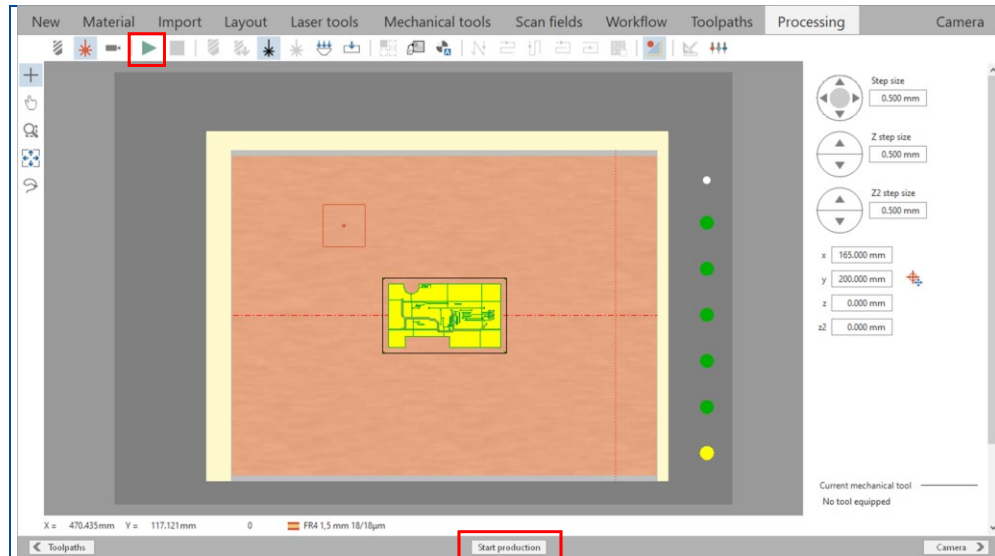


Fig. 237: User guidance step *Processing*

- The following message is displayed:

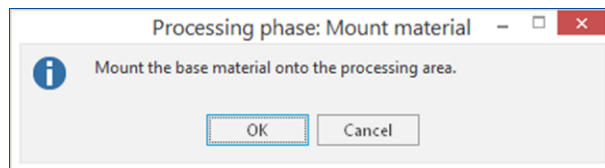


Fig. 238: Dialog *Processing phase: Mount material*

2. Open the cover.
 3. Place the base material onto the processing table.
 4. Click on .
- The base material is fastened onto the processing table by vacuum.



If the base material is bent too much and the vacuum does not allow to fasten it correctly, fasten it with adhesive tape.

5. Close the cover.
6. Click on [OK].

- The following dialog is displayed:

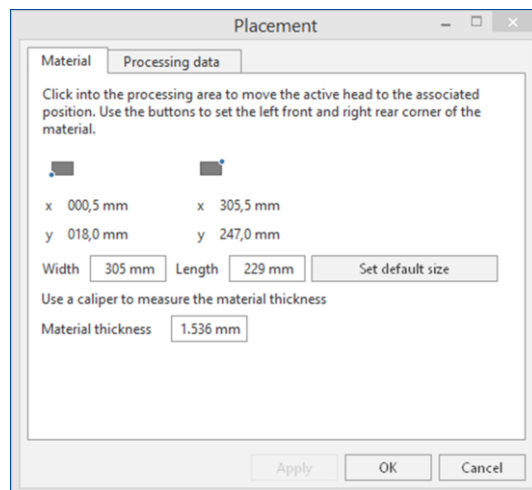


Fig. 239: Dialog *Placement*

7. Adapt the material thickness in the input field *Material thickness*, if necessary.
8. Move the dialog *Placement* to get a better overview.
9. Switch to the view *Camera*.
10. Move the processing table using the arrow buttons or double-click in the camera image until the left front corner of the material is displayed:

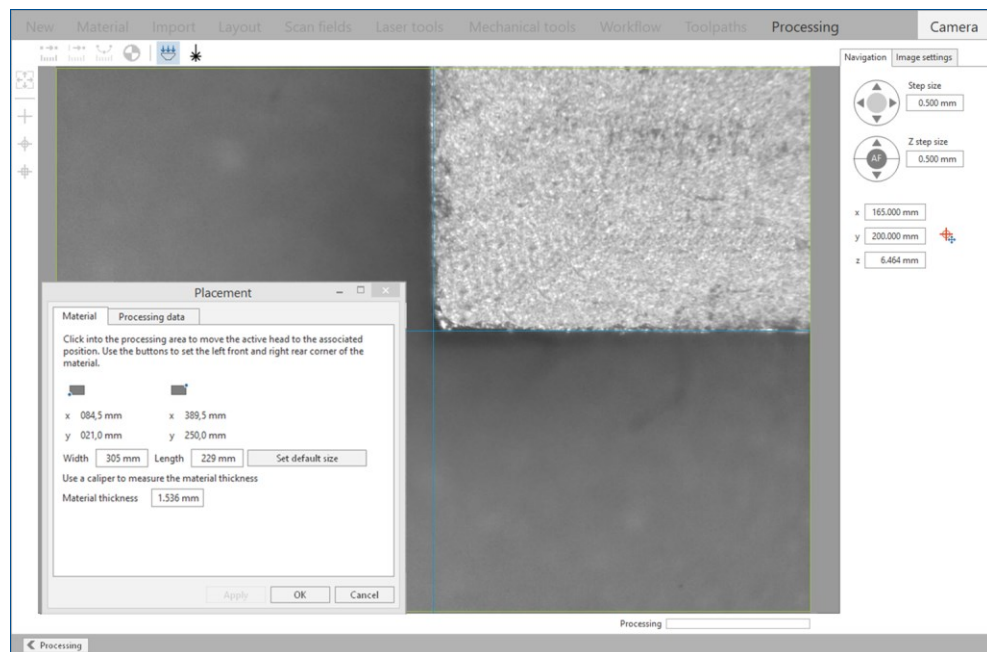


Fig. 240: Left front corner of the material in the view *Camera*

11. In the dialog *Placement* click on  to confirm the position.
 12. Move the processing table using the arrow buttons or double-click in the camera image until the right rear corner of the material is displayed in the view *Camera*.
 13. In the dialog *Placement* click on  to confirm the position.
- The position of the base material on the processing table is determined.

14. Click on the tab *Processing data*.

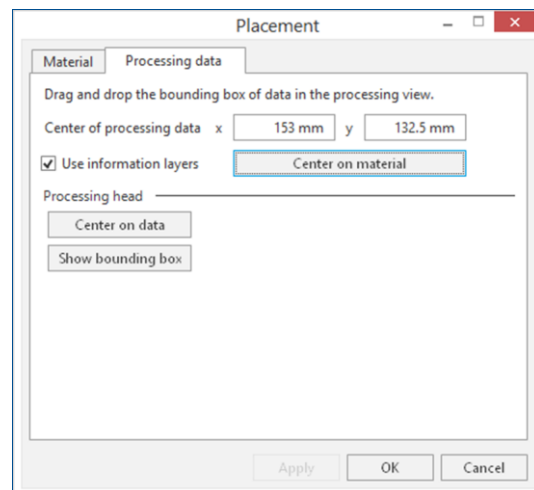


Fig. 241: Dialog *Placement* | *Processing data*

15. Switch to the user guidance step *Processing*.

16. Place the processing data.

The processing data can be moved using drag & drop or by entering the values in the fields x and y. Click on [Center on material] to place the processing data on the center of the base material.

17. Click on [OK].

☐ The following message is displayed:

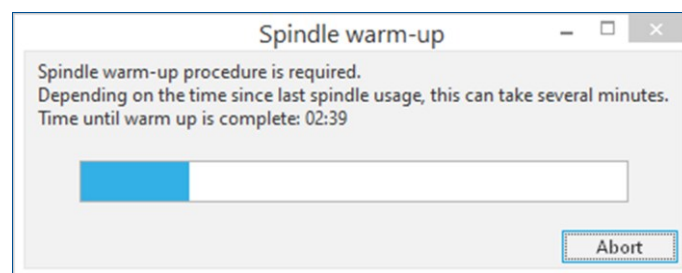


Fig. 242: Message *Spindle warm-up*

After warm-up, the fiducials and the through-holes are drilled and the following dialog is displayed:

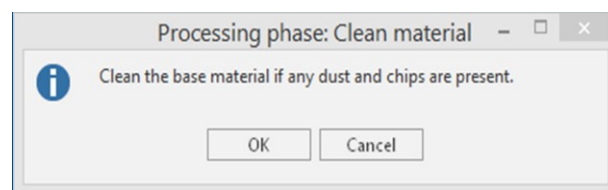


Fig. 243: Dialog *Processing phase: Clean material*

18. Open the cover.

19. Vacuum the dust and drilling chips off the base material.

20. Close the cover.

21. Click on [OK].

- The following dialog is displayed:

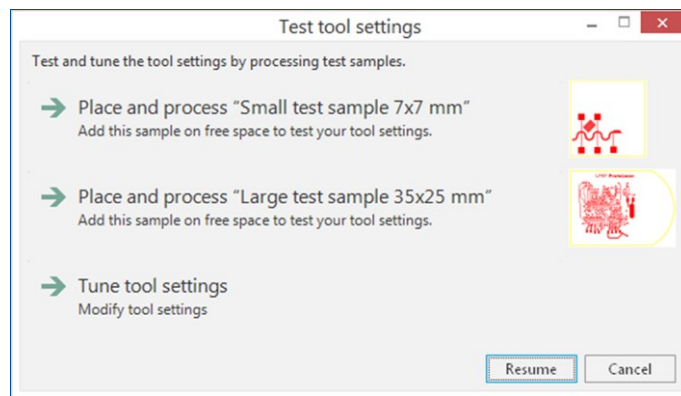


Fig. 244: Dialog *Test tool settings*



In this example, testing and setting the tools is to be skipped.

22. Click on [Resume].

- The Bottom side (*BottomLayer*) is structured and the following message is displayed:

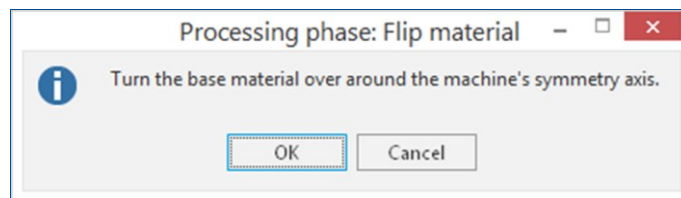


Fig. 245: Message *Processing phase: Flip material*

CAUTION! Health hazard by contact with dusts on laser-structured material!

Structuring with a laser can produce fine dusts that can deposit on the material. These dusts can cause sensitization and skin irritation on contact.

- Always wear chemical-resistant gloves when handling laser-structured material.

23. Open the cover.

24. Turn the base material over around the symmetry axis of the system.

25. Close the cover.

26. Click on [OK].

- The dialog *Placement* is displayed.

27. Place the processing data. The location of the layout **must match** the location of the PCB and fiducials on the processing table.

28. Click on [OK].

- The camera moves to the position of the first fiducial and determines its exact position. The recognized fiducial and the following dialog are displayed:

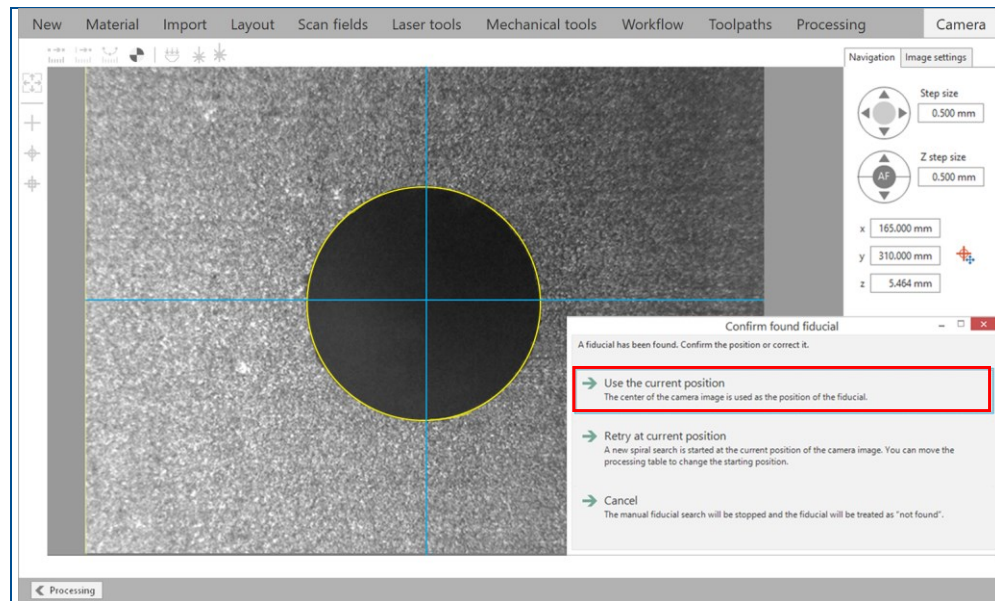


Fig. 246: Recognized fiducial



If the fiducial is not displayed in the view *Camera*, a spiral search is performed to locate the fiducial.

29. Click on *Use the current position*.

- The position of the fiducial has been confirmed. The camera proceeds to read the other fiducials. The fiducial recognition is finished after all fiducial positions have been confirmed.

The dialog *Test tool settings* is displayed.

30. Click on [Resume].

- The Top side (*TopLayer*) is structured and the following message is displayed:

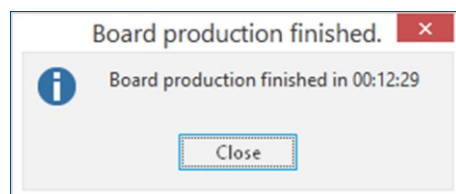


Fig. 247: Message Board production finished

31. Click on [Close].

32. Open the cover.

33. Remove the PCB from the system.

- ☒ The PCB has been processed.

■ Stopping processing (optional)

- ▶ Click on *Processing* > *Stop processing* or click in the user guidance step *Processing* on .

- ☒ Processing has been stopped.

■ Switching off the system



Ensure that a tool is in the collet or a tool is in the tool magazine before switching off the system.

1. Click on *File > Exit*.
 - ☐ The processing head moves to a safe position. If no tool is in the collet, a tool is picked up from the tool magazine.
The system is disconnected and the system software is closed.
2. Perform one of the following steps:
 - In the Windows user interface, click on *Start > Shut down*.
 - Press the *on/off button* at the system front briefly.
- ☐ The operating system is shut down.
- ☒ The system has been switched off.

5 Appendix

This chapter contains navigation elements of the document.

5.1 List of figures

Fig. 1:	Message <i>Operation not allowed in this license level</i>	9
Fig. 2:	User interface	10
Fig. 3:	Menu bar and toolbar	11
Fig. 4:	Pane <i>Workflow setup</i>	12
Fig. 5:	Pane <i>Workflow setup</i> <i>Material composition</i>	13
Fig. 6:	Pane <i>Workflow setup</i> <i>Layout</i>	14
Fig. 7:	Pane <i>Workflow setup</i> <i>Scan fields</i>	17
Fig. 8:	Pane <i>Workflow setup</i> <i>Tools</i>	18
Fig. 9:	Pane <i>Workflow setup</i> <i>Workflow</i>	19
Fig. 10:	Pane <i>Workflow setup</i> <i>Toolpaths</i>	20
Fig. 11:	Pane <i>Workflow setup</i> <i>Processing</i>	20
Fig. 12:	Select objects	22
Fig. 13:	Objects selected (hatched white)	22
Fig. 14:	Pan	23
Fig. 15:	Zoom area	23
Fig. 16:	Area zoomed in	23
Fig. 17:	Fit all	24
Fig. 18:	Polygonal selection.....	24
Fig. 19:	Polygons selected	24
Fig. 20:	Hide grid	25
Fig. 21:	Show grid.....	25
Fig. 22:	Cursor (white crosshairs) on grid point.....	25
Fig. 23:	Pane <i>Navigation</i>	26
Fig. 24:	Pane <i>Properties</i>	26
Fig. 25:	Pane <i>Fault monitor</i>	27
Fig. 26:	Pane <i>Messages</i>	28
Fig. 27:	User guidance steps and <i>Camera view</i>	29
Fig. 28:	User guidance step <i>New</i>	30
Fig. 29:	User guidance step <i>Material</i>	31
Fig. 30:	User guidance step <i>Import</i>	33
Fig. 31:	Import file	33
Fig. 32:	Tab <i>2D</i>	34
Fig. 33:	Tab <i>Apertures/Tools</i>	35
Fig. 34:	Tab <i>Text</i>	36
Fig. 35:	Sub tab <i>File</i>	36
Fig. 36:	Sub tab <i>Format</i>	37
Fig. 37:	Sub tab <i>Attributes</i>	38
Fig. 38:	User guidance step <i>Import</i>	39
Fig. 39:	File import.....	39
Fig. 40:	User guidance step <i>Layout</i>	40
Fig. 41:	Creating a path	43
Fig. 42:	Create polygon	43
Fig. 43:	Create rectangle	44
Fig. 44:	Create rectangle path	44
Fig. 45:	Create circle by diameter	45
Fig. 46:	Create circle by points	45
Fig. 47:	Create circle line by diameter	46
Fig. 48:	Create circle path by points	46
Fig. 49:	Create Data Matrix code	47
Fig. 50:	Settings for Data Matrix code with dynamic contents	47
Fig. 51:	Create text	49

Fig. 52:	Toolbar <i>Create text object</i>	49
Fig. 53:	Settings for text objects with dynamic contents	50
Fig. 54:	Dialog <i>Automatic fiducial creation</i>	52
Fig. 55:	Instance type (with primary instance and three instances)	53
Fig. 56:	Workflow setup Create instance type	54
Fig. 57:	Rotating an object/a contour	54
Fig. 58:	Move object/contour	55
Fig. 59:	Mirror object horizontally	55
Fig. 60:	Mirror object vertically	56
Fig. 61:	Scaling object	56
Fig. 62:	Expanding an object	57
Fig. 63:	Round angle	57
Fig. 64:	Outer angle	57
Fig. 65:	Inner angle	58
Fig. 66:	Chamfer angle	58
Fig. 67:	Outer angle	58
Fig. 68:	Inner angle	58
Fig. 69:	Merge objects	59
Fig. 70:	Difference	59
Fig. 71:	Splitting an object	60
Fig. 72:	Add point	60
Fig. 73:	Add mirror point	61
Fig. 74:	Move point	61
Fig. 75:	Split path	62
Fig. 76:	Converting object to polygon	63
Fig. 77:	Converting object to closed path	63
Fig. 78:	Group objects	63
Fig. 79:	Processing area	64
Fig. 80:	Step and repeat	65
Fig. 81:	Dialog <i>Step and Repeat</i>	65
Fig. 82:	Selection area	66
Fig. 83:	Selection area highlighted	66
Fig. 84:	Invert selection	66
Fig. 85:	Close open path	67
Fig. 86:	Converting an object into a flash	67
Fig. 87:	View <i>Aperture</i>	68
Fig. 88:	Measure from point to point	68
Fig. 89:	User guidance step <i>Scan fields</i>	69
Fig. 90:	Move object/contour	70
Fig. 91:	Processing area	71
Fig. 92:	Dialog <i>Step and Repeat</i>	72
Fig. 93:	Scan field multiplied with <i>Step and Repeat</i>	72
Fig. 94:	User guidance step <i>Workflow</i>	73
Fig. 95:	Move object/contour	81
Fig. 96:	Processing area	81
Fig. 97:	Dialog <i>Step and Repeat</i>	82
Fig. 98:	Scan field multiplied with <i>Step and Repeat</i>	82
Fig. 99:	User guidance step <i>Tools</i>	83
Fig. 100:	User guidance step <i>Laser tools</i>	87
Fig. 101:	Jump delay too low	90
Fig. 102:	Laser on delay too high	90
Fig. 103:	Laser on delay too low	91
Fig. 104:	Laser off delay too high	91
Fig. 105:	Laser off delay too low	92
Fig. 106:	Polygon delay too high	93
Fig. 107:	Polygon delay too low	93
Fig. 108:	User guidance step <i>Tools</i>	94
Fig. 109:	User guidance step <i>Toolpaths</i>	97

Fig. 110:	Show/Hide jump lines	99
Fig. 111:	Create toolpath	99
Fig. 112:	Move object/contour	100
Fig. 113:	Rotating an object/a contour	100
Fig. 114:	Mirror object horizontally	101
Fig. 115:	Mirror object vertically.....	101
Fig. 116:	Add point	102
Fig. 117:	Add mirror point.....	102
Fig. 118:	Move point.....	103
Fig. 119:	Split path.....	103
Fig. 120:	User guidance step <i>Processing</i>	104
Fig. 121:	Dialog <i>Placement</i>	106
Fig. 122:	Dialog <i>Placement</i> Tab <i>Processing data</i>	107
Fig. 123:	Dialog <i>Automatic fiducial creation</i>	108
Fig. 124:	Dialog <i>Power measurement</i>	109
Fig. 125:	Dialog <i>Tool magazine</i>	110
Fig. 126:	View <i>Camera</i>	111
Fig. 127:	Moving in x and y direction	112
Fig. 128:	Movement in z direction	112
Fig. 129:	Positioning the image center to x, y, and z value	112
Fig. 130:	View <i>Camera</i> Tab <i>Image settings</i>	113
Fig. 131:	Menu <i>File</i>	115
Fig. 132:	Dialog <i>Export</i>	117
Fig. 133:	Tab <i>General</i>	118
Fig. 134:	Tab <i>Page Setup</i>	119
Fig. 135:	Tab <i>Settings</i>	120
Fig. 136:	Tab <i>Printer calibration</i>	121
Fig. 137:	Dialog <i>Print preview</i>	122
Fig. 138:	Help texts in the dialog <i>Options</i>	124
Fig. 139:	Menu <i>Edit</i>	125
Fig. 140:	Menu <i>Insert</i>	127
Fig. 141:	Creating a path	128
Fig. 142:	Create polygon	129
Fig. 143:	Create rectangle	129
Fig. 144:	Create rectangle path.....	130
Fig. 145:	Create circle by diameter	130
Fig. 146:	Create circle by points	131
Fig. 147:	Create circle line by diameter	131
Fig. 148:	Create circle path by points	132
Fig. 149:	Create text	133
Fig. 150:	Toolbar <i>Create text object</i>	133
Fig. 151:	Settings for text objects with dynamic contents	134
Fig. 152:	Create Data Matrix code	135
Fig. 153:	Settings for Data Matrix code with dynamic contents	136
Fig. 154:	Dialog <i>Automatic fiducial creation</i>	138
Fig. 155:	Instance type (with primary instance and three instances)	139
Fig. 156:	Menu <i>Layout</i>	140
Fig. 157:	Move object/contour	142
Fig. 158:	Rotating an object/a contour	142
Fig. 159:	Mirror object horizontally	143
Fig. 160:	Mirror object vertically.....	143
Fig. 161:	Scaling object	144
Fig. 162:	Expanding an object	144
Fig. 163:	Difference	145
Fig. 164:	Merge objects	145
Fig. 165:	Splitting an object	146
Fig. 166:	Round angle	146
Fig. 167:	Outer angle.....	146

Fig. 168: Inner angle.....	146
Fig. 169: Chamfer angle.....	147
Fig. 170: Outer angle.....	147
Fig. 171: Inner angle.....	147
Fig. 172: Setting zero point.....	147
Fig. 173: Converting object to polygon.....	148
Fig. 174: Converting object to closed path.....	148
Fig. 175: Add point.....	149
Fig. 176: Add mirror point.....	149
Fig. 177: Close open path.....	150
Fig. 178: Move point.....	150
Fig. 179: Split path.....	151
Fig. 180: Reduce number of elements.....	151
Fig. 181: Change line width.....	152
Fig. 182: Change arc radius.....	152
Fig. 183: Converting an object into a flash.....	153
Fig. 184: Combining objects to flash.....	153
Fig. 185: Group objects.....	154
Fig. 186: Measure from point to point.....	154
Fig. 187: Dialog <i>Design rule check</i>	155
Fig. 188: Dialog <i>Aperture list library</i>	155
Fig. 189: Menu <i>Toolpaths</i>	156
Fig. 190: Dialog <i>Edit breakout tabs position</i>	156
Fig. 191: Menu <i>Processing</i>	158
Fig. 192: Dialog <i>Placement</i>	159
Fig. 193: Dialog <i>Placement Tab Processing data</i>	160
Fig. 194: Copper thickness.....	161
Fig. 195: Dialog <i>Alignment settings</i>	162
Fig. 196: Dialog Material thickness measurement settings.....	164
Fig. 197: Dialog <i>Power measurement</i>	166
Fig. 198: Dialog <i>Laser diagnostics</i>	167
Fig. 199: Dialog <i>Import/Export calibration settings</i>	168
Fig. 200: Menu <i>Service</i>	169
Fig. 201: Dialog <i>Maintenance schedule</i> (example: ProtoLaser H4).....	171
Fig. 202: Dialog <i>Equipment configuration</i>	172
Fig. 203: User guidance step <i>Material</i>	174
Fig. 204: Dialog <i>Open</i>	176
Fig. 205: User guidance step <i>Import</i>	176
Fig. 206: Assigning holes to layer.....	177
Fig. 207: User guidance step <i>Layout</i>	177
Fig. 208: Context menu <i>Step and repeat</i>	178
Fig. 209: Dialog <i>Step and repeat</i>	179
Fig. 210: Dialog <i>Step and repeat</i> after entering values.....	179
Fig. 211: Multiplied layout.....	180
Fig. 212: Create fiducials automatically.....	182
Fig. 213: Dialog <i>Automatic fiducial creation</i>	182
Fig. 214: Fiducials created.....	183
Fig. 215: Compute scan fields.....	184
Fig. 216: Dialog <i>Compute scan fields</i>	184
Fig. 217: Scan fields computed.....	185
Fig. 218: Compute toolpaths.....	185
Fig. 219: Message <i>Toolpaths calculation</i>	185
Fig. 220: Message <i>Computation results</i>	186
Fig. 221: <i>Bottom Side scan field set</i> selected.....	186
Fig. 222: Scan fields <i>Bottom Side</i>	187
Fig. 223: Scan fields <i>Top Side</i>	187
Fig. 224: Scan fields <i>Fiducials</i>	187
Fig. 225: User guidance step <i>Workflow</i>	188

Fig. 226: Work package <i>Drill Fiducials</i> selected.....	188
Fig. 227: Work package <i>Drill Through-Holes</i> selected	189
Fig. 228: Work package <i>Structure Bottom</i> selected	189
Fig. 229: Selecting <i>Top Side</i>	190
Fig. 230: User guidance step <i>Workflow Top Side</i>	190
Fig. 231: User guidance step <i>Processing</i>	191
Fig. 232: Dialog <i>Tool magazine</i>	191
Fig. 233: Assigning tools	192
Fig. 234: All tools assigned.....	192
Fig. 235: Inserting tools	193
Fig. 236: Loaded tool magazine (example)	193
Fig. 237: User guidance step <i>Processing</i>	194
Fig. 238: Dialog <i>Processing phase: Mount material</i>	194
Fig. 239: Dialog <i>Placement</i>	195
Fig. 240: Left front corner of the material in the view <i>Camera</i>	195
Fig. 241: Dialog <i>Placement Processing data</i>	196
Fig. 242: Message <i>Spindle warm-up</i>	196
Fig. 243: Dialog <i>Processing phase: Clean material</i>	196
Fig. 244: Dialog <i>Test tool settings</i>	197
Fig. 245: Message <i>Processing phase: Flip material</i>	197
Fig. 246: Recognized fiducial	198
Fig. 247: Message <i>Board production finished</i>	198

5.2 List of tables

Table 1: User interface	10
Table 2: Menu bar and toolbar	11
Table 3: Pane <i>Workflow setup</i>	12
Table 4: Pane <i>Workflow setup Layout</i>	14
Table 5: Context menu <i>Layout</i>	15
Table 6: Pane <i>Workflow setup Scan fields</i>	17
Table 7: Context menu <i>Scan fields</i>	17
Table 8: Context menu <i>Workflow</i>	19
Table 9: Context menu <i>Processing</i>	20
Table 10: Toolbar <i>View</i>	21
Table 11: View <i>Camera</i>	21
Table 12: Pane <i>Fault monitor</i>	27
Table 13: Items of pane <i>Fault monitor</i>	27
Table 14: Pane <i>Messages</i>	28
Table 15: User guidance steps	29
Table 16: User guidance step <i>New</i>	31
Table 17: User guidance step <i>Material</i>	32
Table 18: Import formats	32
Table 19: Import file	34
Table 20: Tab <i>Apertures/Tools</i>	35
Table 21: Sub tab <i>File</i>	37
Table 22: Sub tab <i>Format</i>	37
Table 23: Sub tab <i>Attributes</i>	38
Table 24: User guidance step <i>Layout</i>	42
Table 25: Functions for dynamic Data Matrix codes	48
Table 26: Functions <i>Create text object</i>	49
Table 27: Functions for dynamic text objects	51
Table 28: Dialog <i>Automatic fiducial creation</i>	52
Table 29: Settings <i>Step and Repeat</i>	65
Table 30: User guidance step <i>Scan fields</i>	70
Table 31: User guidance step <i>Workflow</i>	74
Table 32: Work package type <i>Instruction</i>	74
Table 33: Work package type <i>Laser drilling</i>	74
Table 34: Work package of the type <i>Read fiducials</i>	75
Table 35: Work package of the type <i>Expose fiducials</i>	75
Table 36: Work package of the type <i>Laser cutting</i>	76
Table 37: Work package of the type <i>Laser structuring</i>	78
Table 38: Work package of the type <i>Mechanical fiducial drilling</i>	78
Table 39: Work package of the type <i>Mechanical Drilling</i>	79
Table 40: Work package of the type <i>Mechanical cutting</i>	79
Table 41: Work package of the type <i>Deburr</i>	80
Table 42: Work package of the type <i>Processing group</i>	80
Table 43: User guidance step <i>Tools</i>	84
Table 44: Tool parameters <i>General</i>	85
Table 45: Tool parameters <i>Advanced</i>	86
Table 46: Symbols/Functions in the user guidance step <i>Laser tools</i>	88
Table 47: Tool parameters <i>General</i>	88
Table 48: Tool parameters <i>Advanced</i>	89
Table 49: Symbols/Functions in the user guidance step <i>Tools</i>	95
Table 50: Tool parameters <i>General</i>	95
Table 51: Tool parameters <i>Advanced</i>	96
Table 52: User guidance step <i>Toolpaths</i>	98
Table 53: User guidance step <i>Processing</i>	105
Table 54: Dialog <i>Placement</i> Tab <i>Material</i>	106
Table 55: Dialog <i>Placement</i> Tab <i>Processing data</i>	107
Table 56: Dialog <i>Automatic fiducial creation</i>	108

Table 57: Dialog <i>Power measurement</i>	109
Table 58: Dialog <i>Tool magazine</i>	110
Table 59: Toolbar view <i>Camera</i>	111
Table 60: Menus	114
Table 61: Menu <i>File</i>	116
Table 62: Dialog <i>Print preview</i>	123
Table 63: Menu <i>Edit</i>	125
Table 64: Menu <i>Insert</i>	128
Table 65: Functions <i>Create text object</i>	133
Table 66: Functions for dynamic text objects	135
Table 67: Functions for dynamic Data Matrix codes	137
Table 68: Dialog <i>Automatic fiducial creation</i>	138
Table 69: Menu <i>Layout</i>	141
Table 70: Menu <i>Toolpaths</i>	156
Table 71: Dialog <i>Edit breakout tabs position</i>	157
Table 72: Menu <i>Processing</i>	158
Table 73: Dialog <i>Placement</i> Tab <i>Material</i>	160
Table 74: Dialog <i>Placement</i> Tab <i>Processing data</i>	161
Table 75: Dialog <i>Alignment settings</i>	163
Table 76: Functions in the dialog <i>Material thickness measurement settings</i>	165
Table 77: Dialog <i>Power measurement</i>	166
Table 78: Buttons and functions in the dialog <i>Laser diagnostics</i>	168
Table 79: Menu <i>Service</i>	169
Table 80: Dialog <i>Maintenance schedule</i>	171
Table 81: Dialog <i>Equipment configuration</i> Tab <i>Systems</i>	172
Table 82: Dialog <i>Equipment configuration</i> Tab <i>Mechanical tools</i>	172

